


JVC

SERVICE MANUAL

COMPACT VHS CAMCORDER

GR-FXM42EK, GR-FXM42EX, GR-FXM42EZ

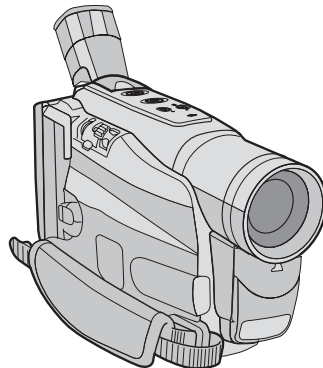

VHS
PAL
Compact VHS

GR-FXM42EKM, GR-FXM42EXM,
GR-FXM42EZM[M6A622]

For disassembling and assembling of MECHANISM ASSEMBLY, refer to the SERVICE MANUAL No.86700 (MECHANISM ASSEMBLY).
Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

TABLE OF CONTENTS

1	PRECAUTION.....	1-3
2	SPECIFIC SERVICE INSTRUCTIONS.....	1-5
3	DISASSEMBLY	1-6
4	ADJUSTMENT	1-17
5	TROUBLESHOOTING	1-22

SPECIFICATION

General	Format		VHS PAL standard
	Power source		DC 11 V (Using AC Adapter)
			DC 6 V (Using battery pack)
	Power consumption	Viewfinder on	3.7 W
		LCD monitor on	4.3 W
	Signal system		PAL-type
	Video recording system	Luminance	FM recording
		Colour	Converted sub-carrier direct recording Conforms to VHS standard
	Cassette		VHS cassette
	Tape speed	SP	23.39 mm/sec.
		LP	11.70 mm/sec.
	Recording time (max.)	SP	60 minutes
		LP	120 minutes (with EC-60 cassette)
	Operating temperature		0°C to 40°C
	Operating humidity		35% to 80%
	Storage temperature		-20°C to 50°C
	Weight		Approx. 768 g
	Dimensions (W × H × D)		81 mm × 125 mm × 216 mm (with the LCD monitor closed and with the viewfinder fully tilted downward)
	Pickup		1/6" format CCD
	Lens		F1.8 f = 2.2 mm to 55 mm, 25:1 power zoom lens with auto iris and macro control
	Filter diameter		Ø 30.5 mm
	Viewfinder		Electronic viewfinder with 0.24" black/white LCD
	White balance adjustment		Auto/Manual adjustment
	LCD monitor		2.50" diagonally measured LCD panel/TFT active matrix system
	Speaker		Monaural
Connectors	Video		1 V (p-p), 75 Ω unbalanced, analogue output (via Video output connector)
	Audio		300 mV (rms), 1 kΩ, analogue output (via Audio output connector)

■AC Adapter

Power requirement	AC 110 V - 240 V~, 50 Hz/60 Hz
Output	DC 11 V, 1 A

Specifications shown are for SP mode unless otherwise indicated. E & O.E. Design and specifications subject to change without notice.

SECTION 1 PRECAUTION

1.1 SAFTY PRECAUTIONS

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

1.1.1 Precautions during Servicing

- (1) Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.
- (2) Parts identified by the  symbol and shaded () parts are critical for safety. Replace only with specified part numbers.

NOTE :

Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

- (3) Fuse replacement caution notice.
Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.
- (4) Use specified internal wiring. Note especially:
 - Wires covered with PVC tubing
 - Double insulated wires
 - High voltage leads
- (5) Use specified insulating materials for hazardous live parts.
Note especially:
 - Insulation Tape
 - PVC tubing
 - Spacers
 - Insulation sheets for transistors
 - Barrier
- (6) When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.

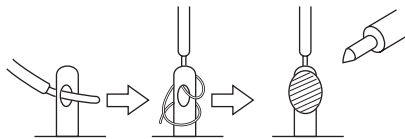


Fig.1-1-1

- (7) Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- (8) Check that replaced wires do not contact sharp edged or pointed parts.
- (9) When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.

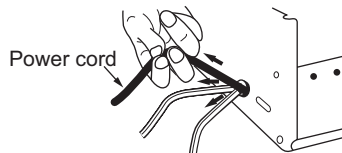


Fig.1-1-2

- (10) Also check areas surrounding repaired locations.
- (11) Products using cathode ray tubes (CRTs) In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray

emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.


- (12) Crimp type wire connector In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

• **Connector part number** :E03830-001

• **Required tool** : Connector crimping tool of the proper type which will not damage insulated parts.

• **Replacement procedure**

- a) Remove the old connector by cutting the wires at a point close to the connector. Important : Do not reuse a connector (discard it).

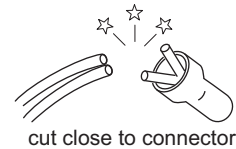

cut close to connector

Fig.1-1-3

- b) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.

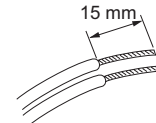


Fig.1-1-4

- c) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

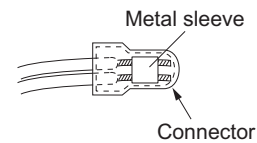


Fig.1-1-5

- d) As shown in Fig.1-1-6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

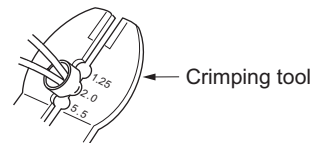


Fig.1-1-6

- e) Check the four points noted in Fig.1-1-7.

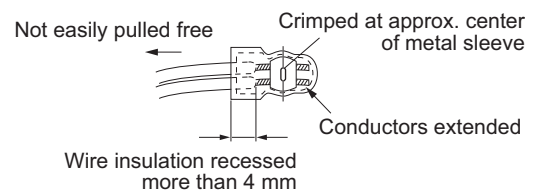


Fig.1-1-7

1.1.2 Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

(1) Insulation resistance test

Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

(2) Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See Fig.1-1-11 below.

(3) Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See Fig.1-1-11 below.

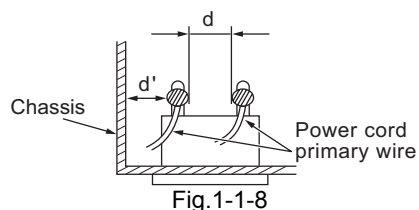


Fig.1-1-8

(4) Leakage current test

Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON) Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig.1-1-9 and following Fig.1-1-12.


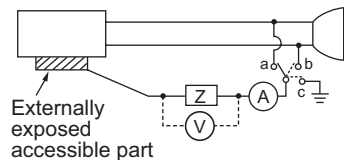


Fig.1-1-9

(5) Grounding (Class 1 model only)

Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.). Measuring Method:

Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See Fig.1-1-10 and grounding specifications.

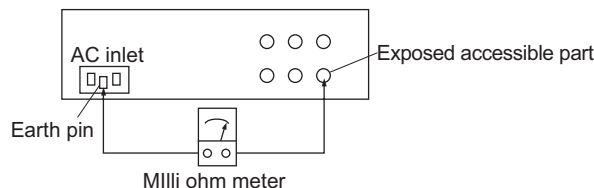

Grounding Specifications

Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

Fig.1-1-10

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	$1 \text{ M}\Omega \leq R \leq 12 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V 200 to 240 V	Europe & Australia	$R \geq 10 \text{ M}\Omega/500 \text{ V DC}$	AC 3 kV 1 minute (Class II) AC 1.5 kV 1 minute (Class I)	$d \geq 4 \text{ mm}$ $d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

Fig.1-1-11

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan	$1 \text{ k}\Omega$	$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada	$0.15 \mu\text{F}$ and $1.5 \text{ k}\Omega$	$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia	$2 \text{ k}\Omega$	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
		$50 \text{ k}\Omega$	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals

Fig.1-1-12

NOTE :

These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

2.1 DIFFERENCE LIST

The following table indicate main different points between models GR-FXM42EK, GR-FXM42EX and GR-FXM42EZ.

MODEL	GR-FXM42EK	GR-FXM42EX	GR-FXM42EZ
AC ADAPTER	AP-V14E	AP-V17E	AP-V17E
AC CORD	YES(BS Plug)	NO	NO

SECTION 3 DISASSEMBLY

3.1 BEFORE ASSEMBLY AND DISASSEMBLY

3.1.1 Precautions

- Be sure to disconnect the power supply unit prior to mounting and soldering of parts.
- Prior to removing a component part that needs to disconnect its connector(s) and its screw(s), first disconnect the wire(s) from the connector(s), and then remove the screw(s).
- When connecting/disconnecting wires, pay enough attention not to damage the connectors.
- When inserting the flat wire to the connector, pay attention to the direction of the flat wire.
- Be careful in removing the parts to which some spacer or shield is attached for reinforcement or insulation.
- When replacing chip parts (especially IC parts), first remove the solder completely to prevent peeling of the pattern.
- Tighten screws properly during the procedures. Unless specified otherwise, tighten screws at a torque of 0.196N·m (2.0kgf·cm). However, 0.196N·m (2.0kgf·cm) is a value at the time of production. At the time of service, perform the procedure at a torque 10% less than 0.196N·m (2.0kgf·cm). (See "SERVICE NOTE" as for tightening torque.)

3.1.2 Destination of connectors

Two kinds of double-arrows in connection tables respectively show kinds of connector/wires.

↔ : Flat wire ↔ : Wire ↔ : Board to board (B-B)
 □ : The connector of the side to remove

CONN. No.	CONNECTOR					PIN No.
CN2a	MAIN	CN101	↔	MONI/BW	CN761	40
CN2b	MAIN	CN103	↔	MIC	CN762	2

3.1.3 Disconnection of connectors (Wires)

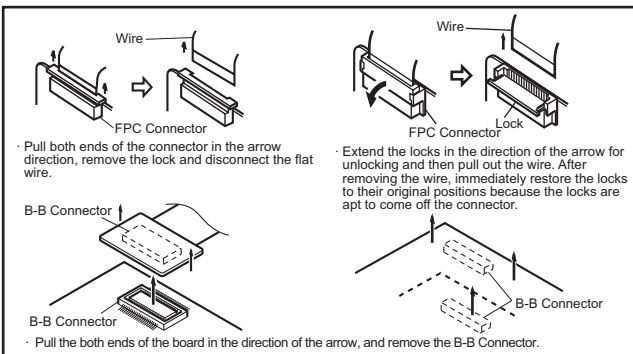


Fig.3-1-1

3.1.4 Tools required for disassembly and assembly

Torque driver YTU94088	Bit YTU94088-003	Tweezers P-895
Chip IC replacement jig PTS40844-2	Cleaning cloth KSMM-01	

Fig.3-1-2

• Torque driver

Be sure to use to fastening the mechanism and exterior parts because those parts must strictly be controlled for tightening torque.

• Bit

This bit is slightly longer than those set in conventional torque drivers.

• Tweezers

To be used for removing and installing parts and wires.

• Chip IC replacement jig

To be used for replacement of IC.

• Cleaning cloth

Recommended cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

3.2 ASSEMBLY AND DISASSEMBLY OF MAIN PARTS

3.2.1 Assembly and disassembly

When reassembling, perform the step(s) in reverse order.

STEP No.	PART	Fig. No.	POINT	NOTE
[1]	TOP COVER ASSY	Fig.C1	S1,2(L1)	-
[2]	UPPER ASSY (Inc. VF ASSY, SPEAKER/MONITOR)	Fig.C2-1	S2a,2(S2b),3(S2c) 2(S2d),S2e,S2c L2,CN2a,b	-
[8]	VF ASSY	Fig.C2-2	2(S8),L8,CN8a	NOTE 8a NOTE 8b
(*1)	(*2)	(*3)	(*4)	(*5)

(*1) Order of steps in Procedure

When reassembling, preform the step(s) in the reverseorder. These numbers are also used as the identification (location) No. of parts Figures.

(*2) Part to be removed or installed.

(*3) Fig. No. showing Procedure or Part Location.

C = CABINET

(*4) Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.

S = Screw

L = Lock, Release, Hook

SD = Solder

CN = Connector

[Example]

- 4 (S1a) = Remove 4 S1a screws.
- 3 (L1a) = Disengage 3 L1a hooks.
- 2 (SD1a) = Unsolder 2 SD1a points.
- CN1a = Remove a CN1a connector.

(*5) Adjustment information for installation.

3.2.2 ASSEMBLY/DISASSEMBLY OF CABINET PARTS AND ELECTRICAL PARTS

●Disassembly procedure

STEP No.	PART NAME	Fig. No.	POINT	NOTE
[1]	CASE COVER(M) ASSY	FA1	S1,2(L1)	-
[2]	LOWER CASE ASSY	FA2	6(S2),CN2a,CN2b	-
[3]	TOP COVER ASSY (Inc.TOP BOARD ASSY,VF ASSY)	FA2	S3a,S3b,CN3a,CN3b	-
[4]	TOP BOARD ASSY		2(S4)	-
[5]	VF ASSY		3(S5)	NOTE5
[6]	UPPER CASE(M) ASSY (Inc.COVER(UPPER/M) ASSY, MONITOR ASSY)	FA3	6(S6a),S6b,L6,CN6	NOTE6
[7]	COVER(UPPER/M) ASSY	FA4	2(S7a),S7b	-
[8]	MONITOR ASSY	FA5	S8a,L8a,L8b,SHEET(FPC),2(S8b)	NOTE8a,b,c,d
[9]	FRONT COVER ASSY Inc. DC LIGHT,MIC		CN9,S9,L9a,L9b	NOTE9a,b
[10]	MIC		S10	-
[11]	FRONT FRAME SA	FA6	2(S11)	NOTE11
[12]	MAIN BOARD ASSY		CN12a, b, c, d, e, f, g, h, 2(S12), CN12j,L12	-
[13]	OP FRAME ASSY		2(S13a), S13b	-
[14]	BRACKET OP ASSY	FA7	S14	-
[15]	OP BLOCK ASSY	FA8	-	NOTE15
[16]	SHIELD CASE(MAIN)		S16a,S16b	NOTE16
[17]	MECHANISM ASSY		2(S17a),S17b	-
[18]	REAR BOARD ASSY	FA9	S18	-
[19]	FRAME ASSY		-	-

NOTE 5 :

For disassembly of the [5] VF ASSEMBLY, refer to 3.2.3 ASSEMBLY/DISASSEMBLY OF [5] VF ASSEMBLY .

NOTE 6 :

Take care not to break or damage the FRAME.

NOTE 8a :

Take care not to cut the FPC wire.

NOTE 8b :

Insert and attach the SHEET(FPC) between the MONITOR FPC and the UPPER CASE(M)ASSEMBLY.

NOTE 8c :

Attachment of the FPC.

NOTE 8d :

For disassembly of the [8] MONITOR ASSEMBLY, refer to 3.2.4 ASSEMBLY/DISASSEMBLY OF [8] MONITOR ASSEMBLY.

NOTE 9a :

Take care not to damage the OP BLOCK ASSEMBLY when and after the FRONT CASE ASSEMBLY is removed.

NOTE 9b :

Attachment of the WIRE.

NOTE 11 :

Screwing sequence should be in order here first and others.

NOTE 15 :

For disassembly of the CCD BOARD ASSEMBLY, refer to 3.2.5 ASSEMBLY AND DISASSEMBLY OF [15] OP BLOCK ASSEMBLY AND CCD BOARD ASSEMBLY .

NOTE 16 :

When attaching the MECHANISM ASSEMBLY to S.CASE (MAIN), pull out the FPC CABLE not to be inserted between the MECHANISM ASSEMBLY and S.CASE (MAIN).

●Destination of connectors

CN.NO.	CONNECTOR				PIN NO.
CN2a	MAIN	CN27	↔	SPEAKER	- 2
CN2b	MAIN	CN13	↔	ZOOM UNIT	- 14
CN3a	MAIN	CN7301	↔	B/W VF ASSY	CN7401 14
CN3b	MAIN	CN18	↔	TOP	CN401 6
CN6	MAIN	CN16	↔	MONITOR BL	CN7601 25
CN9	MAIN	CN8	↔	MIC	- 2
CN13a	MAIN	CN3	↔	CAPSTAN MOTOR	- 18
CN13b	MAIN	CN7	↔	A/C HEAD	- 11
CN13c	MAIN	CN22	↔	CCD	CN5301 14
CN13d	MAIN	CN15	↔	OP BLOCK ASSY	- 24
CN13e	MAIN	CN4	↔	LOADING MOTOR	- 2
CN13f	MAIN	CN1	↔	DRUM MOTOR	- 10
CN13g	MAIN	CN5	↔	HEAD(VIDEO,FLY.E)	- 11
CN13h	MAIN	CN2	↔	SENSOR	- 14
CN13j	MAIN	CN28	↔	REAR_UNIT	- 10

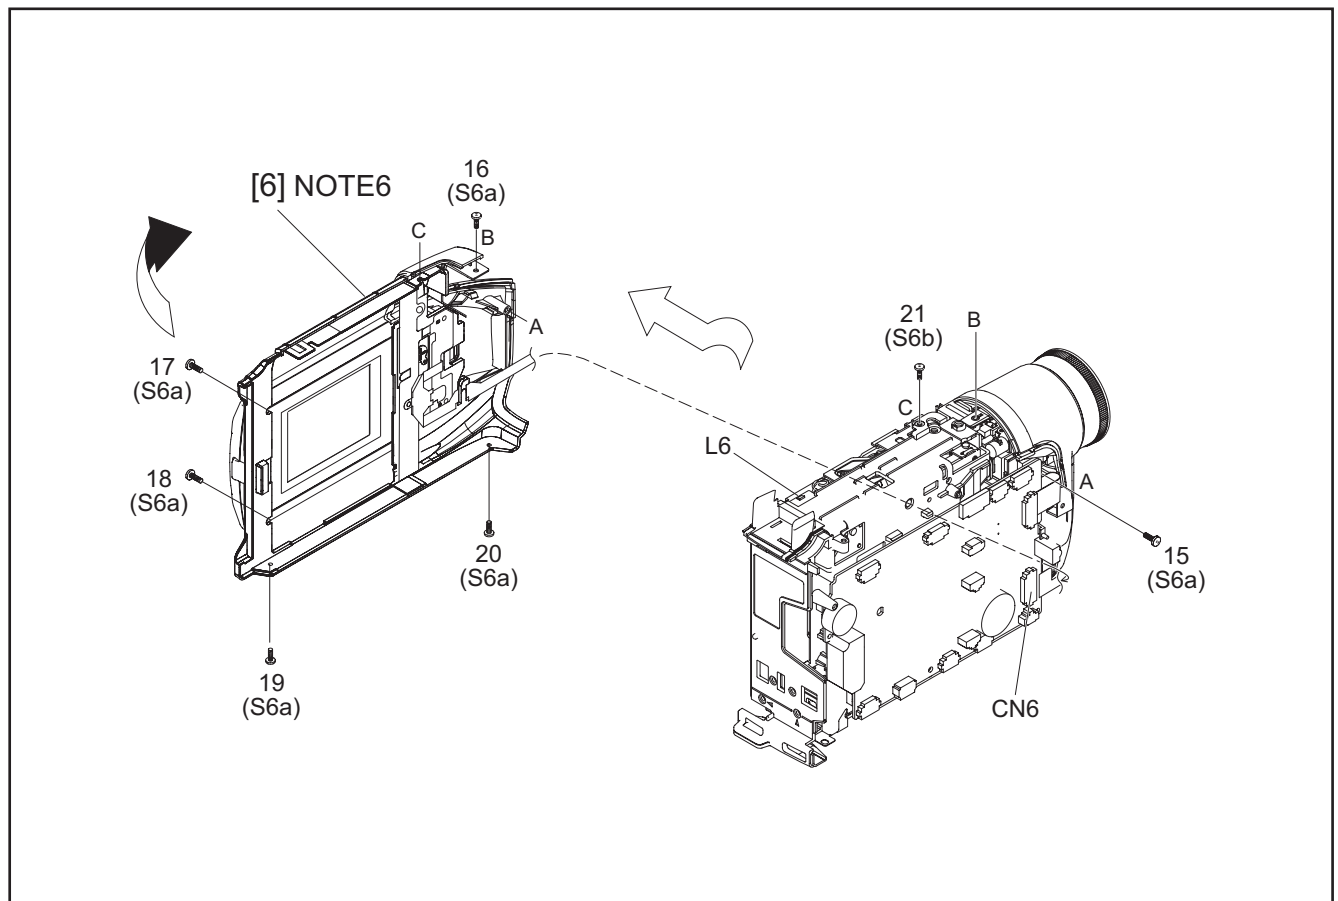


Fig.FA3

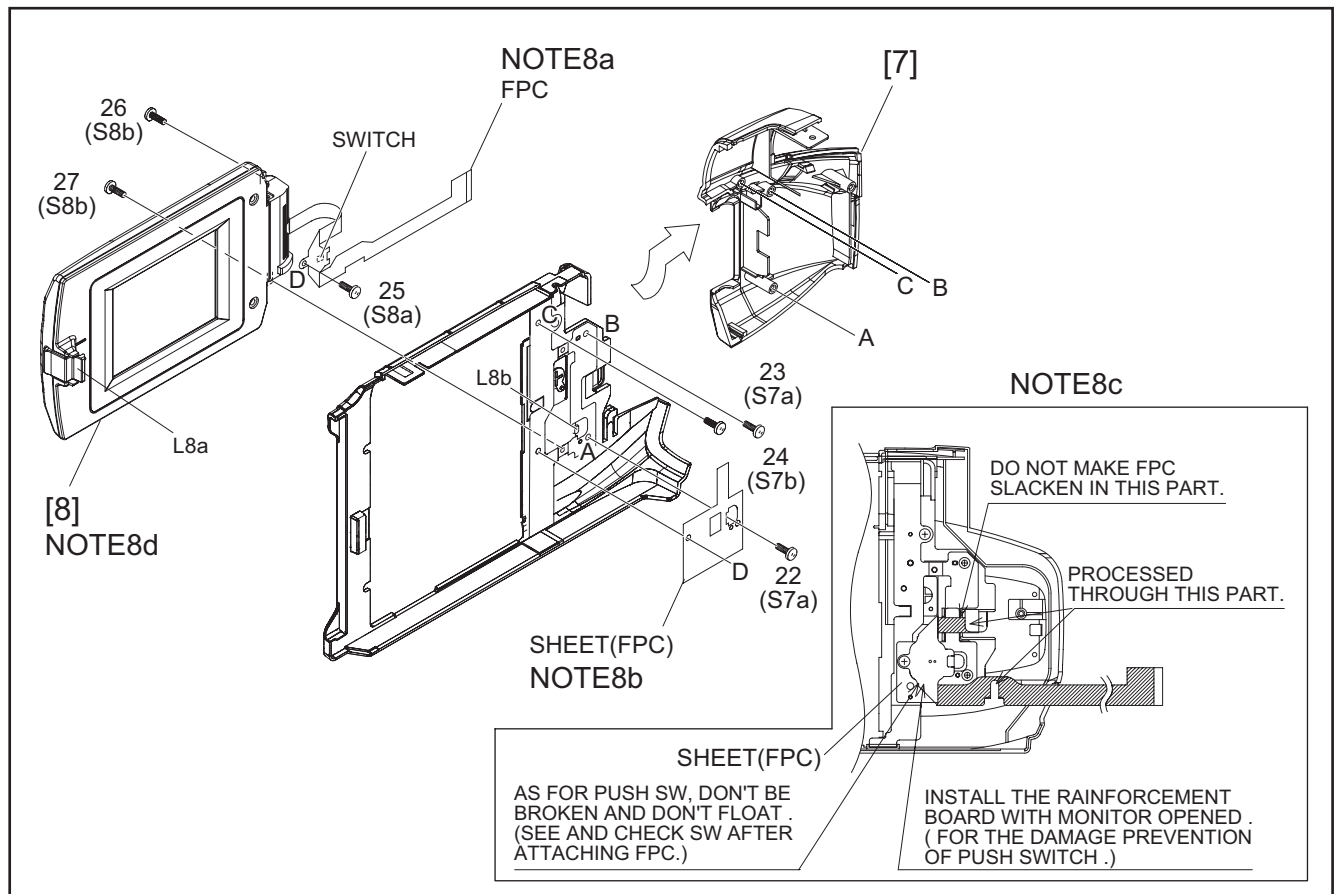


Fig.FA4

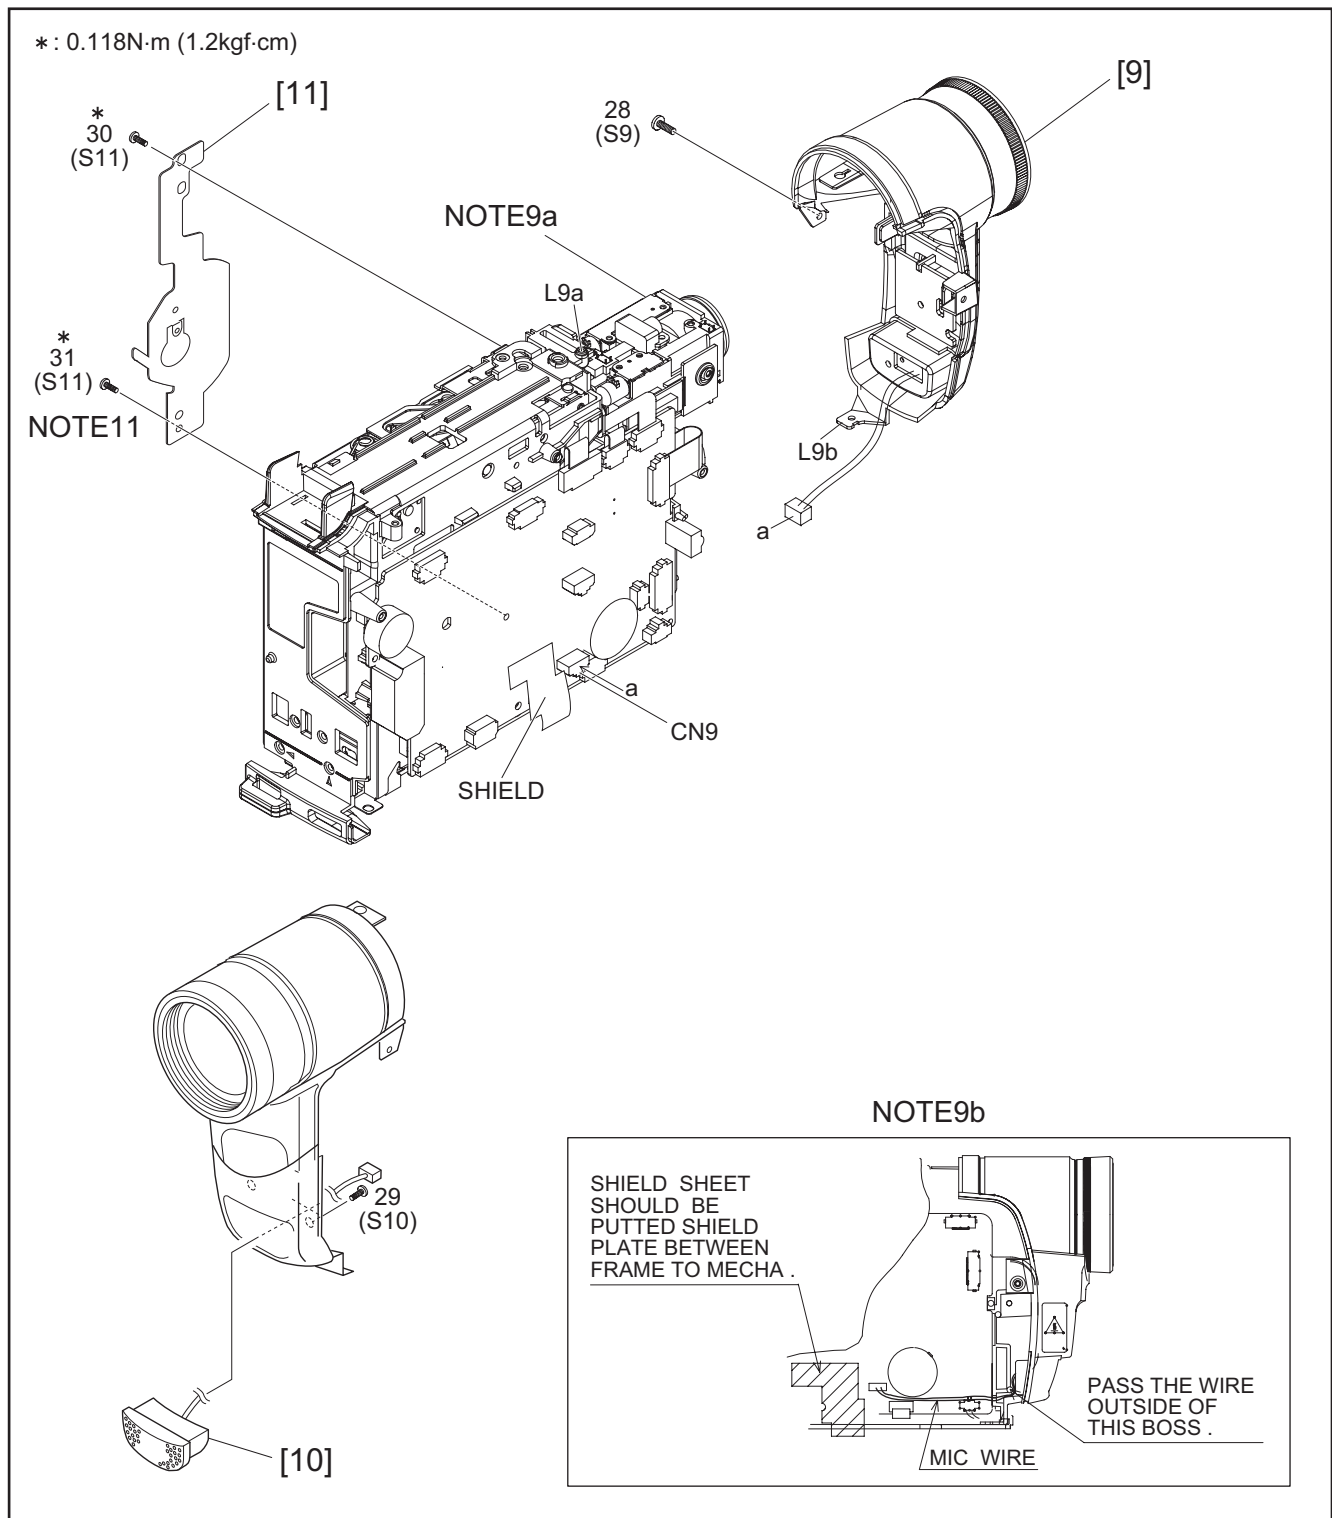


Fig.FA5

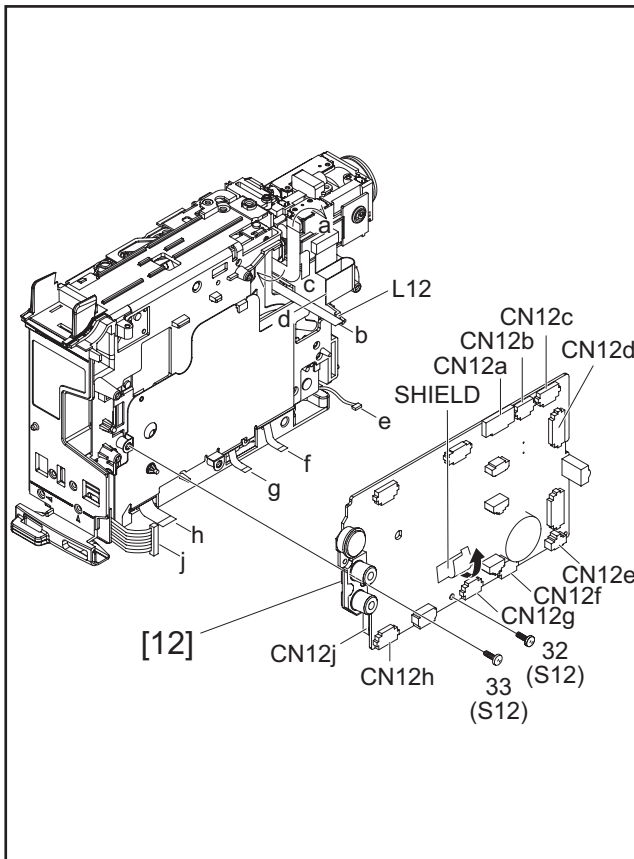


Fig.FA6

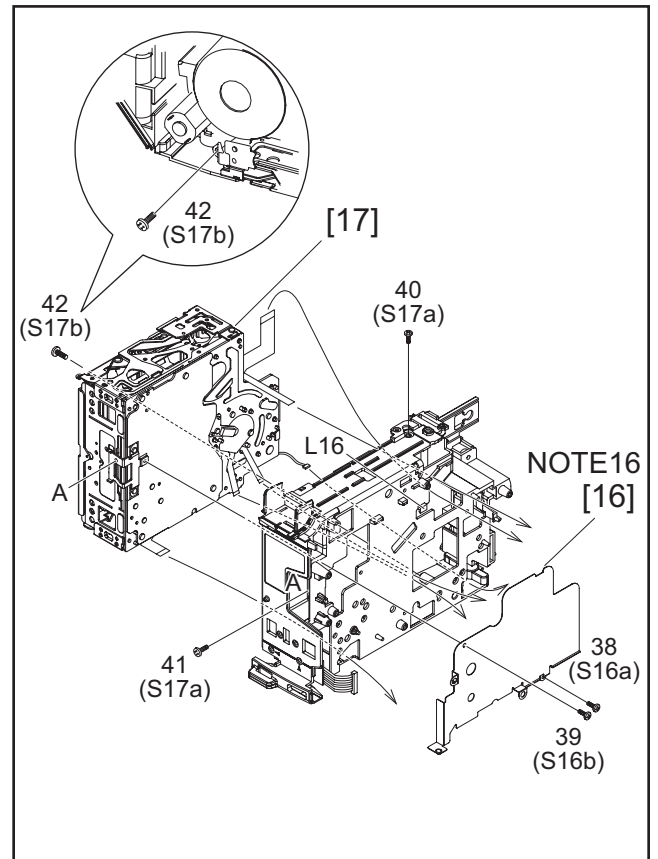


Fig.FA8

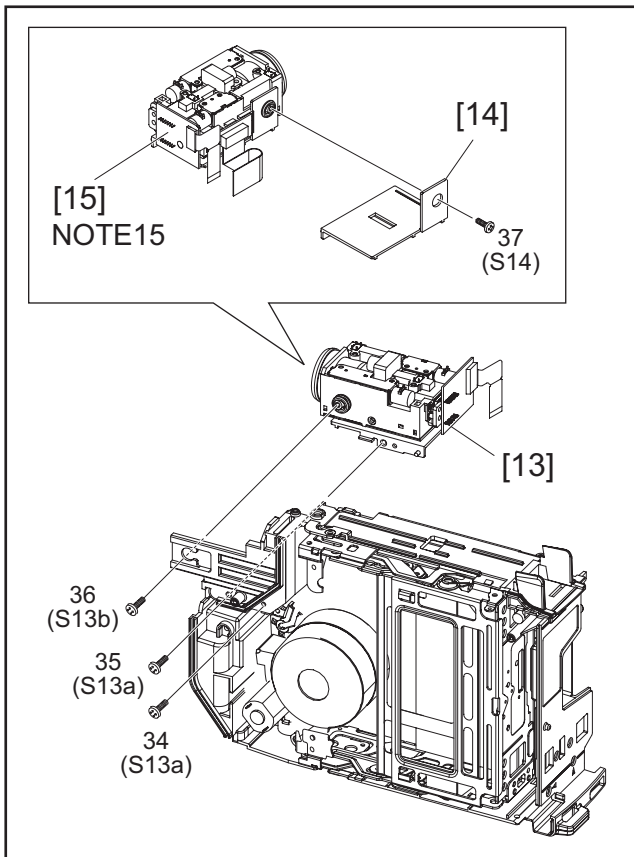


Fig.FA7

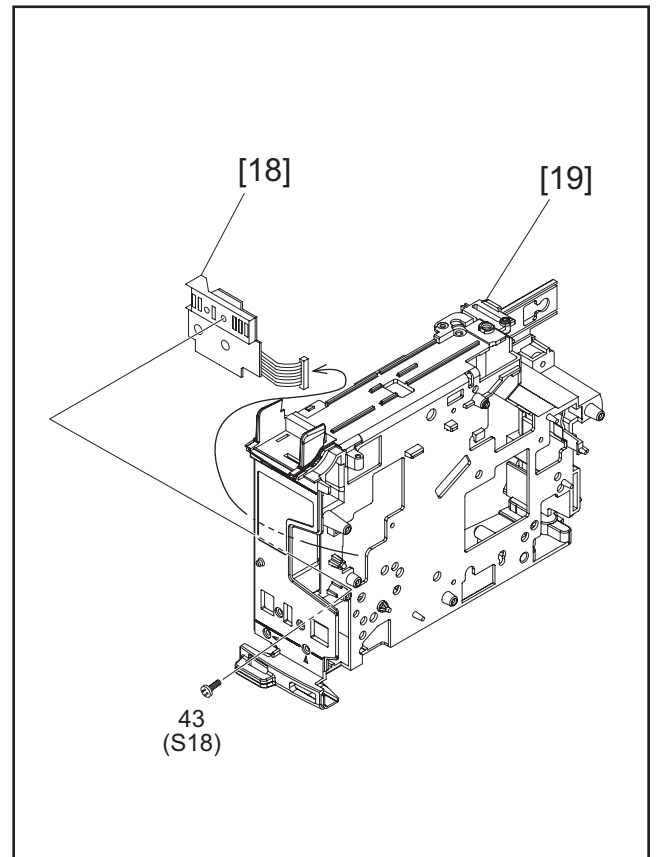


Fig.FA9

3.2.3 ASSEMBLY/DISASSEMBLY OF [5] VF ASSEMBLY

●Prior to disassembly

VF ASSEMBLY mainly consists of two CABINET PARTS (UPPER CASE (VF)/ BOTTOM CASE (VF)), and LCD SA/LENS SA inside.

As LCD SA and LENS SA are each consist of several parts, disassemble as required during the procedure.

●Disassembly procedure

STEP No.	PART NAME	Fig. No.	POINT	NOTE
[1]	UPPER CASE(VF) /BOTTOM CASE(VF)	VF1,2	2(S5a),2(S5b),2(L5a),2(L5b)	NOTE5a,b
[2]	VF BRACKET ASSY	VF3	2(S5c)	-
[3]	LENS SA/LCD SA /BWVF BOARD ASSY	VF4	L5c,d,CN5a,2(L5e),2(L5f)	NOTE5c,d
[4]	LENS SA	VF5	L5g,L5h,L5j	NOTE5e,f,g
[5]	LCD SA		L5k,L5m,L5n,L5p	NOTE5e

NOTE 5a :

Follow the wiring of the LCD MODULE FPC as shown in the Fig.VF1, and be sure to place the FPC within the BOTTOM CASE.

NOTE 5b :

Place the SUPPORT PLATE inside the BOTTOM CASE.

NOTE 5c :

Refer to the Fig. VF5 for the LENS SA disassembly.

NOTE 5d :

Refer to the Fig. VF5 for the LCD SA disassembly.

NOTE 5e :

During the procedure, be careful in handling the parts.

NOTE 5f :

When attaching the LEVER VF, be careful in positioning with the LENS ASSY.

Attach the LEVER VF by pulling the LENS ASSY to the EYE CUP side.

After the attachment, check whether the slide operation is smooth.

NOTE 5g :

When disassembling, be sure not to lose any parts.

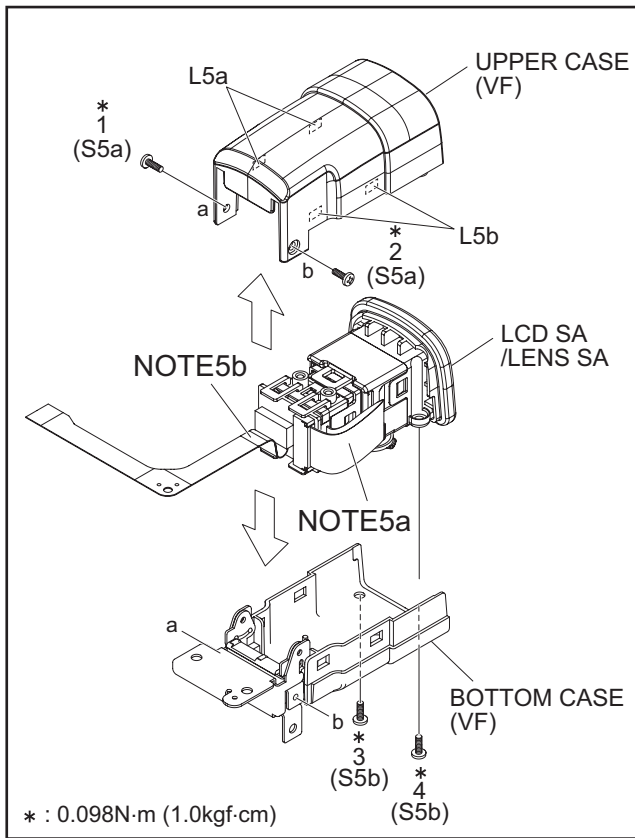


Fig.VF1

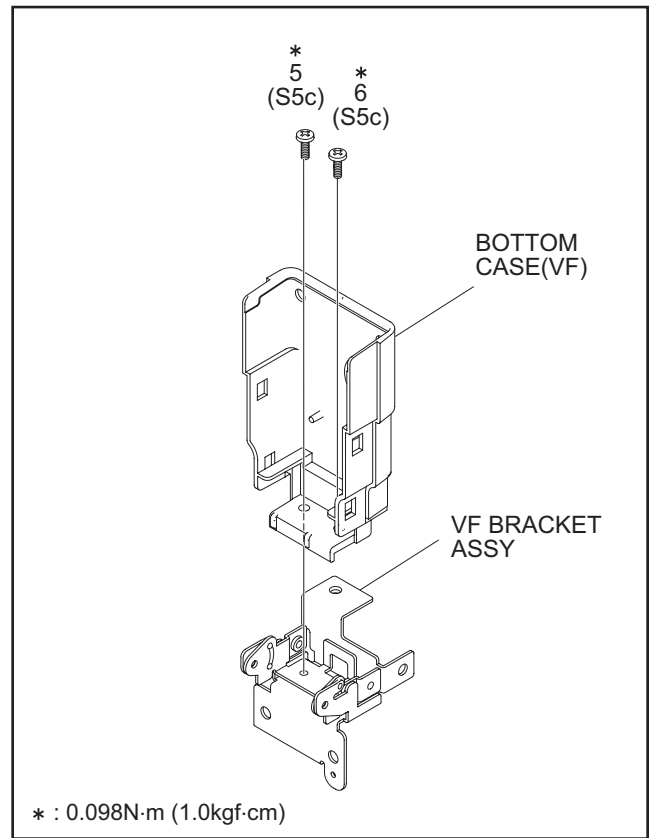


Fig.VF3

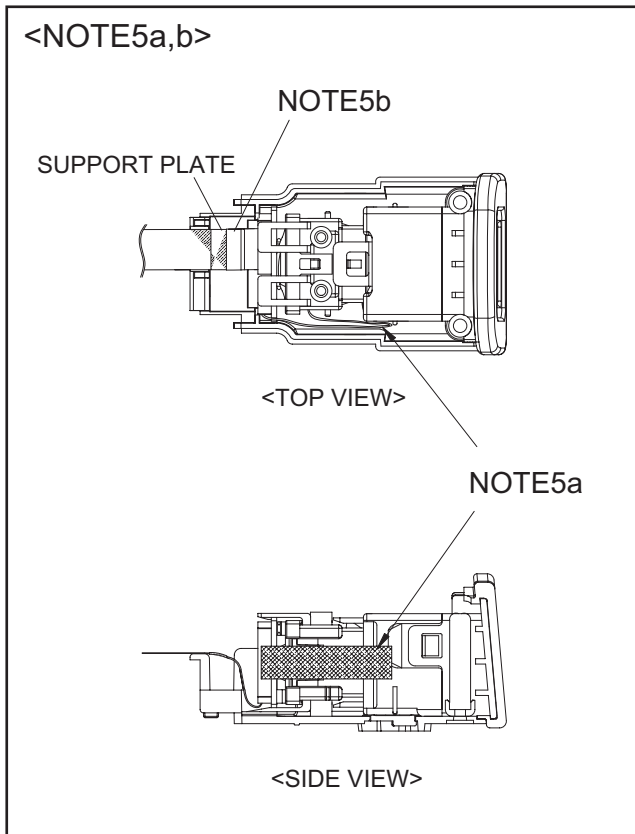


Fig.VF2

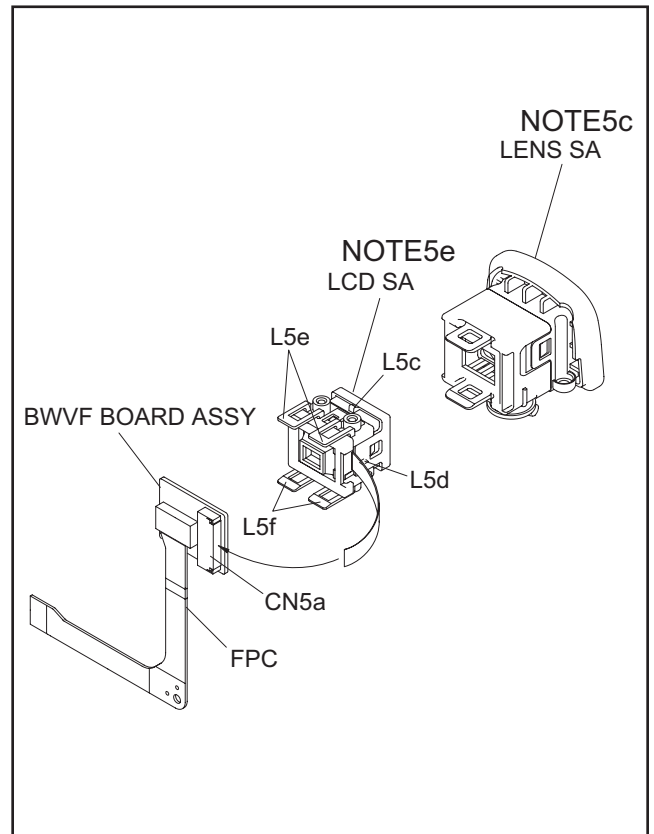


Fig.VF4

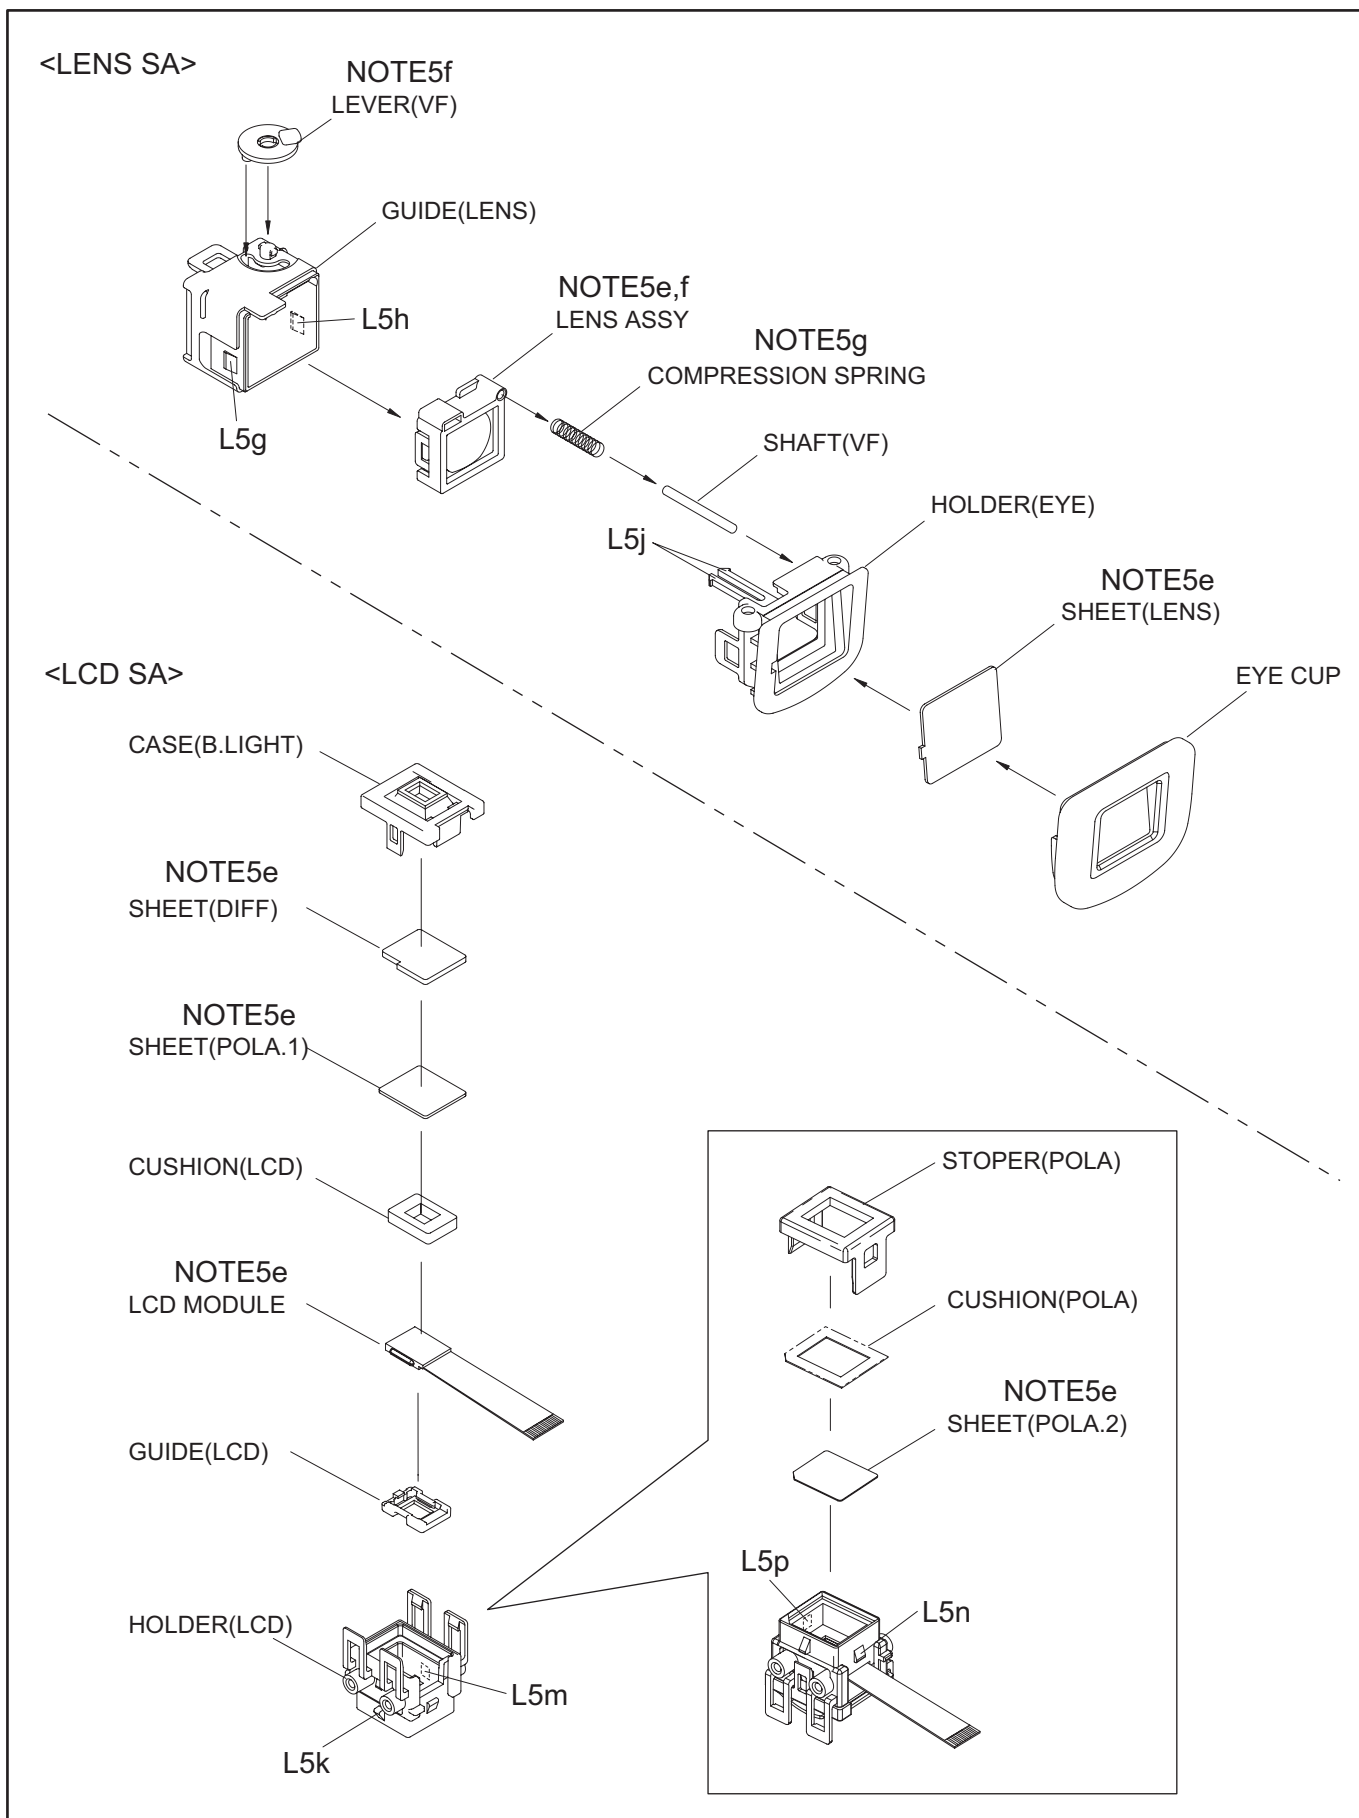


Fig.VF5

3.2.4 ASSEMBLY/DISASSEMBLY OF [8] MONITOR ASSEMBLY

●Disassembly of MONITOR ASSEMBLY

NOTE :

Be careful not to soil or scratch the monitor screen through the disassembly/assembly work.

- (1) While removing the three screws 1 to 3 in numerical order and disengaging the five hooks (L8a and L8e) in alphabetical order, remove the MONITOR COVER ASSEMBLY.

NOTE 8a :

After removing the MONITOR COVER ASSEMBLY, be careful not to damage the FPC and the connector because the MONI. HINGE ASSEMBLY moves very easily.

- (2) Unlock the connector 8a and then remove the FPC while lifting the MONI. HINGE ASSEMBLY upwards to remove it together with the FPC.

NOTE 8b :

When removing the FPC, unlock the connector first and then lift the MONI. HINGE ASSEMBLY upwards. Accordingly, the FPC is removed together with the MONI. HINGE ASSEMBLY.

- (3) Unsolder the two soldered parts (SD8).

NOTE 8c :

When removing the MONITOR BOARD ASSEMBLY and the BACKLIGHT together, it is not necessary to unsolder the two soldered parts (SD8).

- (4) Unlock the connector 8b, and disconnect the FPC from the connector 8b.
- (5) Disconnect the FPC from MONITOR CASE ASSEMBLY.
- (6) Remove the screw (4), and remove the MONITOR BOARD ASSEMBLY while lifting the side of MONITOR BOARD ASSEMBLY which has been attached with screw (4) upwards.
- (7) Remove the BACKLIGHT and DIFF. SHEET (2.5) in this order.
- (8) Remove the FRAME (LCD), the SPRING (LCD), and the LCD MODULE all together.

NOTE8d:

As the SPRING (LCD) and the LCD MODULE are attached to the FRAME (LCD), remove them all together for the parts exchange.

- (9) Remove the S. CASE (2.5) by removing the two hooks (L8h, L8j) in order.

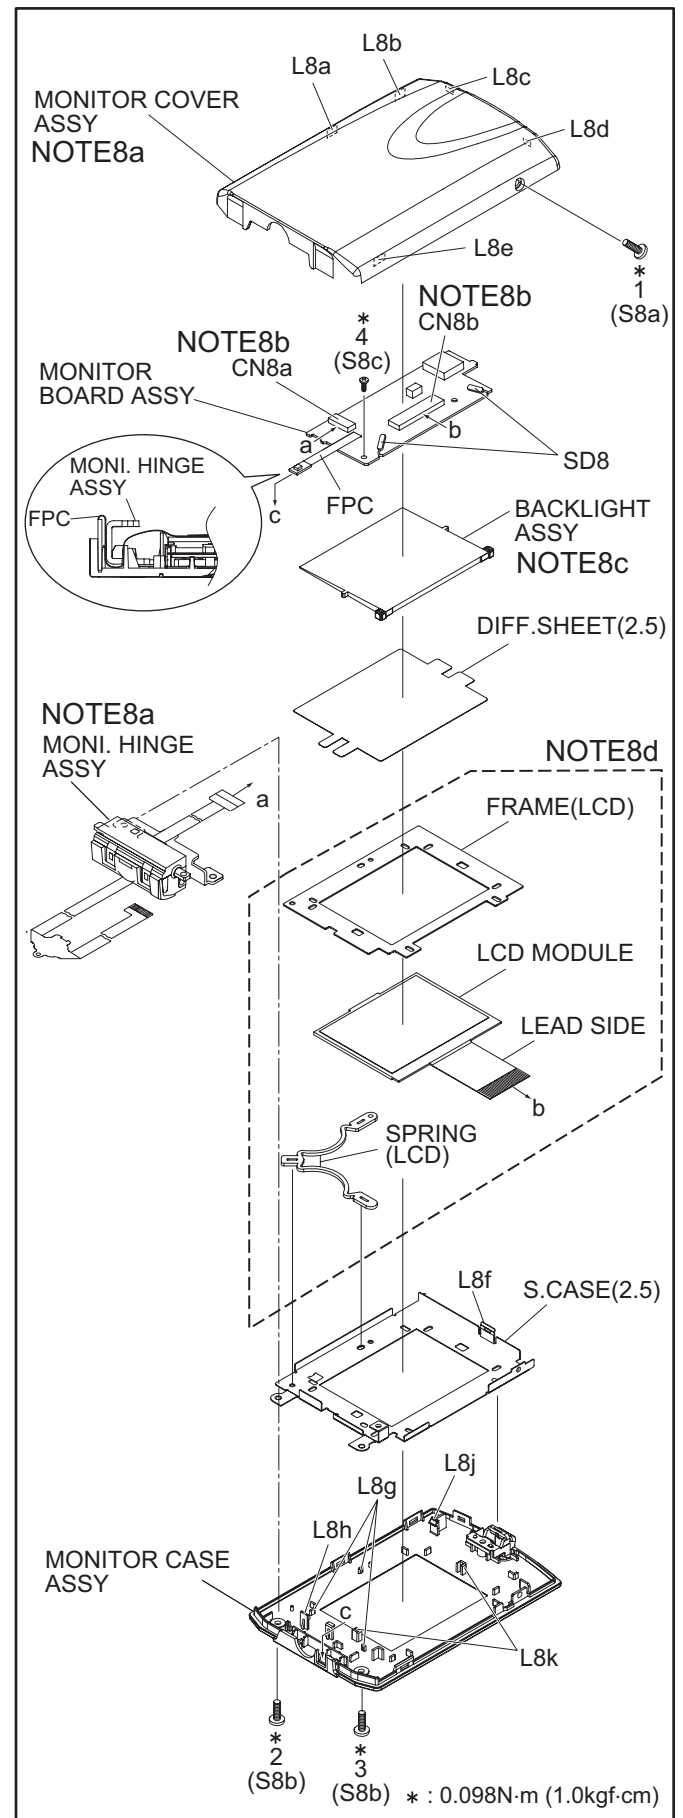


Fig.3-2-4

3.2.5 ASSEMBLY AND DISASSEMBLY OF [15] OP BLOCK ASSEMBLY AND CCD BOARD ASSEMBLY

●Precautions

- (1) Take care in handling the CCD IMAGE SENSOR, OP LPF and lens components when performing maintenance etc., especially with regard to surface contamination, attached dust or scratching. If fingerprints are present on the surface they should be wiped away using either a silicon paper, clean chamois or the cleaning cloth.
- (2) The CCD IMAGE SENSOR may have been shipped with a protective sheet attached to the transmitting glass. When replacing the CCD IMAGE SENSOR, do not peel off this sheet from the new part until immediately before it is mounted in the OP BLOCK ASSEMBLY.
- (3) The orientation of the OP LPF is an important factor for installation. If there is some marking on the OP LPF, be sure to note it down before removing and to reassemble it very carefully as it was referring to the marking.

●Disassembly of CCD BOARD ASSEMBLY and CCD BASE ASSEMBLY

- (1) Unsolder the CCD BOARD ASSEMBLY by the 14 points (SD15a) and then remove it.
- (2) Remove the two screws (1, 2) and remove the CCD BASE ASSEMBLY.
- (3) Remove the SPACER.
- (4) Remove the SHEET.
- (5) Remove the OP LFP.

●Assembly of CCD BASE ASSEMBLY and CCD BOARD ASSEMBLY

- (1) Set the OP LPF to the OP BLOCK ASSEMBLY so that the OP side touches the OP BLOCK ASSEMBLY.

NOTE 15a:

- (2) Set the SHEET to the OP LPF so that the OP LPF stays in the right position.
- (3) Attach the SPACER to the OP BLOCK ASSEMBLY.
- (4) Set the CCD BASE ASSEMBLY to the OP BLOCK ASSEMBLY, and fasten them together with the two screws (1, 2).
- (5) Set the CCD BOARD ASSEMBLY to the CCD BASE ASSEMBLY, and then solder the fourteen points (SD15a) on the CCD BOARD ASSEMBLY.

●Replacement of service repair parts

The service repair parts for the OP BLOCK ASSEMBLY are as listed below.

Before replacement of these parts, remove the BRACKET (OP BLOCK ASSEMBLY) as required.

Take special care not to disconnect any of the FPC wires or cause any damage due to soldering (excessive heating).

- (1) FOCUS MOTOR
- (2) ZOOM MOTOR
- (3) IRIS MOTOR UNIT

NOTE 15b:

When replacing the FOCUS MOTOR or the ZOOM MOTOR, solder the FPC at a space of about 0.5 mm above the terminal pin.

NOTE 15c:

The IRIS MOTOR UNIT includes the FPC ASSEMBLY and two sensors.

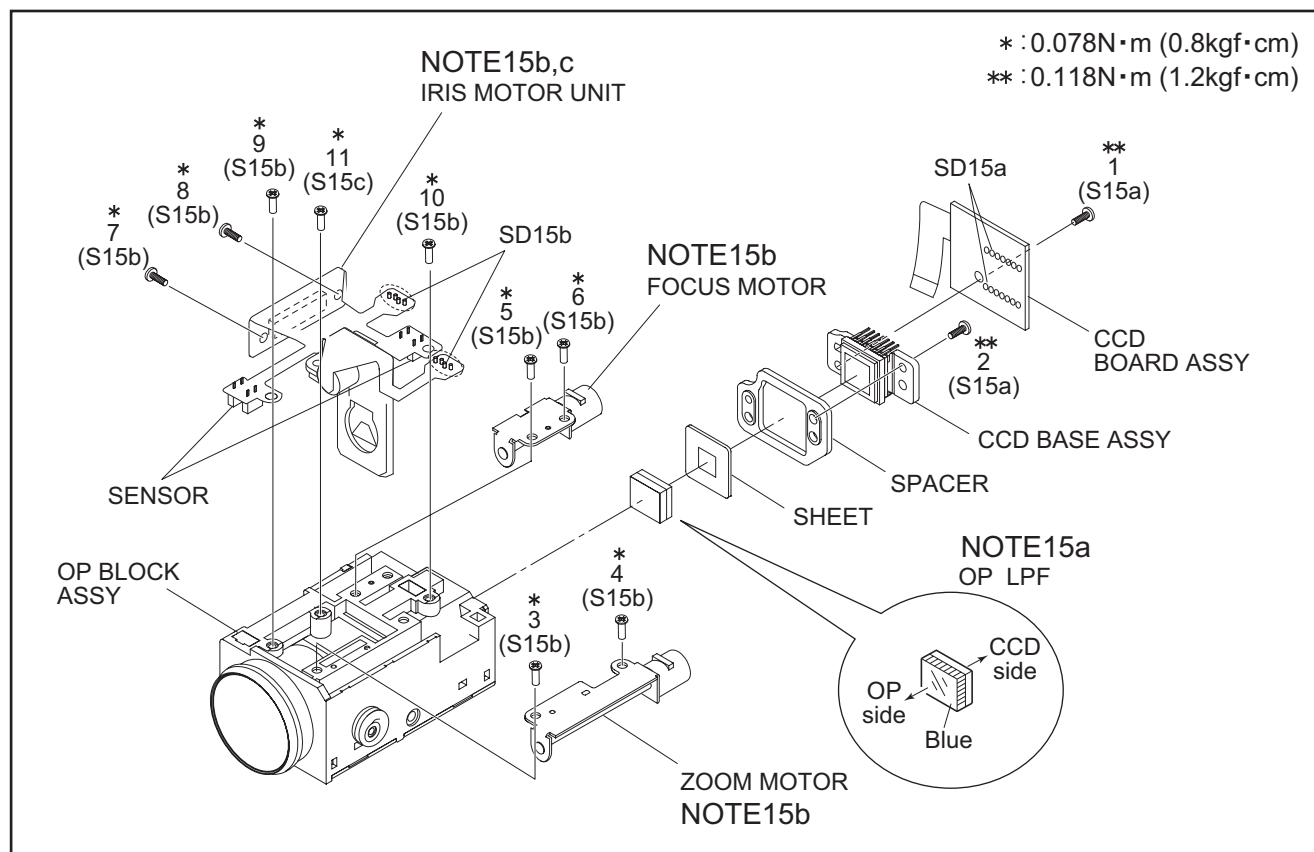


Fig.3-2-5

SECTION 4 ADJUSTMENT

4.1 PREPARATION

4.1.1 Precaution

Camera system and deck system of this model are specially adjusted by using PC.

However, if parts such as the following are replaced, an adjustment is required. The adjustment must be performed in a Service Center equipped with the concerned facilities.

- EEP ROM (IC102 of MAIN board)
- OP BLOCK ASSEMBLY
- VF ASSEMBLY
- MONITOR ASSEMBLY

















In the event of malfunction with electrical circuits, first find a defective portion with the aid of proper test instruments as shown in the following electrical adjustment procedure, and then commence necessary repair/ replacement/adjustment.

- In observing chip TP, use IC clips, etc. to avoid any stress. Prior to replacement of chip parts (especially IC), remove the solder completely to prevent peeling of the pattern.
- Use a patch cord if necessary. As for a patch cord, see the BOARD INTERCONNECTIONS.
- Since connectors are fragile, carefully handle them in disconnecting and connecting the FPC.

4.1.2 REQUIRED TEST EQUIPMENT

- Personal computer (for Windows)
- Color TV monitor
- Oscilloscope (dual-trace type, observable 100MHz or higher frequency). The one observable 300 MHz or higher frequency is recommended.
- Digital voltmeter
- DC power supply or AC adapter
- Frequency counter (with threshold level adjuster)

4.1.3 TOOLS REQUIRED FOR ADJUSTMENT

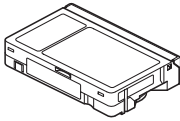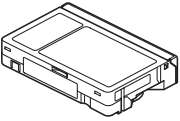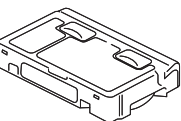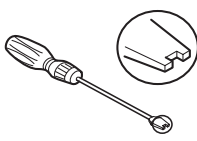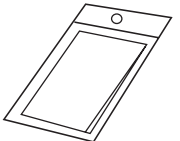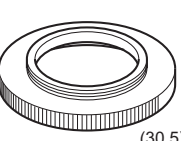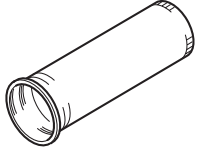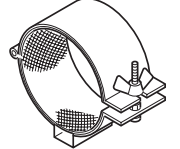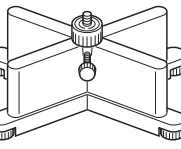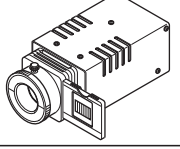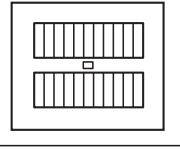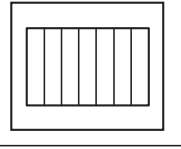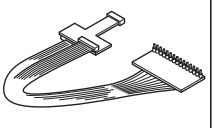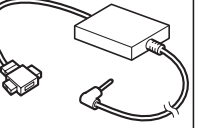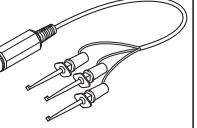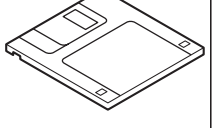Alignment tape MHPE-C	Alignment tape MHPE-LC	Cassette torque meter PUJ50431-2
		
Roller driver PTU94002-2	Cleaning Cloth KSMH-01	Conn. ring YTU92001-109
		
INF Adjustment Lens YTU92001B	INF Adjustment Lens Holder YTU94087	Camera Stand YTU93079
		
Light box Assembly YTU93096A	Gray Scale Chart YTU94133A	Color Bar Chart YTU94133C
		
Jig Connector Cable YTU93082G	PC Cable QAM0099-005	Communication Cable YTU93107B
		
Service Support System YTU94057-93		
		

• Alignment tape

To be used for check and adjustment of interchangeability of the mechanism.

(Video: Color bar signal, Audio: Non-signal)

• Cassette torque meter

This is used to check the back tension and play torque during mechanism adjustment.

• Roller driver

To be used to turn the Roller driver to adjustment of the linearity of playback envelope.

• Cleaning Cloth

Recommended the Cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

• **Conn. ring**

The connector ring to attach the INF lens to the head of the OP lens. For the usage of the Conn.ring.

• **INF Adjustment Lens**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

• **INF Adjustment Lens Holder**

To be used together with the Camera stand (11) for operating the Videocamera in the stripped-down condition such as the status without the exterior parts or for using commodities that are not yet conformable to the interchangeable ring. For the usage of the INF lens holder, refer to the Service Bulletin No. YA-SB-10035.

• **Camera Stand**

To be used together with the INF adjustment lens holder. For the usage of the Camera stand, refer to the Service Bulletin No. YA-SB-10035.

• **Light box Assembly**

To be used for adjustment of the camera system. For the usage of the Light box assembly, refer to the Service Bulletin No. YA-SB-10035.

• **Gray Scale Chart**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

• **Color Bar Chart**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

• **Jig Connector Cable**

To be connected to the Jig connector jack of the main board and used for measurement and adjustment.

• **PC Cable**

To be used to connect the Videocamera and a personal computer with each other when a personal computer issued for adjustment.

• **Communication Cable**

Connect the Communication cable between the PC cable and Jig connector cable when performing a PC adjustment.

• **Service Support System**

To be used for adjustment with a personal computer. Software can be downloaded also from JS-net.

4.2 JIG CONNECTOR CABLE CONNECTION

■ Connection procedure

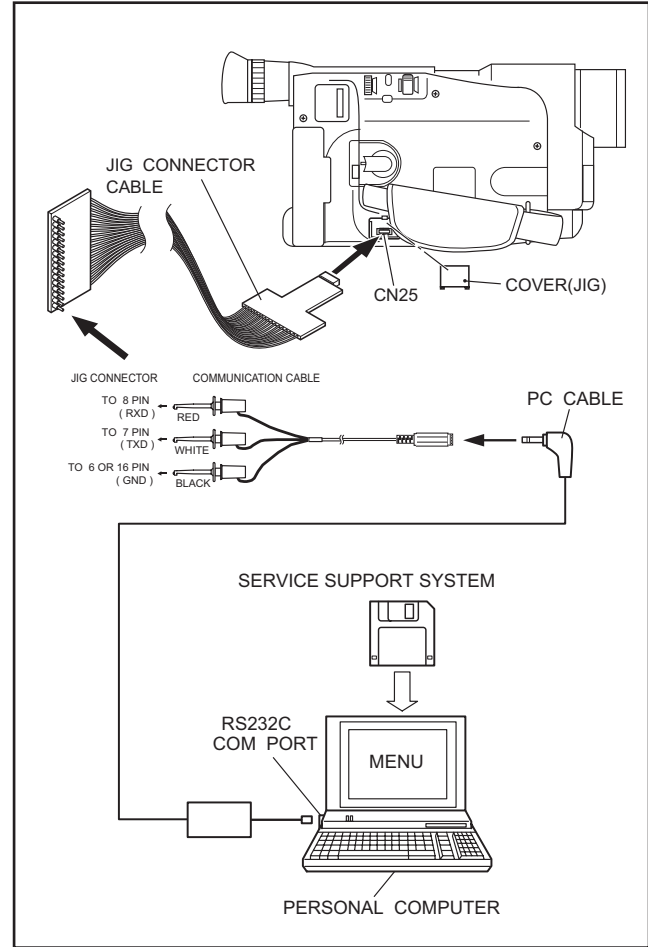


Fig.4-2-1

■ Jig connector diagrams

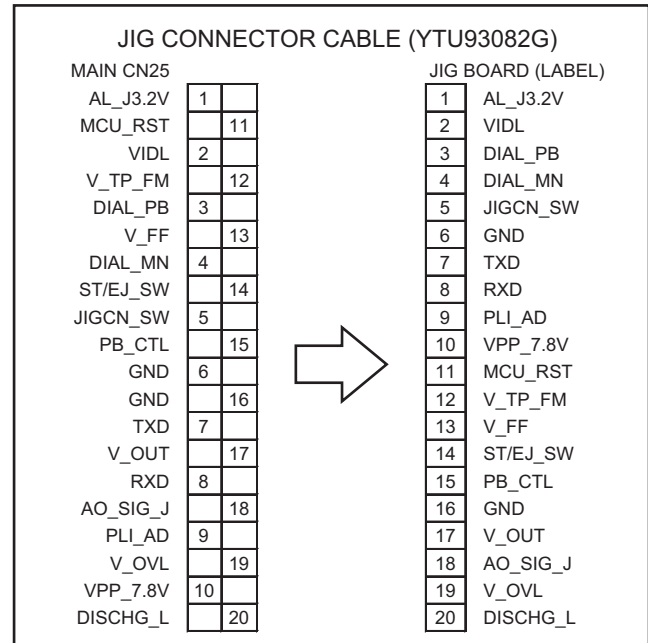


Fig.4-2-2

4.3 MECHANISM COMPATIBILITY ADJUSTMENT

4.3.1 Tape transport adjustment

Mechanism adjustment is needed when DRUM ASSEMBLY or a part of the tape transport system is replaced. To protect tapes from damage, first clean the tape transport system, next confirm that nothing is wrong with the tape transport system by using a tape that can be disposed of, and then perform adjustment with alignment tape. Some exterior parts should be removed before some adjustment procedures, depending on the procedures.

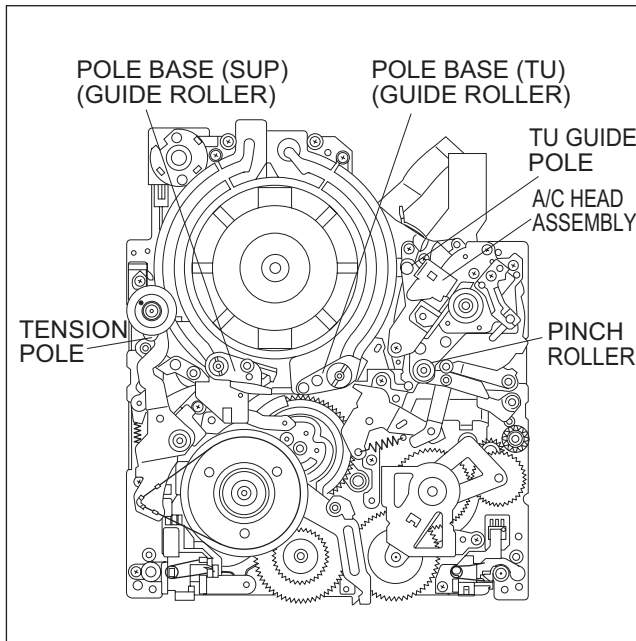


Fig.4-3-1

4.3.2 Back tension

Remove the exterior parts attached to CASSETTE HOUSING ASSEMBLY so that scales of CASSETTE TORQUE METER can be read.

- CASE COVER(M) ASSEMBLY
- C. COVER INSIDE

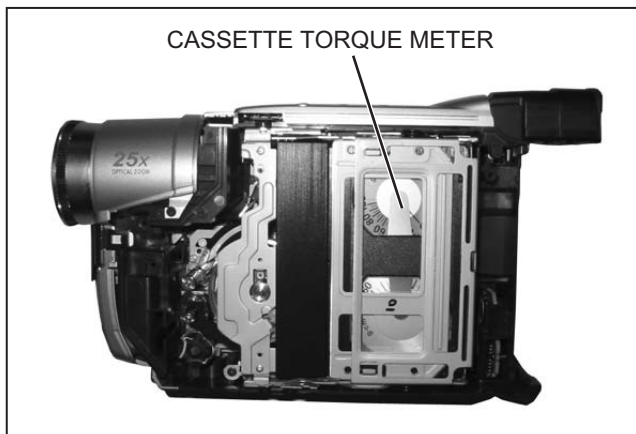


Fig.4-3-2

- (1) Set a cassette torque meter onto the deck and measure the back tension in standard PB mode to confirm that the back tension is $0.93 \times 10^{-3} - 1.71 \times 10^{-3} \text{ N}\cdot\text{m}$.
- (2) If not, replace the tension band.
When the value widely fluctuates in the measurement, replace the SUPPLY REEL DISK.
- (3) With the CASSETTE TORQUE METER, confirm that the play torque is $1.47 \times 10^{-3} - 2.45 \times 10^{-3} \text{ N}\cdot\text{m}$.
If necessary, replace the center pulley unit.

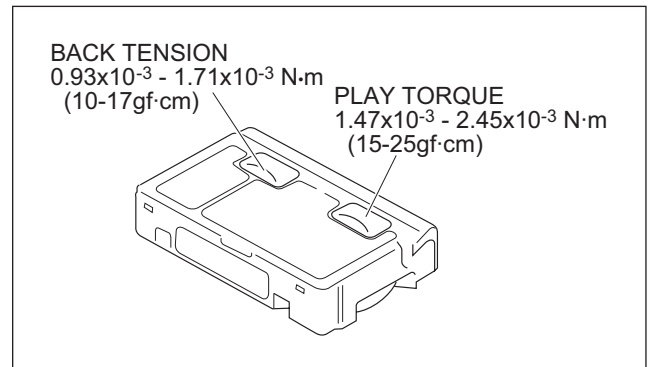


Fig.4-3-3

4.3.3 Tape pattern

Remove the exterior parts attached to the UPPER CASE ASSEMBLY so that the guide roller beside the DRUM ASSEMBLY can be rotated.

- CASE COVER(M) ASSEMBLY
- LOWER CASE ASSEMBLY
- TOP COVER ASSEMBLY
- UPPER CASE (M) ASSEMBLY

NOTE:

In performing adjustment, it is recommended that LOWER CASE ASSEMBLY and TOP OPE UNIT are attached to the main body for better operation and safety.

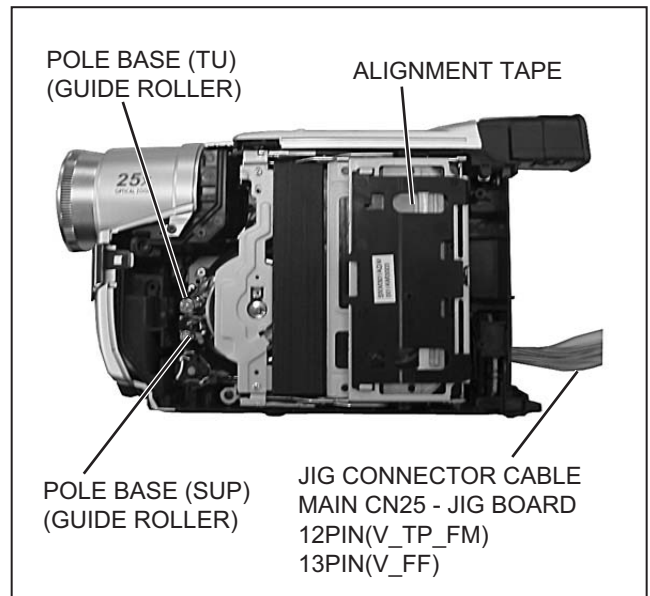


Fig.4-3-4

- (1) Remove the Cover (JIG) shown on Fig.4-2-1.
- (2) Connect the JIG CONNECTOR CABLE to CN25 on the MAIN BOARD ASSEMBLY as shown on Fig. 4-2-2.
- (3) Observe signal at V_TP_FM with external trigger from V_FF on the JIG CONNECTOR CABLE.
- (4) Playback the SP stairstep signal of the alignment tape and maximize the FM waveform by the tracking button.
- (5) Set the tracking control to the center position by simultaneously pressing the tracking (-) and (+) buttons and maximize the FM waveform by the tracking button.
- (6) If the observed FM waveform is not flat, adjust the height of the SUPPLY of TAKE-UP GUIDE ROLLER with the roller driver.

NOTE:

To prevent the tape from damage, turn the guide rollers slowly.

- (7) By operating the tracking button (both in + and - directions) in the manual tracking mode, vary the output level of the FM waveform from maximum to minimum and vice versa to confirm that the waveform varies nearly in a flat shape.
- (8) When the FM waveform breaks in the level varying process, subtly adjust the height of guide rollers at every breaking point so that the waveform varies as flat as possible. Repeat the above steps 6. and 7. several times to confirm that the waveform is flat as a whole.
- (9) Playback the SP stairstep signal of alignment tape and adjust the tracking control to maximize the FM waveform, confirm that FM waveform variation is always flat.
- (10) Record the signal and play it back in both of the SP and LP modes, and confirm that the FM waveform is flat in both modes.

NOTE:

Among the above-mentioned adjustment steps, the items of No.9 and No.10 are needed for the LP model only.

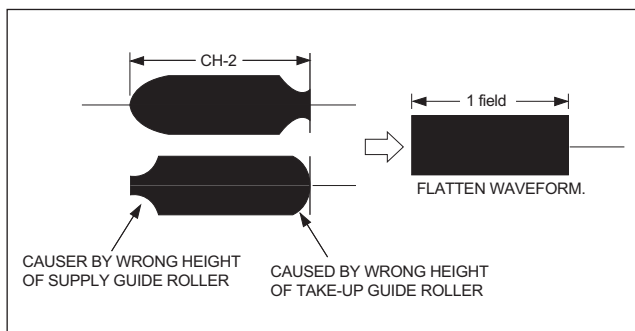


Fig.4-3-5

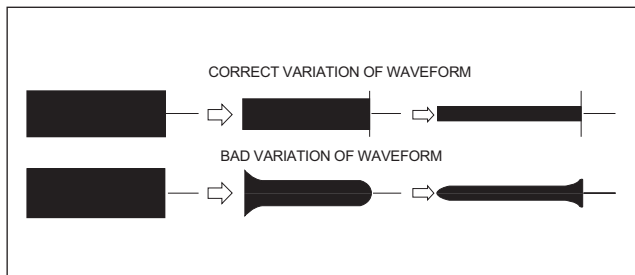


Fig.4-3-6

- (11) Through the above steps, confirm that there occur no wrinkling and damage in the tape around the PINCH ROLLER and TU GUIDE POLE whenever the deck is in operation of Loading/Unloading, Search Rewind and at mode change from Search Rewind to play mode. If wrinkling or damage in the tape occurs around the TU GUIDE POLE, adjust the angle (slant) of the A/C HEAD to the tape. So that the tape normally runs along the lower flange of the GUIDE POLE.

4.3.4 A/C head height & azimuth

Remove the exterior parts attached to the UPPER CASE ASSEMBLY so that the screws around the A/C HEAD ASSEMBLY can be tighten or loosen.

- CASE COVER(M) ASSEMBLY
- LOWER CASE ASSEMBLY
- TOP COVER ASSEMBLY
- UPPER CASE(M) ASSEMBLY
- FRONT FRAME ASSEMBLY

NOTE:

In performing adjustment, it is recommended that LOWER CASE ASSEMBLY and TOP OPE UNIT are attached to the main body for better operation and safety.

- (1) Remove the Cover (JIG) shown on Fig.4-2-1.
- (2) Connect the JIG CONNECTOR CABLE to CN25 on the MAIN BOARD ASSEMBLY.
- (3) Connect the channel-1 scope probe to the audio output (AO_SIG_J) and connect the channel-2 scope probe to PB CTL.
- (4) Playback the alignment tape.
- (5) Set the tracking to its center range by pressing the (+) and (-) tracking controls simultaneously.
- (6) Adjust screws[A], [B] and [C] approximately 45 degrees in the same direction to obtain maximum audio output and CTL signal levels.
- (7) As a final fine adjustment, adjust screw [B] for minimum signal level fluctuation and screw [C] for maximum output signal level.

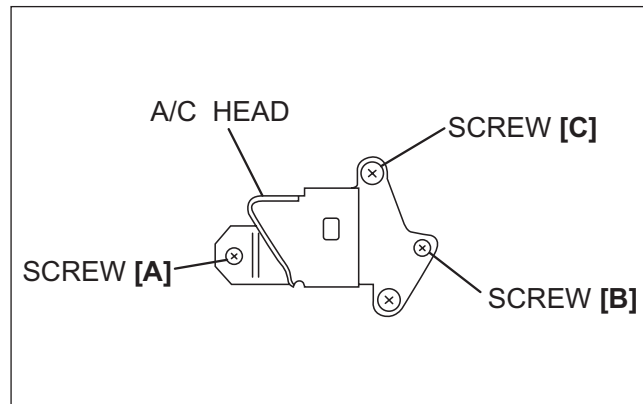


Fig.4-3-7

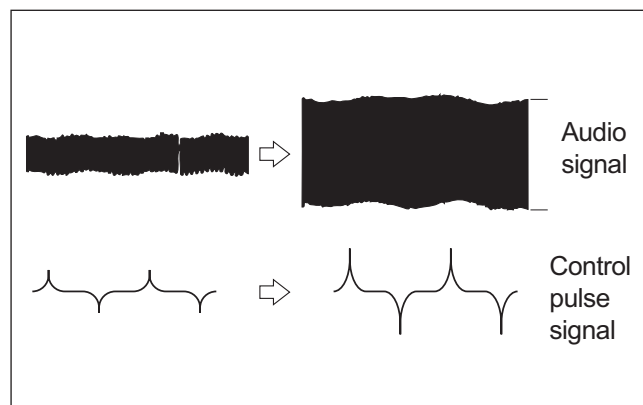


Fig.4-3-8

4.3.5 Phase of control head (X value)

Note:

Remove the exterior parts attached to the UPPER CASE ASSEMBLY so that the screws around the A/C HEAD ASSEMBLY can be tighten or loosen.

- (1) Connect the JIG CONNECTOR CABLE to CN25 on the MAIN BOARD ASSEMBLY.
- (2) Playback the SP stairstep signal of the alignment tape and observe signal at V_TP_FM with external trigger from V_FF on the JIG CONNECTOR CABLE.
- (3) Operate the tracking button in the center and manual tracking mode by pressing the tracking (+) and (-) buttons and confirm that the FM output level is maximum at the center position as shown in Fig. 4-3-10.
- (4) If necessary, slightly loosen the setscrews **[D]** and **[E]** and insert the Tweezers into the notch and guide hole to move the A/C HEAD fully in the direction of the capstan to the extent.
- (5) Gradually move the A/C HEAD toward the drum to find the position where the FM output level maximum for the first time (A' - B' in Fig. 4-3-10).
- (6) Fine adjust the phase of the A/C HEAD and tighten the screws **[D]** and **[E]** at the point A.

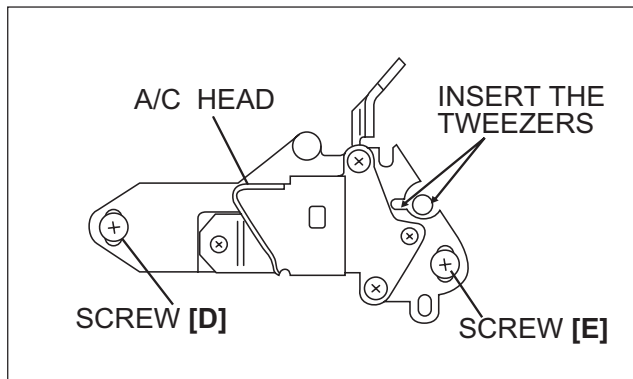


Fig.4-3-9

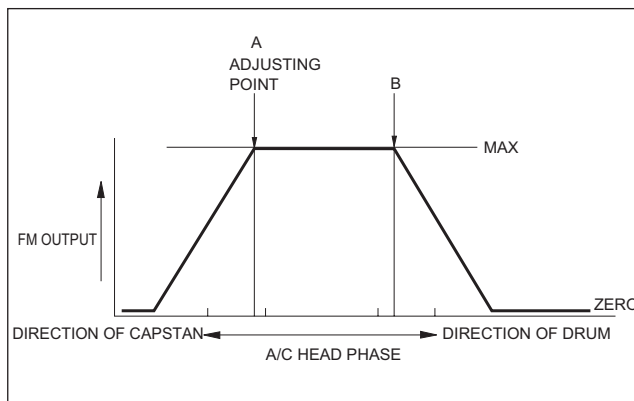


Fig.4-3-10

SECTION 5 TROUBLESHOOTING

5.1 SERVICE NOTE

CABINET PARTS AND ELECTRICAL PARTS(1)

Symbol No.	[1]	[2]			[3]			[4]			[5]			[6]			[7]							
Removing order of screw	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Place to stick screw									*															
Reference drawing (Fig.No.)	FA1	FA2											FA3											
Screw tightening torque	a																							

CABINET PARTS AND ELECTRICAL PARTS(2)

Symbol No.	[8]	[9]	[10]	[11]	[12]	[13]	[14]	[15]	[16]	[17]	[18]	[19]									
Removing order of screw	25	26	27	28	29	30	31	32	33	34	35	36	37	-	38	39	40	41	42	43	-
Place to stick screw		*	*												-						-
Reference drawing (Fig.No.)	FA4	FA5						FA6	FA7			FA8			FA9						
Screw tightening torque	a	b		a																	

[5]VF ASSY

Symbol No.	[5]					
Removing order of screw	1	2	3	4	5	6
Place to stick screw	*	*				
Reference drawing (Fig.No.)	VF1					VF3
Screw tightening torque	d					

[8]MONITOR ASSY

[8]			
1	2	3	4
3-2-4			
d			

[15]OP BLOCK ASSY/CCD BOARD ASSY

Symbol No.	[15]										
Removing order of screw	1	2	3	4	5	6	7	8	9	10	11
Place to stick screw											
Reference drawing (Fig.No.)	3-2-5										
Screw tightening torque	b	c									

NOTE:

- 1) * (This mark shows where to attach the screws) : Do not reuse the screws because the screw lock bond was applied to prevent the screws from loosening.
Prepare the specified screws and use them in place of the removed screws.
- 2) Tightening torque for the screws
 - There are setting limits of the torque value for the torque driver. If the value exceeds the setting value, take it as a rough measurement (reference value), and tighten the screw manually.
 - The specified torque value is a recommended value of the initial assembly. Therefore, set the value below the specified torque value in the assembling procedure. Be careful not to break either the screws or the screw holes.

a : 0.196N · m (2.0kgf · cm) b : 0.118N · m (1.2kgf · cm) c : 0.078N · m (0.8kgf · cm) d : 0.098N · m (1.0kgf · cm)

5.2 TAKE OUT CASSETTE TAPE

In the event that the set enters the emergency mode as it is loaded with a cassette tape and the cassette tape cannot be ejected with the EJECT button, manually, take it out of the set according to the following procedure.

NOTE :

- If the mechanism comes into the unloading mode as the cassette tape is not held by hand, it results in tape damage.
 - (1) Disconnect the set from the power source.
 - (2) Remove the LOWER CASE ASSEMBLY and TOP OPE UNIT (see Fig.FA2, page 8).
 - (3) Connect a jumper wire to each pole of the LOADING MOTOR as shown by the magnified view (Fig. 5-2-1).

- (4) While holding down the cassette housing by hand, connect the jumper wires to a battery to run the mechanism to the EJECT position for unloading. If this unloading operation is performed as the cassette housing is not held down by hand, the front lid of the cassette may damage the tape when it is ejected.
- (5) For taking in the slack of the tape, run the mechanism to the EJECT position as the front lid of the cassette is left open, and turn the TAKE-UP GEAR in the forward direction to wind up the tape. After confirming that the tape has completely been wound up and the supply reel is idling, take the cassette tape out of the cassette housing.

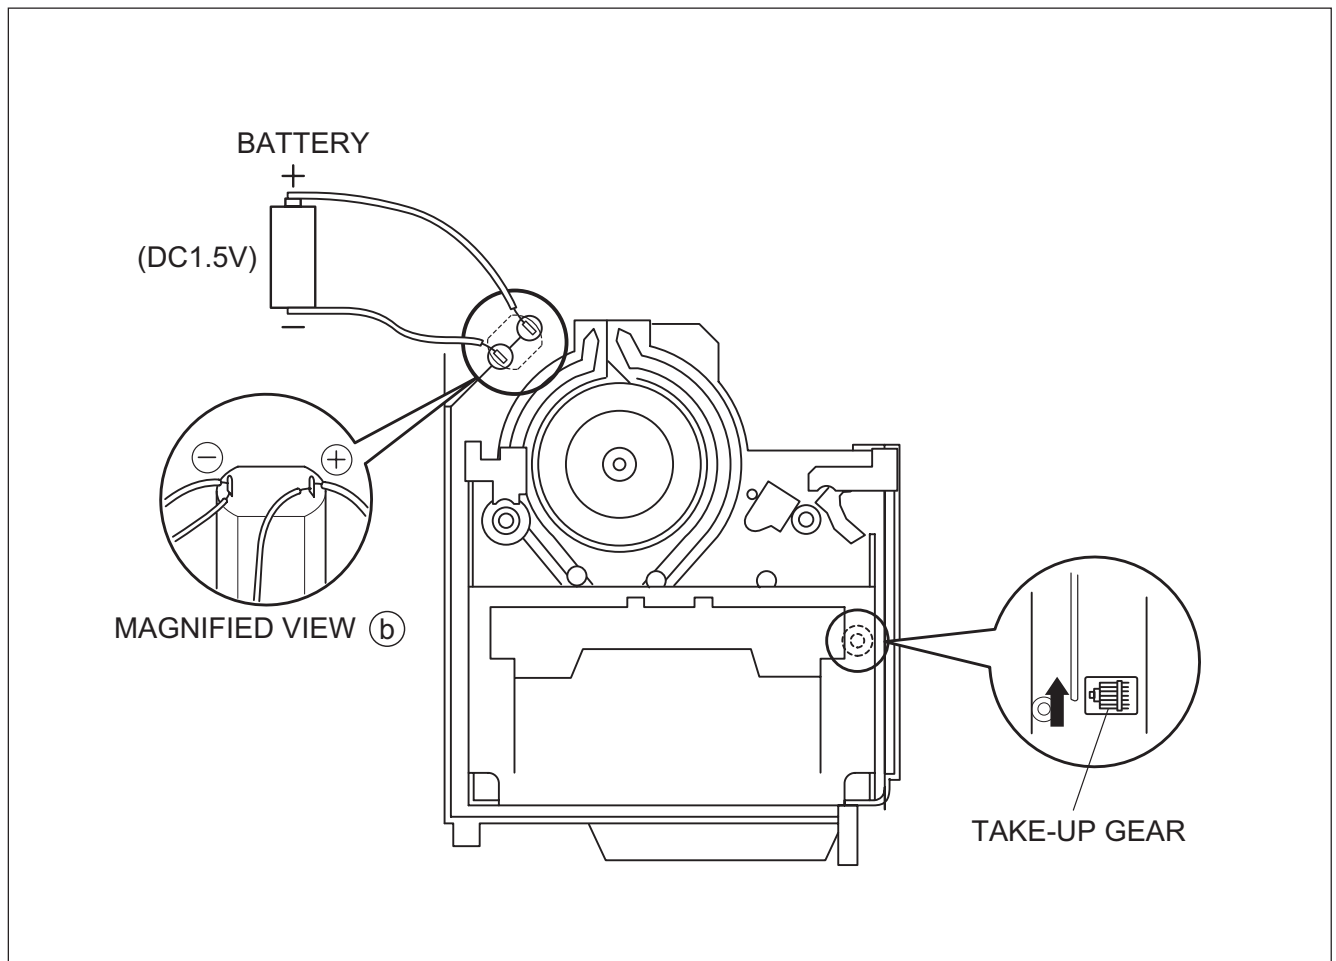



Fig.5-2-1

5.3 EMERGENCY DISPLAY

Whenever some abnormal signal is input to the mechacon CPU, an error number (E01, as an example) is displayed in the electronic view finder. In every error status, such the message as shown below alternately appear over and over.

- In an emergency mode, all operations except turning on/off the POWER switch are ineffectual.

Example (in case of the error number E01):

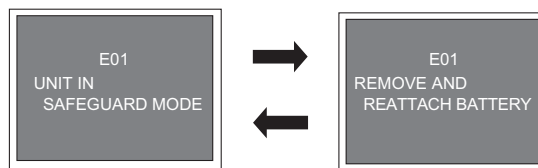

E. VF	Symptom	Mode when observed
E06	CAPSTAN FG input absent	CAPSTAN rotation
E04	DRUM FG input absent	DRUM rotation
E03	SUPPLY REEL FG input absent	REC, PLAY, SEARCH, FF/REW
E02	Mode control motor rotates for more than 7.5 sec UNLOADING without shift to next mode.	UNLOADING
E01	Mode control motor rotates for more than 7.5 sec LOADING without shift to next mode.	LOADING
E00	Overtime the programming transaction	REC, PLAY

(PAL)



Victor Company of Japan, Limited
Camcorder Category 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.YF127)



Printed in Japan
VPT

PARTS LIST

SAFETY PRECAUTION

Parts identified by the ⚠ symbol are critical for safety. Replace only with specified part numbers.


BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.

1. EXPLODED VIEW


1.1 FINAL ASSEMBLY<M1>


The instruction manual to be provided with this product will differ according to the destination.

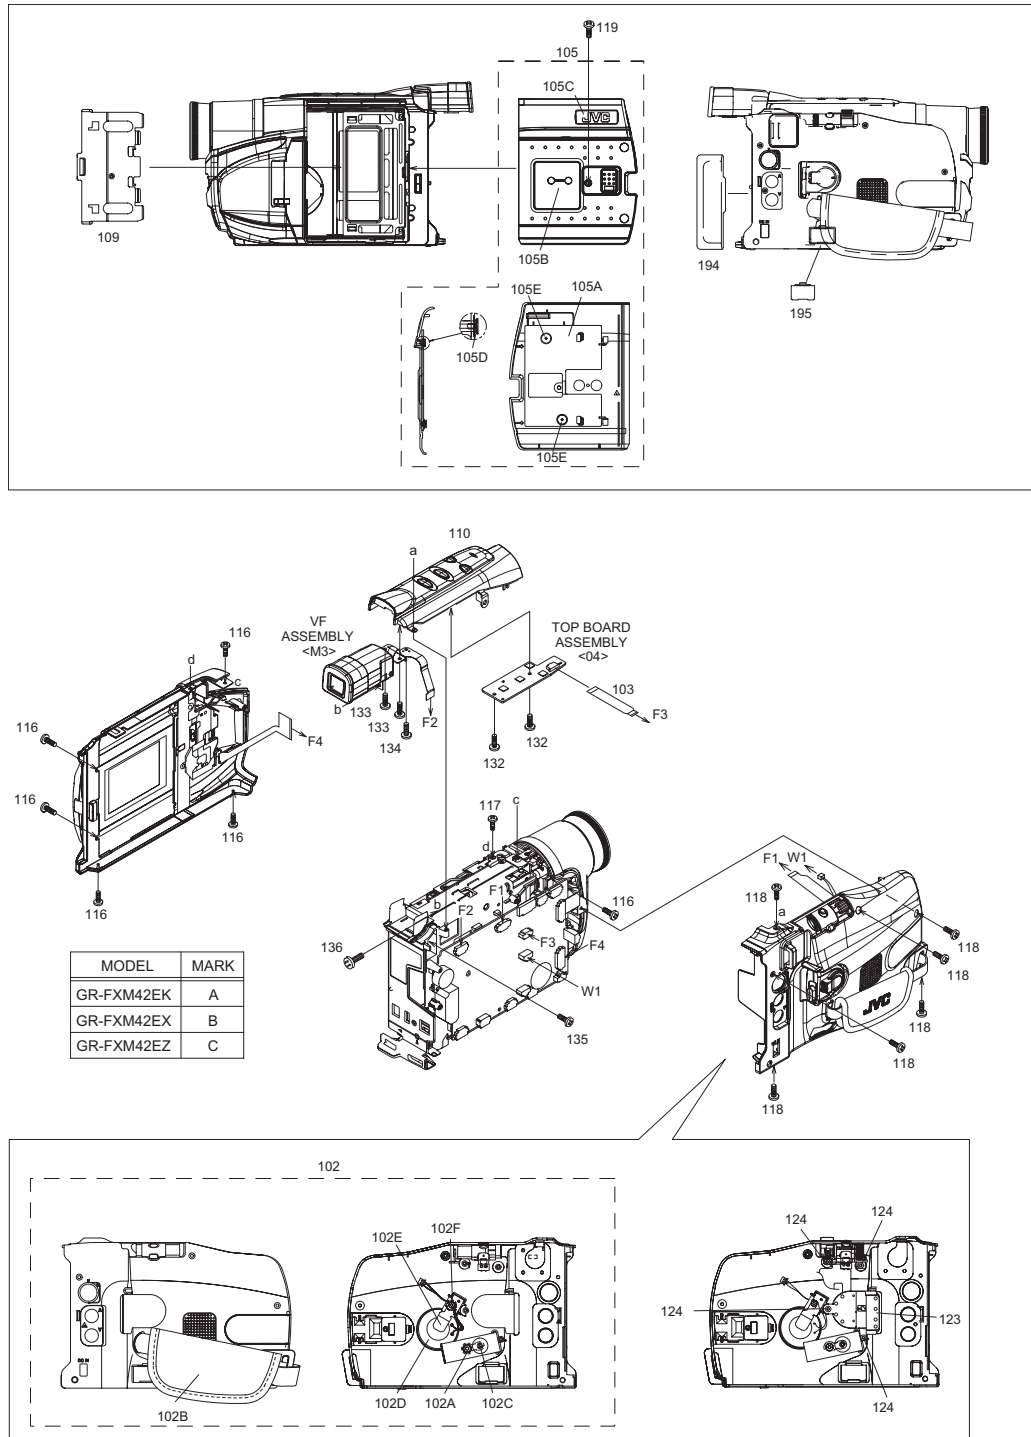


1.2 MECHANISM ASSEMBLY<M2>

BEWARE OF BOGUS PARTS
Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.

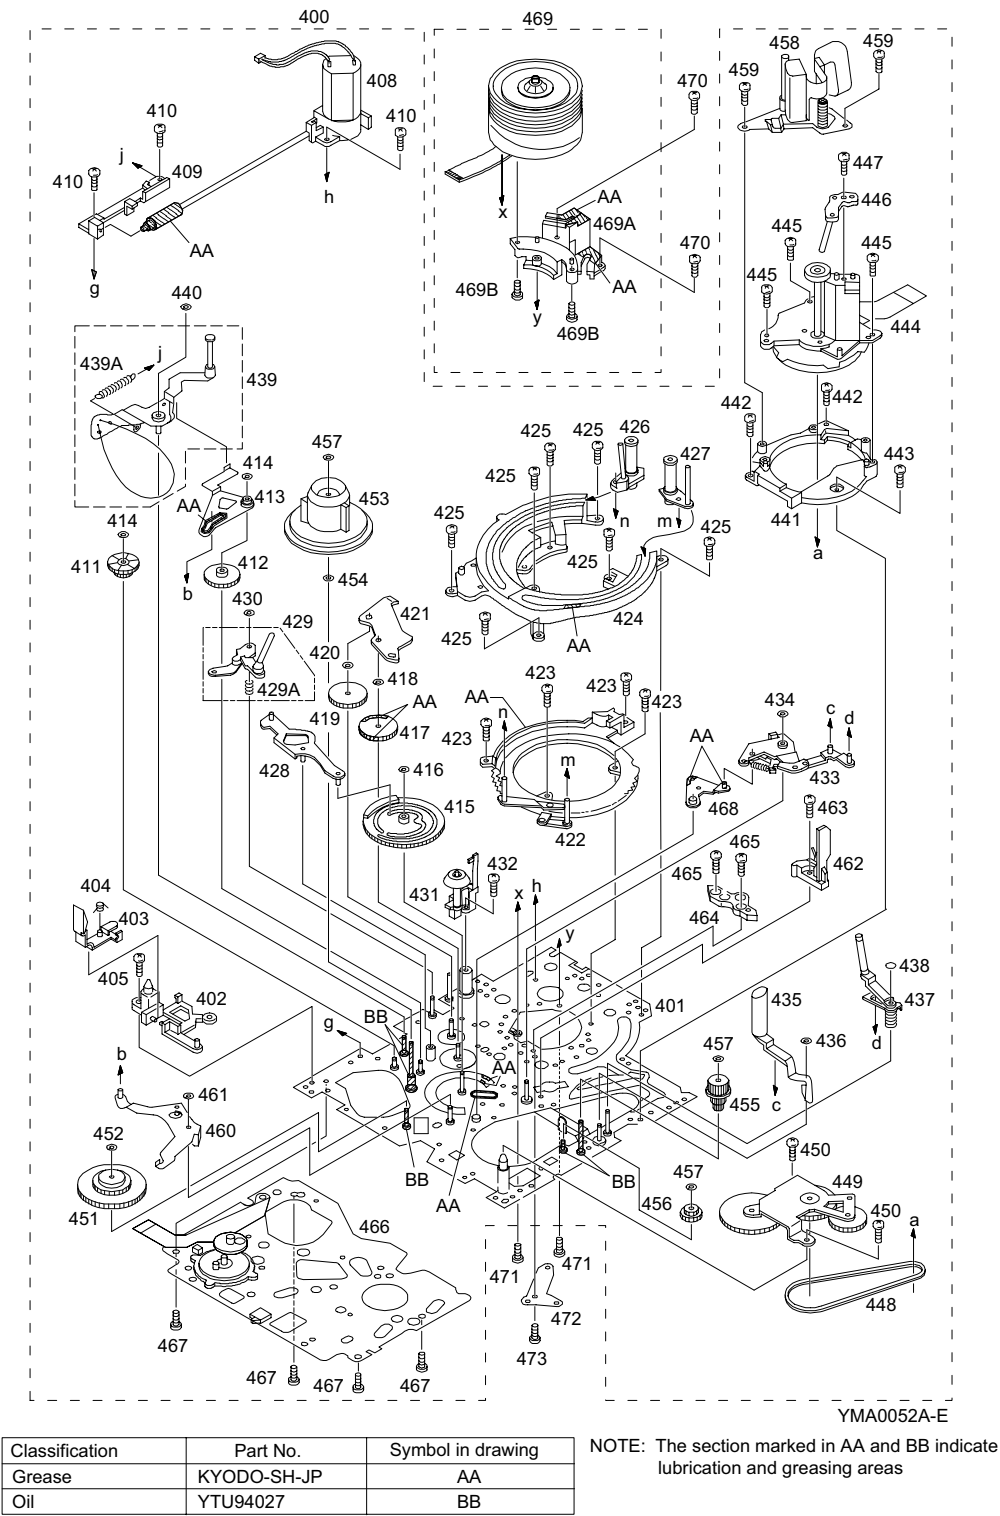


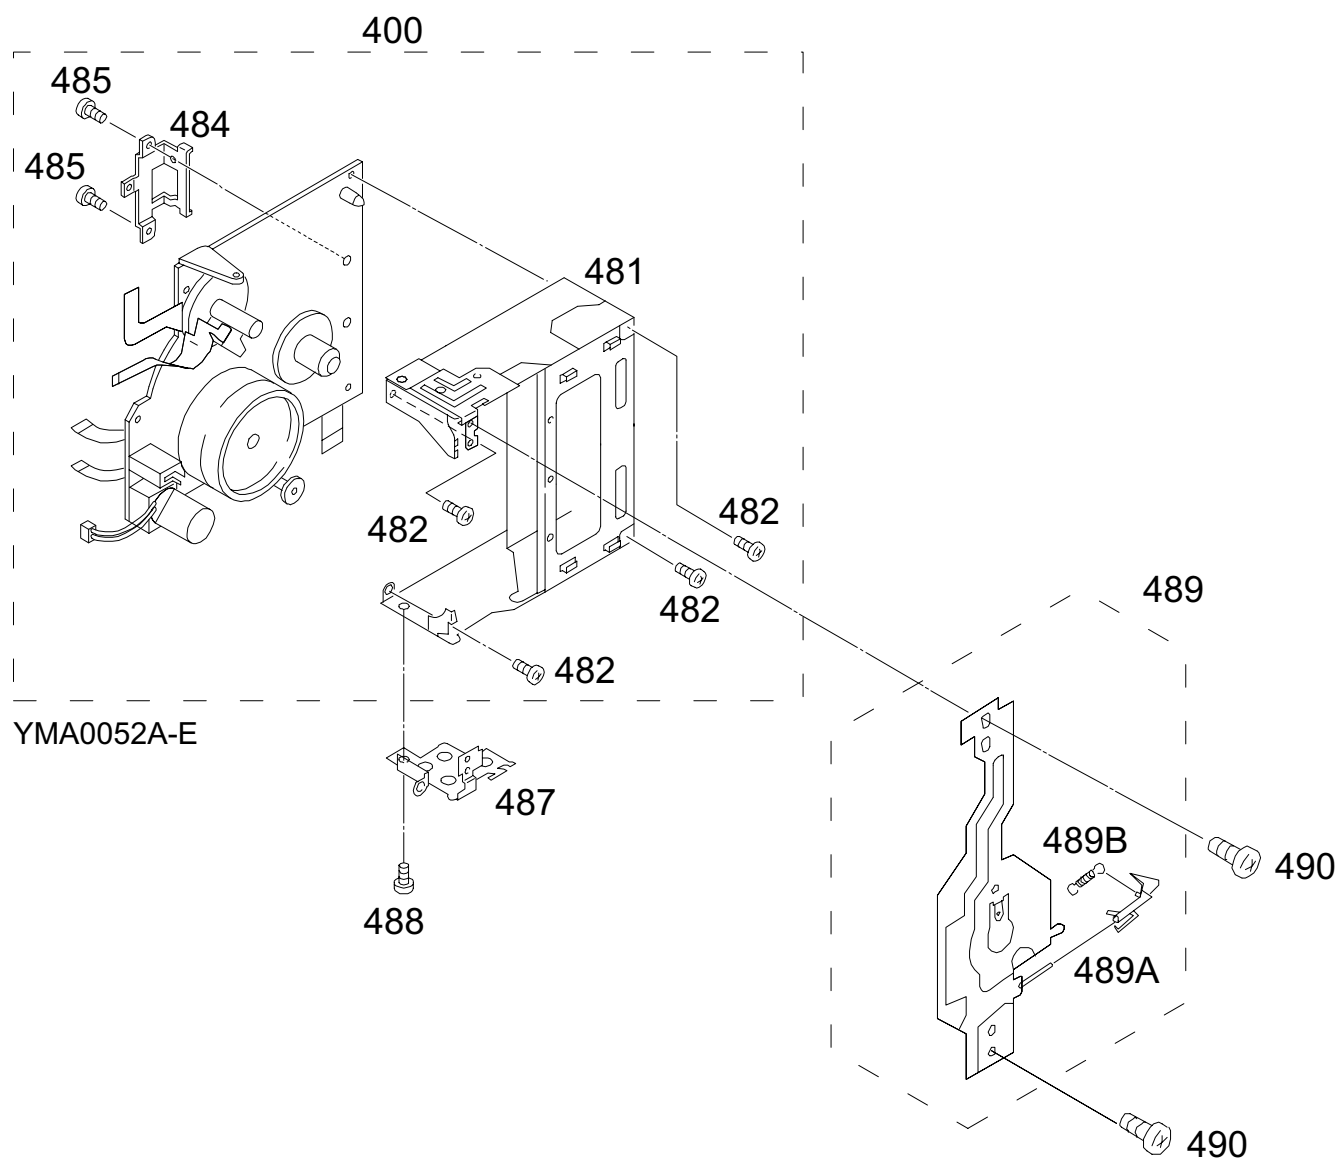


1.3 VF ASSEMBLY <M3>

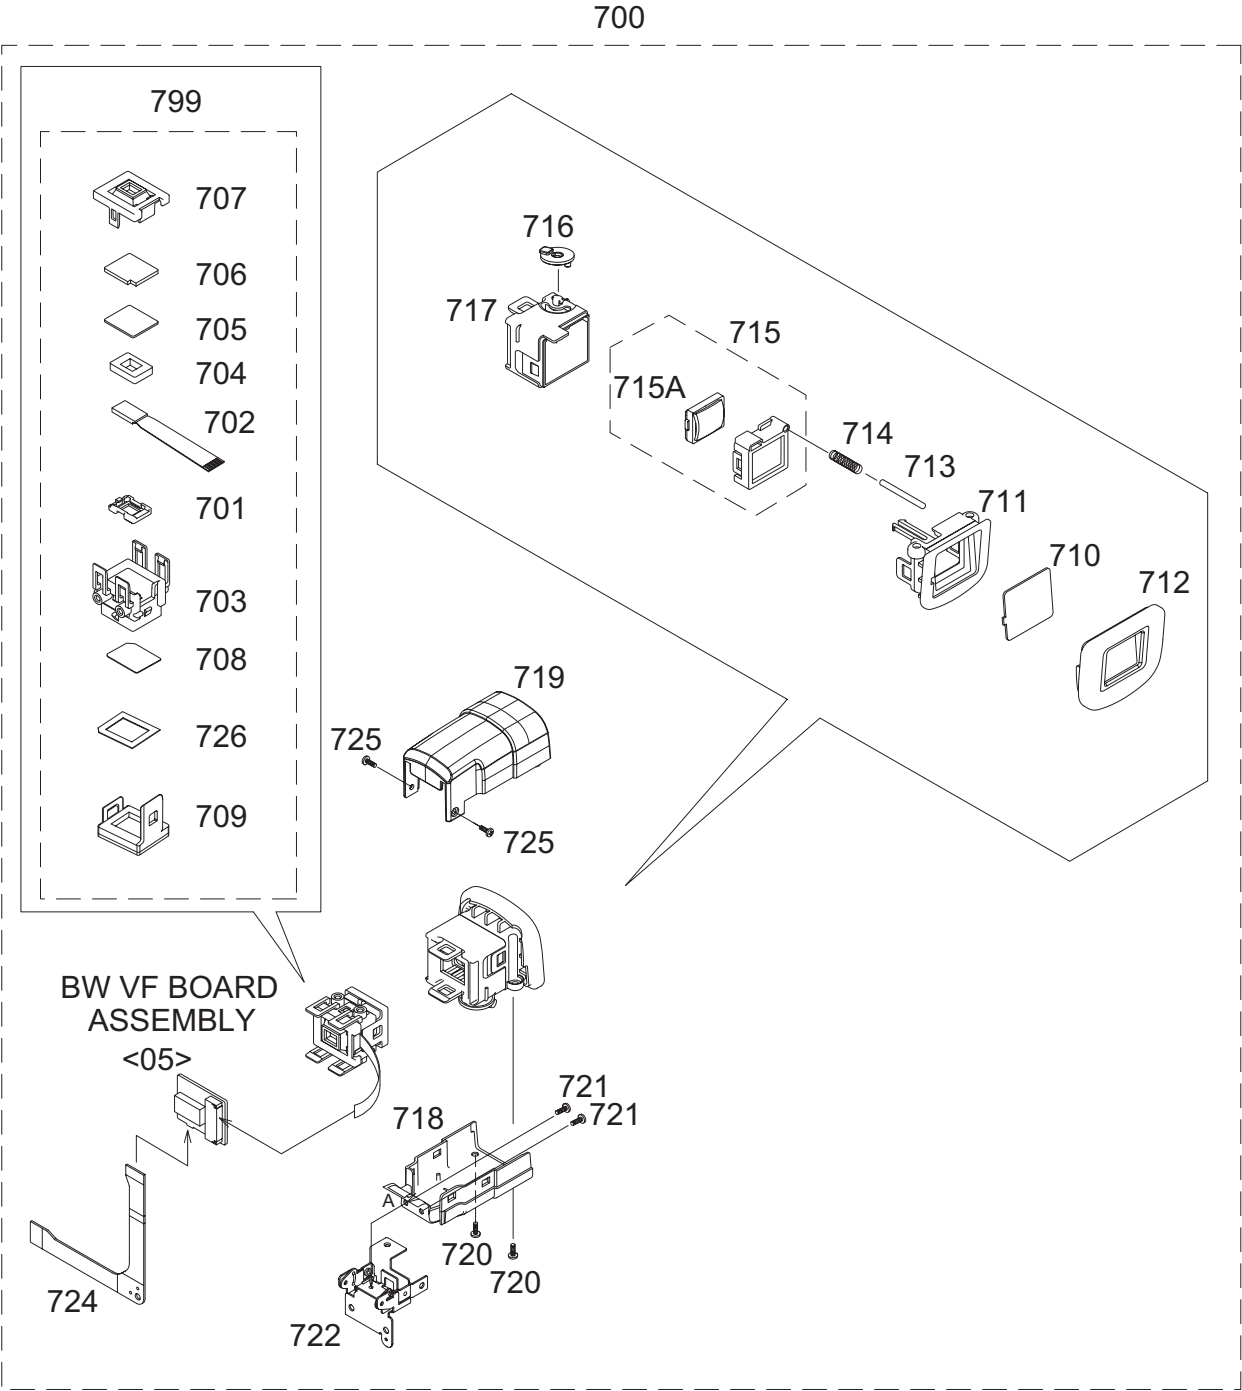

1.4 MONITOR ASSEMBLY <M4>

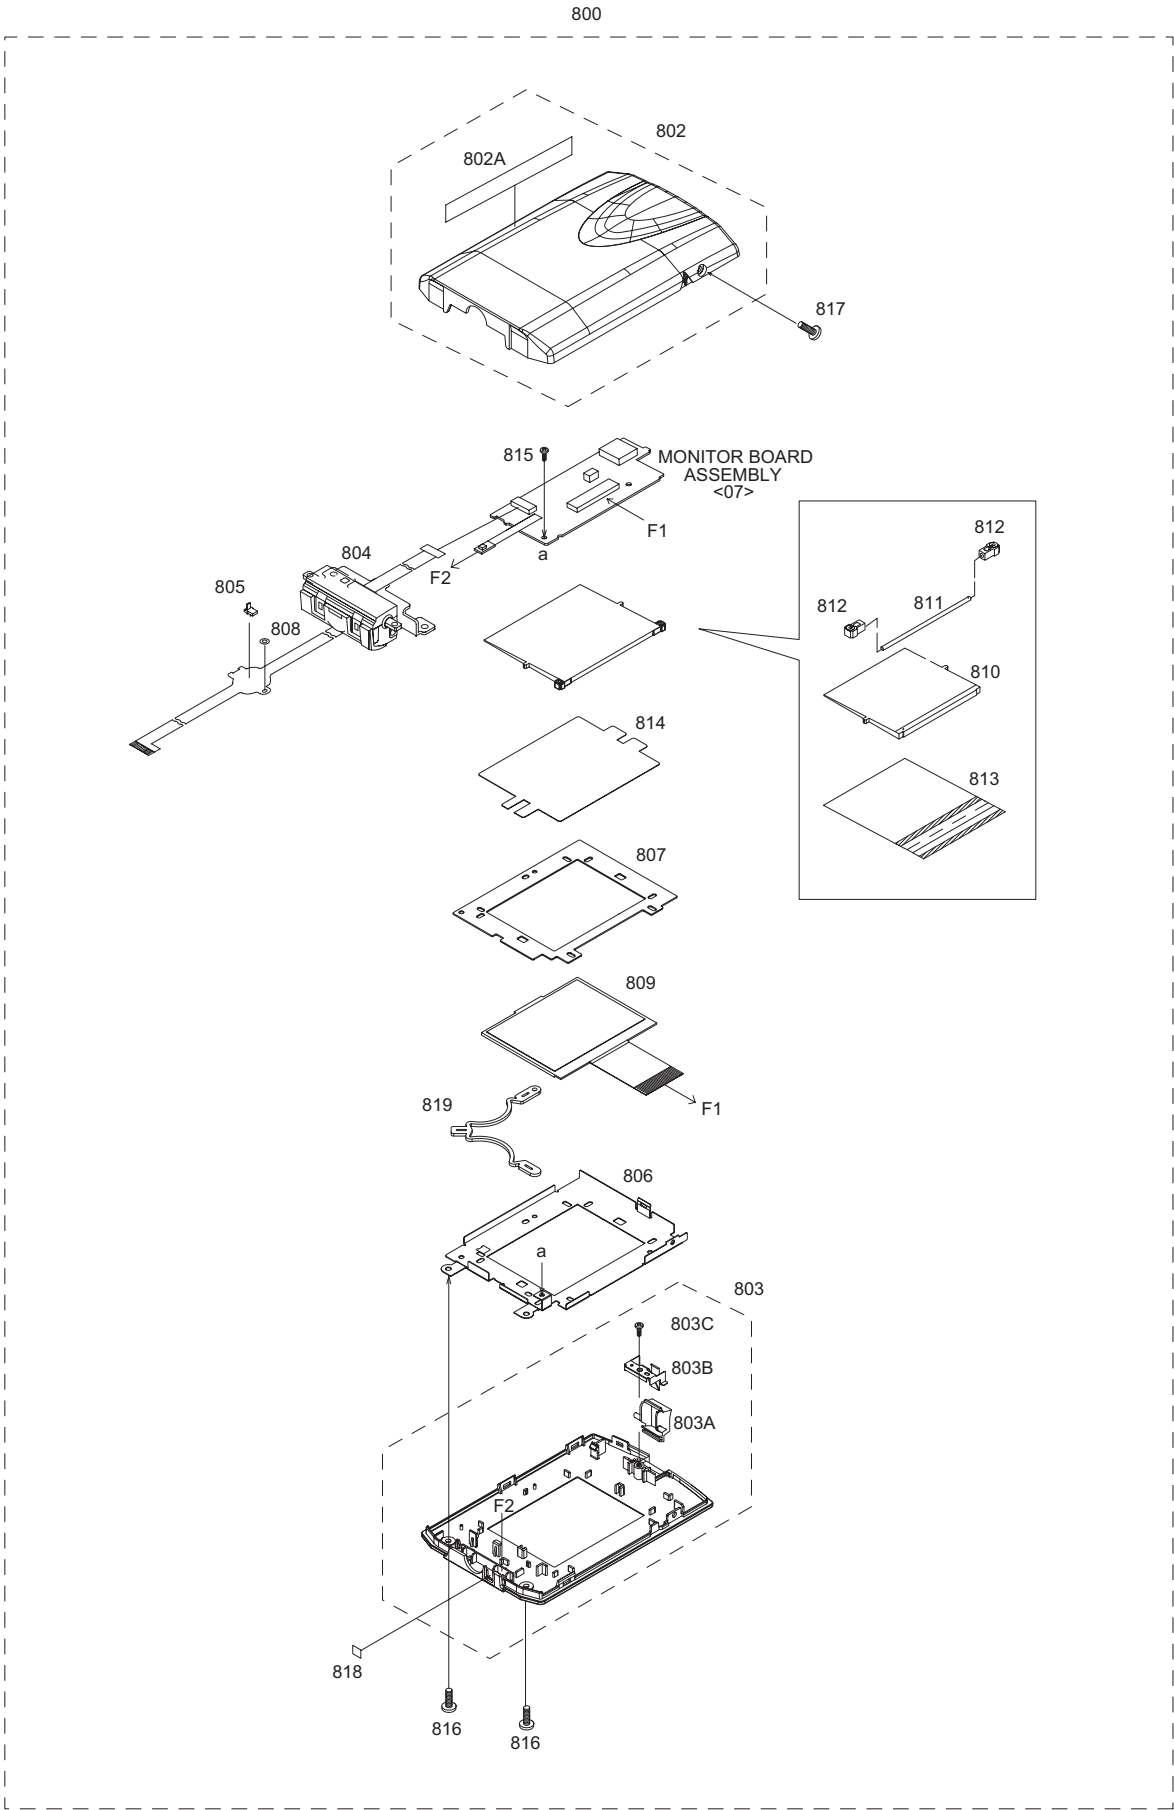

1.5 PACKING AND ACCESSORY ASSEMBLY <M5>

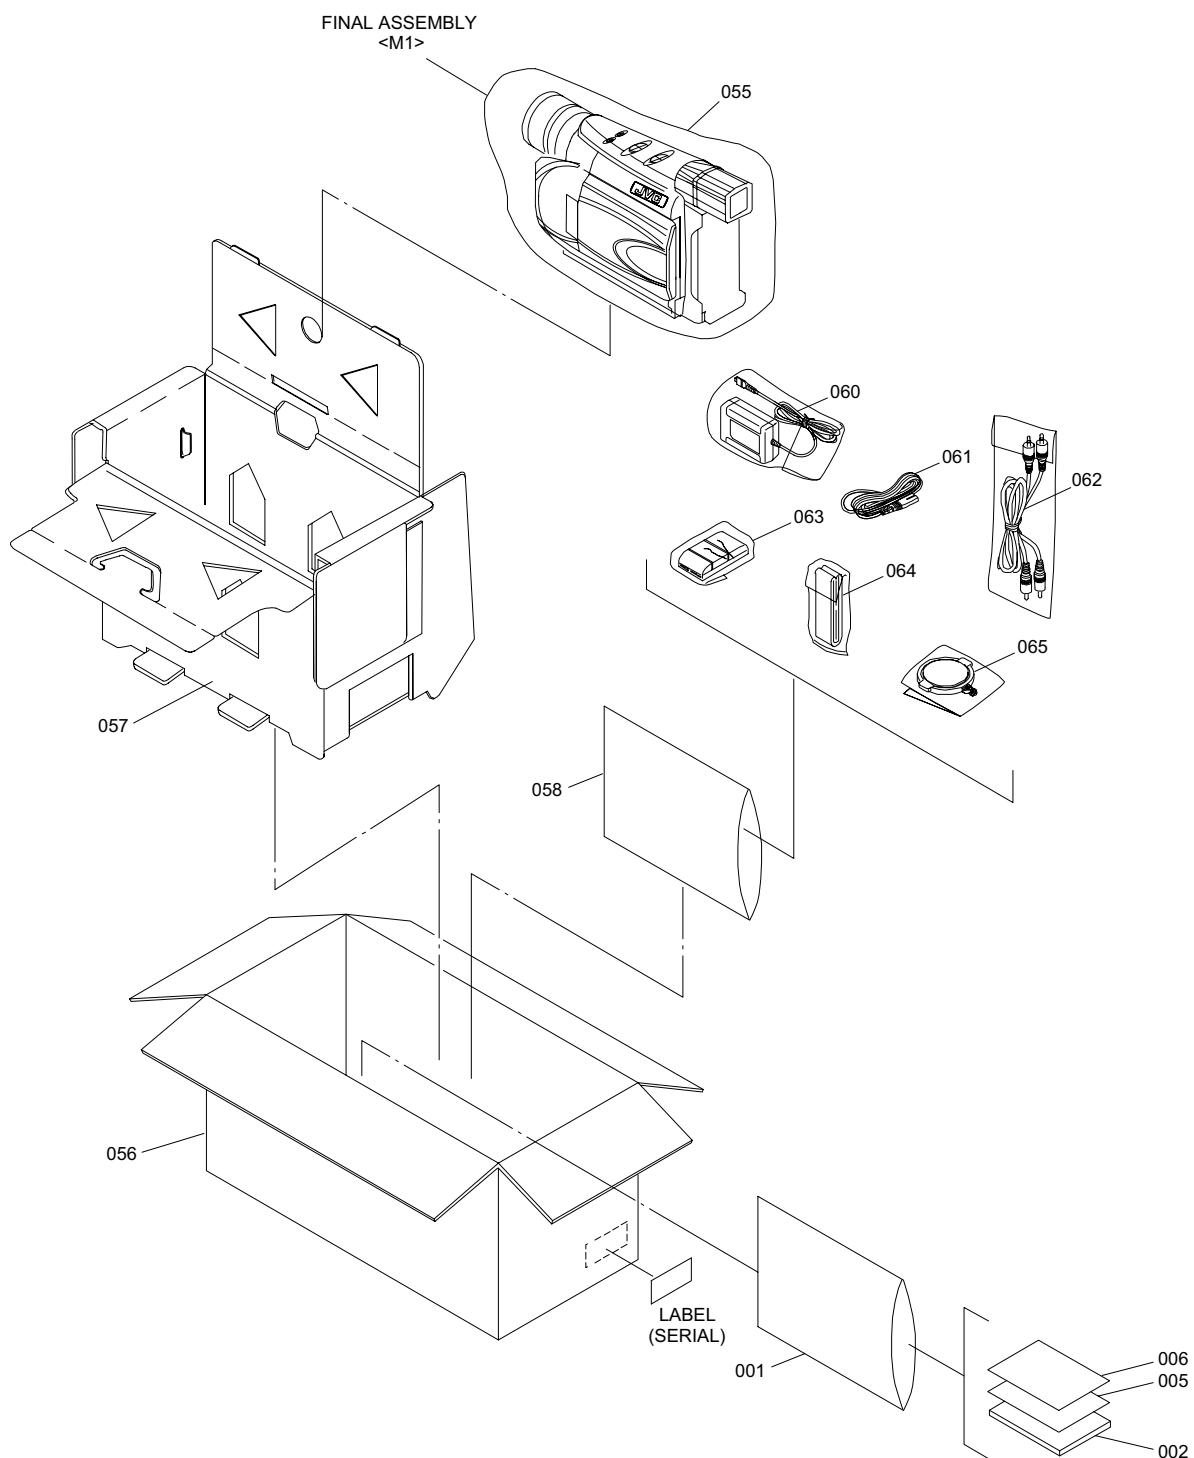

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

2. PARTS LIST

FINAL ASSEMBLY <M1>

△ Symbol No.	Part No.	Part Name	Description	Local
△ 102	LY20925-033A	LOWER CASE ASSY		
102A	LY40081-001A	CAP		
102B	LY20682-001B	GRIP BELT		
102C	LY30031-018A	SPECIAL SCREW	LOW-BELT	
102D	QAS0158-001	SPEAKER		
102E	LY42764-001C	HOLDER(SPEAKER)		
102F	QYSLSF2050ZA	TAP SCREW	LOW-HLDR(S) M2 x 5mm	
103	QUQK05-0607AA-E	FFC WIRE	6pin 7cm	
△ 104	LY21314-011B	F.COVER ASSY		
104A	LY34514-001A	HOOD		
104B	LY34515-001C	COVER (HOOD)		
104C	LY34517-008A	ORNAMENT(FRONT)		
104E	LY45014-001A	STICKER (F)		
104F	QYSLSF2060ZA	TAP SCREW	M2 x 6mm(x3)	
105	LY20927-015C	C.COVER(M) ASSY		
105A	LY32952-001A	P.PLATE(M)		
105B	LY44923-001B	LABEL(CAUTION)		
105C	LY42883-001B	MARK		
105D	LY43336-001A	SPRING		
105E	LY30031-019A	SPECIAL SCREW	(x2)	
△ 106	LY20950-002J	UPPER CASE(M)ASSY		
106A	LY20918-001D	BRACKET(MON.)		
106B	QYSLSP2020ZA	SCREW	M2 x 2mm(x3)	
107	LY43942-001B	SHEET(FPC)		
108	LY34518-007A	COV.(UPPER/M)ASSY		
108A	LY21315-002A	ORNAMENT(UPPER)		
109	LY32953-002A	C.COVER INSIDE		
110	LY34646-001D	TOP COVER ASSY		
111	QYSLSF2040RA	TAP SCREW	C.UPP-BKT M2 x 4mm	
112	QYSLSF2060ZA	TAP SCREW	COV UPPER M2 x 6mm(x2)	
113	LY30031-020A	SPECIAL SCREW	HING-BKT(x2)	
114	QYSLSP2030ZA	SCREW	M.FPC-BKT M2 x 3mm	
115	QYSLSF2060DA	TAP SCREW	FRONT-FRM M2 x 6mm	
116	QYSLSF2060DA	TAP SCREW	UPPER-FRM M2 x 6mm(x6)	
117	QYSLSP2030ZA	SCREW	UPPER-FRM M2 x 3mm	
118	QYSLSF2060DA	TAP SCREW	LOWER-FRM M2 x 6mm(x6)	
119	QYSLSF2060DA	TAP SCREW	C.COV-INSID M2 x 6mm	
△ 123	LY10393-002E	ZOOM UNIT		
124	QYSLSF2050ZA	TAP SCREW	ZOOM-LOWER M2 x 5mm(x4)	
126	LY34383-001A	MIC		
127	QYSLSF2060ZA	TAP SCREW	FRONT-MIC M2 x 6mm	
132	QYSLSF2050ZA	TAP SCREW	TOP PWB M2 x 5mm(x2)	
133	QYSLSF2050ZA	TAP SCREW	TOP-BKTVF M2 x 5mm(x2)	
134	QYSLSF2050ZA	TAP SCREW	TOP-VF FPC M2 x 5mm	
135	QYSLSF2060DA	TAP SCREW	FRM-BKTVF M2 x 6mm	
136	LY30031-036A	SPECIAL SCREW	FRM-BKTVF	
△ 154	LY21316-001F	FRAME ASSY		
154A	LY32973-001B	HOLDER(KNOB)		
154B	QYSLSF2060ZA	TAP SCREW	M2 x 6mm	
154C	LY30002-053A	COMPRES. SPRING		
154D	LY44810-001A	RUBBER(OP)		
155	LY33749-002A	REAR BOARD ASSY		
156	LY32966-001D	S.CASE(MAIN)		
157	WJT0170-002A-E	E-CARD WIRE		
158	QAL0450-002	FPC	FOR CCD	
159	QYSPSPU1720ZA	SCREW	SHLD-MECHA M1.7 x 2mm	
160	QYSPSTU1725MA	TAP SCREW	SHLD-MECHA M1.7 x 2.5mm	
161	LY30032-004A	SPECIAL SCREW	FRM-MECHA(x2)	
162	QYSLSF1750DA	TAP SCREW	MECHA-FRM M1.7 x 5mm	
163	LY30031-011A	SPECIAL SCREW	OP-FRM(x2)	
164	QYSLSF2060DA	TAP SCREW	M.PWB-FRM M2 x 6mm	
165	QYSLSF2060DA	TAP SCREW	JACK-FRM M2 x 6mm	
166	QYSLSF2060DA	TAP SCREW	M2 x 6mm	
167	LY34649-001B	BRACKET OP ASSY		
167A	LY44817-001A	CUSHION(OP)		
167B	LY44810-001A	RUBBER(OP)		
168	QYSLSF2060DA	TAP SCREW	BKT(OP)-FR M2 x 6mm(x2)	
194	LY31945-005A	COVER(JACK)		
△ 195	LY32955-003A	COVER(JIG)		
211	LYH30596-001A	CCD BASE ASSY		
212	LY34620-004A	OP BLOCK ASSY		
212A	PTY34620-002	FOCUS MOTOR UNIT		
212B	PTY34620-001	ZOOM MOTOR UNIT		
212C	PTY34620-006	AUTO IRIS UNIT		

△ Symbol No.	Part No.	Part Name	Description	Local
212D	PTY34620-535	TAP SCREW		
212E	PTY34620-530	TAP SCREW	(x6)	
212F	PTY34620-525	TAP SCREW	(x2)	
213	LY30031-038A	SPECIAL SCREW	(x2)	
214	LY44887-001A	SHEET		
215	LY44004-001A	OP LPF		
216	LY34621-001A	SPACER		

MECHANISM ASSEMBLY <M2>

△ Symbol No.	Part No.	Part Name	Description	Local
400	YMA0052A-E	MECHA(B) ASSY	OL-Y08490	
401	LY20612-004B	MAIN DECK ASSY		
402	LY31817-001A	CASSETTE GUIDE (L)		
403	LY31815-001A	SW LEVER (L)		
404	LY42581-001A	TORSION SPRING		
405	LY42722-004A	TAPPING SCREW		
408	LY31826-002A	MOTOR BRACKET ASSY		
409	LY20951-001A	WORM BRACKET		
410	LY42722-004A	TAPPING SCREW	(x3)	
411	LY31925-001A	WHEEL GEAR		
412	LY42730-001A	MIDDLE GEAR		
413	LY42521-002A	CANCEL LEVER ASSY		
414	LY42754-003A	SLIT WASHER	(x2)	
415	YQ20827-2-1	CONTROL CAM		
416	PQM30017-25	SLIT WASHER		
417	LY42733-002A	LOADING GEAR(T)ASSY		
418	LY42754-003A	SLIT WASHER		
419	LY42732-002A	LOADING GEAR(S)ASSY		
420	LY42754-003A	SLIT WASHER		
421	LY42403-001A	COVER PLATE		
422	LY42452-003A	LOADING RING ASSY		
423	LY42728-002A	TAPPING SCREW	(x4)	
424	LY10239-001A	GUIDE RAIL		
425	LY42728-002A	TAPPING SCREW	(x7)	
426	LY30161-001B	POLE BASE(S)ASSY		
427	LY30162-002A	POLE BASE(T)ASSY		
428	LY42523-003A	DRIVE LEVER ASSY		
429	LY44000-002A	SLANT ARM ASSY		
429A	LY43992-001A	TORSION SPRING(S)		
430	LY42754-003A	SLIT WASHER		
431	LY42739-003A	ROLLER BASE ASSY		
432	LY42722-004A	TAPPING SCREW		
433	LY42494-002B	LINK ARM ASSY		
434	PQM30017-25	SLIT WASHER		
435	LY45002-001A	PINCH ROLLER ARM ASSY		
436	PQM30017-25	SLIT WASHER		
437	LY42541-001C	TAKE UP GUIDE ARM ASSY		
438	LY42754-003A	SLIT WASHER		
439	LY42571-002A	TENSION ARM ASSY		
439A	LY42669-001A	TENSION SPRING		
440	LY42754-003A	SLIT WASHER		
441	YQ20797-1-5	MOTOR BASE		
442	LY42722-004A	TAPPING SCREW	(x2)	
443	YQ44460-2	TAPPING SCREW		
444	QAR0211-004	CAPSTAN MOTOR		
445	YQ44304-2	TAPPING SCREW	(x3)	
446	LY42731-001A	SLANT POLE BASE ASSY		
447	YQ44304-2	TAPPING SCREW		
448	YQ43710-2	TIMING BELT		
449	LY42678-004A	CENTER PULLEY UNIT		
450	LY42722-005A	TAPPING SCREW	(x2)	
451	LY42670-001A	SUPPLY CLUTCH ASSY		
452	LY42754-003A	SLIT WASHER		
453	YQ31861-1-7	REEL DISC		
454	LY42755-001A	WASHER		
455	LY31924-002A	TAKE UP GEAR		
456	LY42738-001A	BRAKE SUB GEAR		
457	LY42754-003A	SLIT WASHER	(x3)	
458	LY33747-001A	A/C HEAD UNIT		
459	QYSPSGU1750ZA	TAP SCREW	M1.7 x 5mm(x2)	
460	LY42517-003A	EJECT LEVER ASSY		
461	LY42754-003A	SLIT WASHER		

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local
462	YQ31833-1-1	LED GUIDE		
463	LY42722-004A	TAPPING SCREW		
464	LY42729-001A	DRUM SPACER		
465	LY42722-004A	TAPPING SCREW	(x2)	
466	QSW1179-002	ROTARY ENCODER		
467	LY42722-005A	TAPPING SCREW	(x4)	
468	LY31814-002A	LINK LEVER		
469	YDV2099E-CX	DRUM ASSY	JVC ONLY	
469A	LY10342-001A	CATCHER		
469B	QYSPSPU1735MA	SCREW	(x2)	
470	LY42722-004A	TAP SCREW	(x2)	
471	QYSPSPU1740ZA	SCREW	M1.7 x 4mm(x2)	
472	YU42051	BRUSH		
473	LY42722-006A	TAP SCREW		
481	LY31808-007B	CASSETTE HOUSING FINAL ASSY		
482	LY42722-006A	TAP SCREW	(x4)	
484	LY32326-002A	BRACKET(MECHA)		
485	LY42722-006A	TAP SCREW	(x2)	
487	LY31807-002A	SIDE BRACKET L		
488	LY42722-006A	TAP SCREW		
489	LY44193-002A	F.FRAME SA		
489A	LY33428-001B	TAPE GUIDE		
489B	LY44176-002A	TENSION SPRING		
490	QYSPSPU1725ZA	SCREW	M1.7 x 2.5mm(x2)	

VF ASSEMBLY <M3>

△ Symbol No.	Part No.	Part Name	Description	Local
700	VU06C01A	V.UNIT ASSY	FOR JAPAN	
701	LY34584-001C	GUIDE(LCD)		
702	QLD0358-001	LCD MODULE		
703	LY21330-001B	HOLDER(LCD)		
704	LY44848-001B	CUSHION(LCD)		
705	LY44844-001A	SHEET(POLA.1)		
706	LY44846-001A	SHEET(DIFF)		
707	LY34590-001C	CASE(B.LIGHT)		
708	LY44845-001A	SHEET(POLA.2)		
709	LY34591-001A	STOPER(POLA)		
710	LY44843-001B	SHEET(LENS)		
711	LY21333-001C	HOLDER(EYE)		
712	LY34589-001B	EYE CUP		
713	LY44847-001A	SHAFT(VF)		
714	LY30002-055A	COMPRES. SPRING		
715	LY44841-001D	LENS ASSY		
715A	LY44842-001B	LENS(VF)		
716	LY34593-001C	LEVER(VF)		
717	LY21332-001C	GUIDE(LENS)		
718	LY21336-001B	B.CASE(VF)		
719	LY21337-001B	U.CASE(VF)		
720	QYSLSF1750DA	TAP SCREW	M1.7 x 5mm(x2)	
721	LY30031-001A	SPECIAL SCREW	BKT-B.CASE(x2)	
722	LY34642-001B	VF BRACKET ASSY		
724	QAL0649-002	FPC	TO MAIN	
725	LY30031-016A	SPECIAL SCREW	BKT-U.CASE(x2)	
726	LY45163-001A	CUSHION(POLA)		
799	LY34844-002E	LCD UNIT ASSY		

MONITOR ASSEMBLY <M4>

△ Symbol No.	Part No.	Part Name	Description	Local
△ 800	LY34550-002C	MONITOR ASSY		
△ 802	LY34520-012A	M.COVER ASSY		
802A	LY44908-004A	STICKER (M)		
803	LY34521-001C	M.CASE ASSY		
803A	LY32967-001B	KNOB(LOCK)		
803B	LY32988-001A	LOCK SPRING		
803C	QYSLSF2050ZA	TAP SCREW	M2 x 5mm	
804	LY35000-001B	MON.HINGE ASSY		
805	NSW0245-001X	LEVER SWITCH		
806	LY21317-001B	S.CASE(2.5)		
807	LY44811-001B	FRAME(LCD)		

△ Symbol No.	Part No.	Part Name	Description	Local
808	LY44159-001A	WASHER		
809	QLD0345-001	LCD MODULE		
810	LY44832-001A	LIGHT SCREEN		
811	QLL0168-001	LAMP		
812	LY44850-001A	HOLDER(LAMP)	(x2)	
813	LY44833-001A	SHEET(REFLECT)		
814	LY44812-001B	DIFF.SHEET(2.5)		
815	LY30033-002A	SPE.SCREW(W)	MON.PWB	
816	QYSLSF2060DA	TAP SCREW	MON.CV-CAS M2 x 6mm(x2)	
817	QYSLSP2030ZA	SCREW	MON.CV-CAS M2 x 3mm	
818	LY44129-001A	SHEET(M.SENSOR)		
819	LY34522-001A	SPRING(LCD)		

PACKING AND ACCESSORY ASSEMBLY <M5>

△ Symbol No.	Part No.	Part Name	Description	Local
001	LY34452-001A	POLY BAG	DOCUMENT	
△ 002	LYT1525-001A	INST BOOK(EN)	(ENGLISH)	A
△ 002	LYT1525-002A	INST BOOK(GE)	(GERMAN)	B
△ 002	LYT1525-003A	INST BOOK(FR.DU)	(FRENCH.DUTCH)	B
△ 002	LYT1525-004A	INST BOOK(SP.IT)	(SPANISH.ITALIAN)	B
△ 002	LYT1525-007A	INST BOOK(RU.CZ)	(RUSSIAN.CZECH)	C
△ 002	LYT1525-008A	INST BOOK(PO.HU)	(POLISH.HUNGARIAN)	C
005	LYT0194-001B	Q.CARD		A
006	-----	WARRANTY CARD	BT-54027-1CAM	
055	QPC03003540P	POLY BAG	30cm x 35cm	
056	LY35287-002A	PACKING CASE	FOR JVM	
057	LY34612-001B	CUSHION		
058	LY34452-001A	POLY BAG	ACCESSORY	
△ 060	LY21104-001E	AC ADAPTER	AP-V14U	A
△ 060	LY21343-001B	AC ADAPTER	AP-V17U	B,C
△ 061	QMPP210-190-JR	POWER CORD	1.9m BLACK	A
062	QAM0511-001	AVV CABLE		
△ 063	LY10481-001B	BATTERY PACK ASSY	BN-V10U	
064	LY20186-008A	SHOULDER STRAP		
065	LY44924-001B	LENS CAP ASSY		

MAIN BOARD ASSEMBLY <01>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LYA10022-13C1	MAIN BOARD ASSY		
IC101	UPD703039-063-A	IC(MICRO C ROM)	FLASH	
IC102	25LC160-I/SN-X	IC		
IC102	or CAT25C16SI-X	IC		
IC103	RS5C314-X	IC		
IC104	BD4827FVE-W	IC		
△ IC1601	BD6637KV	IC	MDA_IC	
IC2001	MC74AC04DT-X	IC		
IC2001	or TC74AC04FT-X	IC(DIGITAL)		
IC2401	NJM2149V-X	IC		
IC3501	HA118224F	IC		
IC4001	JCY0184	IC	CAM&VTRDSP	
IC4003	UPD6467GR-567-X	IC(MICRO C ROM)		
IC4201	BA10324AF-XE	IC		
IC4201	or LM324ADR-X	IC		
IC4201	or S324-X	IC		
IC4202	BA10324AF-XE	IC		
IC4202	or LM324ADR-X	IC		
IC4202	or S324-X	IC		
IC4501	UPD16835AGS-X	IC		
IC4701	NJM2562F1-X	IC	N ONLY	
IC5201	HD49335F	IC		
IC5202	MN31121SAS-X	IC		
IC6001	FA3698F	IC		
IC7301	KCD-A300-QB	IC		
IC7302	SN74AHC1G08K-X	IC		
IC7302	or SN74AHC1G08DC-X	IC(DIGITAL)		
IC7302	or TC7SH08FU-X	IC(DIGITAL)		
Q101	or 2SB1462J/RS/-X	TRANSISTOR	UNREG	

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
Q101	or BC857BT-X	TRANSISTOR	UNREG		Q7001	PUMX1-W	PAIR TRANSISTOR		
Q102	DTC144EE-X	DIGI TRANSISTOR	P_ON		Q7001	or UMX1N-W	PAIR TRANSISTOR		
Q102	or UN9213J-X	DIGI TRANSISTOR	P_ON		Q7001	or XP4501-W	PAIR TRANSISTOR		
Q102	or PDTC144EE-X	DIGI TRANSISTOR	P_ON		Q7001	or BC847S-X	PAIR TRANSISTOR		
Q102	or BCR148T-X	DIGI TRANSISTOR	P_ON		Q7002	PUMX1-W	PAIR TRANSISTOR		
Q103	2SC4617/QR/-X	TRANSISTOR	CTL_ERASE		Q7002	or UMX1N-W	PAIR TRANSISTOR		
Q103	or BC847BT-X	TRANSISTOR	CTL_ERASE		Q7002	or XP4501-W	PAIR TRANSISTOR		
Q103	or 2SD2216J/QR/-X	TRANSISTOR	CTL_ERASE		Q7002	or BC847S-X	PAIR TRANSISTOR		
Q105	2SC4617/RS/-X	TRANSISTOR	TAPE_LED		Q7003	PUMX1-W	PAIR TRANSISTOR		
Q105	or BC847BT-X	TRANSISTOR	TAPE_LED		Q7003	or UMX1N-W	PAIR TRANSISTOR		
Q105	or 2SD2216J/RS/-X	TRANSISTOR	TAPE_LED		Q7003	or XP4501-W	PAIR TRANSISTOR		
Q114	DTC114EE-X	DIGI TRANSISTOR	LED_RV		Q7003	or BC847S-X	PAIR TRANSISTOR		
Q114	or BCR133T-X	DIGI TRANSISTOR	LED_RV		Q7301	2SA1774/QR/-X	TRANSISTOR	BWYOUT	
Q2001	DTA114TE-X	DIGI TRANSISTOR			Q7301	or 2SB1462J/QR/-X	TRANSISTOR	BWYOUT	
Q2001	or UN9115J-X	DIGI TRANSISTOR			Q7301	or BC857BT-X	TRANSISTOR	BWYOUT	
Q2001	or BCR129T-X	DIGI TRANSISTOR			Q7302	PUMX1-W	PAIR TRANSISTOR	VF_BL	
Q2007	PUMX1-W	PAIR TRANSISTOR			Q7302	or UMX1N-W	PAIR TRANSISTOR	VF_BL	
Q2007	or UMX1N-W	PAIR TRANSISTOR			Q7302	or BC847S-X	PAIR TRANSISTOR	VF_BL	
Q2007	or XP4501-W	PAIR TRANSISTOR							
Q2007	or BC847S-X	PAIR TRANSISTOR			△ D101	BAS40-05W-X	SB DIODE	LITHIUM	
Q2008	PUMT1-W	PAIR TRANSISTOR			△ D101	or RB715F-X	SB DIODE	LITHIUM	
Q2008	or BC856S-X	PAIR TRANSISTOR			D102	UDZS7.5B-X	Z DIODE	UNREG_BATT	
Q2008	or UMT1N-W	PAIR TRANSISTOR			D103	1SS355-X	SI DIODE	TU	
Q2008	or XP4401-W	PAIR TRANSISTOR			D103	or MA111-X	SI DIODE	TU	
Q2021	DTC144EE-X	DIGI TRANSISTOR			D104	1SS355-X	SI DIODE	SUP	
Q2021	or UN9213J-X	DIGI TRANSISTOR			D104	or MA111-X	SI DIODE	SUP	
Q2021	or PDTC144EE-X	DIGI TRANSISTOR			D105	MA8068-X	Z DIODE		
Q2021	or BCR148T-X	DIGI TRANSISTOR			D5201	1SS355-X	SI DIODE		
Q2022	DTC144EE-X	DIGI TRANSISTOR			D5201	or MA111-X	SI DIODE		
Q2022	or UN9213J-X	DIGI TRANSISTOR			D6301	RB160M-30-X	SB DIODE		
Q2022	or PDTC144EE-X	DIGI TRANSISTOR			D6601	1SS355-X	SI DIODE		
Q2022	or BCR148T-X	DIGI TRANSISTOR			D6601	or MA111-X	SI DIODE		
Q2023	2SC4617/QR/-X	TRANSISTOR			D6602	1SS355-X	SI DIODE		
Q2023	or 2SD2216J/QR/-X	TRANSISTOR			D6602	or MA111-X	SI DIODE		
Q2023	or BC847BT-X	TRANSISTOR			D6603	1SS355-X	SI DIODE		
Q2071	2SC4617/QR/-X	TRANSISTOR			D6603	or MA111-X	SI DIODE		
Q2071	or 2SD2216J/QR/-X	TRANSISTOR			D6604	1SS355-X	SI DIODE		
Q2071	or BC847BT-X	TRANSISTOR			D6604	or MA111-X	SI DIODE		
Q2401	DTC144EE-X	DIGI TRANSISTOR			D6605	UDZS7.5B-X	Z DIODE		
Q2401	or UN9213J-X	DIGI TRANSISTOR			D6606	UDZS5.1B-X	Z DIODE		
Q2401	or PDTC144EE-X	DIGI TRANSISTOR			D6701	RB160M-30-X	SB DIODE		
Q2401	or BCR148T-X	DIGI TRANSISTOR			D6702	RB160M-30-X	SB DIODE		
Q3501	XP4501-W	PAIR TRANSISTOR							
Q3501	or PUMX1-W	PAIR TRANSISTOR			C101	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q3501	or BC847S-X	PAIR TRANSISTOR			C102	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q3501	or UMX1N-W	PAIR TRANSISTOR			C103	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q3502	XP4501-W	PAIR TRANSISTOR			C104	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q3502	or PUMX1-W	PAIR TRANSISTOR			C105	NCB21CK-224X	C CAPACITOR	0.22uF 16V K	
Q3502	or BC847S-X	PAIR TRANSISTOR			C107	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q3502	or UMX1N-W	PAIR TRANSISTOR			C108	NBE21AM-225X	TA E CAPACITOR	2.2uF 10V M	
Q3901	BC856S-X	PAIR TRANSISTOR			C109	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q3901	or PUMT1-W	PAIR TRANSISTOR			C110	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
Q3901	or UMT1N-W	PAIR TRANSISTOR			C112	NEAF0JM-226X	E CAPACITOR	22uF 6.3V M	
Q3901	or XP4401-W	PAIR TRANSISTOR			C113	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q4201	2SC4617/QR/-X	TRANSISTOR			C114	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q4201	or 2SD2216J/QR/-X	TRANSISTOR			C115	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q4201	or BC847BT-X	TRANSISTOR			C118	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q4202	2SC4617/QR/-X	TRANSISTOR			C119	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q4202	or 2SD2216J/QR/-X	TRANSISTOR			C120	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q4202	or BC847BT-X	TRANSISTOR			C121	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q4501	DTC114EE-X	DIGI TRANSISTOR			C122	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q4501	or UN9211J-X	DIGI TRANSISTOR			C123	NDC31HJ-100X	C CAPACITOR	10pF 50V J	
Q4501	or PDTC114EE-X	DIGI TRANSISTOR			C124	NDC31HJ-120X	C CAPACITOR	12pF 50V J	
Q4501	or BCR133T-X	DIGI TRANSISTOR			C125	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6101	QS6U24-W	MOS FET			C126	NDC31HJ-100X	C CAPACITOR	10pF 50V J	
Q6201	QS6U24-W	MOS FET			C127	NCB31CK-333X	C CAPACITOR	0.033uF 16V K	
Q6301	FDC6506P-X	MOS FET			C128	NCB21CK-474X	C CAPACITOR	0.47uF 16V K	
Q6401	QS6U24-W	MOS FET			C129	NCB31CK-333X	C CAPACITOR	0.033uF 16V K	
Q6501	QS6U24-W	MOS FET			C131	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q6604	DTC144EE-X	DIGI TRANSISTOR			C132	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q6604	or UN9213J-X	DIGI TRANSISTOR			C133	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q6604	or PDTC144EE-X	DIGI TRANSISTOR			C134	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q6604	or BCR148T-X	DIGI TRANSISTOR			C138	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6701	RSQ035P03-W	MOS FET			C140	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6702	2SC4097/QR/-X	TRANSISTOR			C142	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
Q6702	or BC817-25W-X	TRANSISTOR			C143	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
Q6802	2SB1121/ST/-X	TRANSISTOR			C147	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
Q6803	DTA144EUA-X	DIGI TRANSISTOR			C1201	NCB31HK-102X	C CAPACITOR	1000pF 50V K	

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C1202	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4019	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1205	NCB31EK-153X	C CAPACITOR	0.015uF 25V K		C4021	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1206	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4023	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1601	NCB31EK-223X	C CAPACITOR	0.022uF 25V K		C4026	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C1602	NCB31EK-223X	C CAPACITOR	0.022uF 25V K		C4027	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1603	NCB31EK-223X	C CAPACITOR	0.022uF 25V K		C4028	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1604	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4030	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1605	NCB31HK-681X	C CAPACITOR	680pF 50V K		C4031	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1606	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4032	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1607	NCB21CK-474X	C CAPACITOR	0.47uF 16V K		C4033	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1608	NCB31HK-152X	C CAPACITOR	1500pF 50V K		C4035	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1609	NCB21CK-334X	C CAPACITOR	0.33uF 16V K		C4037	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1610	NCB31HK-682X	C CAPACITOR	6800pF 50V K		C4038	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1611	NCB31HK-682X	C CAPACITOR	6800pF 50V K		C4039	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1612	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C4040	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1613	NDC31HJ-101X	C CAPACITOR	100pF 50V J		C4041	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1614	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C4042	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1615	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C4045	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1616	NCB21EK-224X	C CAPACITOR	0.22uF 25V K		C4046	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C1617	NCB21EK-224X	C CAPACITOR	0.22uF 25V K		C4047	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1618	NCB31CK-683X	C CAPACITOR	0.068uF 16V K		C4048	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C1619	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C4049	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C1628	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4052	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C1629	NCB21EK-224X	C CAPACITOR	0.22uF 25V K		C4053	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2001	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4054	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2002	NFV91HJ-183X	MPPS CAPACITOR	0.018uF 50V J		C4055	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2003	NDC31HJ-331X	C CAPACITOR	330pF 50V J		C4201	NEAF1HM-225X	E CAPACITOR	2.2uF 50V M	
C2004	NEAF0JM-226X	E CAPACITOR	22uF 6.3V M		C4202	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C2005	NCB21CK-105X	C CAPACITOR	1uF 16V K		C4203	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2021	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C4206	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2022	NBE20JM-156X	TA E CAPACITOR	15uF 6.3V M		C4207	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C2023	NBP21CM-105X	TA E CAPACITOR	1uF 16V M		C4209	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2024	NCB31HK-102X	C CAPACITOR	1000pF 50V K		C4210	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C2025	NCB21CK-105X	C CAPACITOR	1uF 16V K		C4211	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2026	NCB31EK-222X	C CAPACITOR	2200pF 25V K		C4252	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2027	NCB21CK-474X	C CAPACITOR	0.47uF 16V K		C4502	NDC31HJ-330X	C CAPACITOR	33pF 50V J	
C2028	NCB21CK-105X	C CAPACITOR	1uF 16V K		C4503	NCB31CK-333X	C CAPACITOR	0.033uF 16V K	
C2029	NCB21CK-105X	C CAPACITOR	1uF 16V K		C4504	NCB31CK-333X	C CAPACITOR	0.033uF 16V K	
C2031	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C4505	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C2032	NCB31HK-472X	C CAPACITOR	4700pF 50V K		C4506	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C2033	NBE20JM-475X	TA E CAPACITOR	4.7uF 6.3V M		C4507	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2034	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C4508	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C2035	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M		C4509	NBE21AM-106X	TA E CAPACITOR	10uF 10V M	
C2036	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C4510	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C2038	NCB21CK-474X	C CAPACITOR	0.47uF 16V K		C4704	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C2040	NDC31HJ-680X	C CAPACITOR	68pF 50V J		C4706	NEAF0GM-107X	E CAPACITOR	100uF 4V M	
C2051	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C4707	NEAF0GM-336X	E CAPACITOR	33uF 4V M	
C2071	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C4708	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C2072	NCB31EK-222X	C CAPACITOR	2200pF 25V K		C4709	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C2401	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C5201	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C2402	NCB21CK-105X	C CAPACITOR	1uF 16V K		C5203	NEAF1CM-106X	E CAPACITOR	10uF 16V M	
C2403	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C5204	NCB11EK-105X	C CAPACITOR	1uF 25V K	
C2404	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5207	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3506	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C5209	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3507	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C5211	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3508	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C5212	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3509	NDC31HJ-221X	C CAPACITOR	220pF 50V J		C5213	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3510	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C5214	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3512	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		C5215	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C3513	NCB31CK-223X	C CAPACITOR	0.022uF 16V K		C5216	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C3514	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C5218	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3515	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C5219	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C3516	NDC31HJ-100X	C CAPACITOR	10pF 50V J		C5220	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C3902	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		C5221	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C3903	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J		C5222	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C4002	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5223	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C4003	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5224	NCB11EK-105X	C CAPACITOR	1uF 25V K	
C4004	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5225	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C4005	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5226	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C4007	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C5231	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4008	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6003	NEAF1CM-106X	E CAPACITOR	10uF 16V M	
C4009	NDC31HG-100X	C CAPACITOR	10pF 50V G		C6021	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4010	NDC31HG-100X	C CAPACITOR	10pF 50V G		C6022	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4012	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6023	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4013	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6024	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4015	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6025	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4017	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6026	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4018	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C6027	NCB31HK-472X	C CAPACITOR	4700pF 50V K	

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C6029	NCB31HK-102X	C CAPACITOR	1000pF 50V K		R114	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C6030	NCB31HK-102X	C CAPACITOR	1000pF 50V K		R115	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6031	NCB31HK-102X	C CAPACITOR	1000pF 50V K		R116	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C6032	NCB31HK-102X	C CAPACITOR	1000pF 50V K		R117	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6033	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R118	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6034	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R119	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6035	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R120	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
C6036	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R121	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
C6037	NCB31EK-104X	C CAPACITOR	0.1uF 25V K		R122	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
C6038	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R127	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
C6039	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R128	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
C6040	NCB31EK-473X	C CAPACITOR	0.047uF 25V K		R129	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
C6041	NCB31EK-473X	C CAPACITOR	0.047uF 25V K		R130	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
C6042	NCB31EK-473X	C CAPACITOR	0.047uF 25V K		R131	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
C6043	NCB31CK-683X	C CAPACITOR	0.068uF 16V K		R132	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6044	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R133	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6045	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R134	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
C6046	NCB31HK-561X	C CAPACITOR	560pF 50V K		R135	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
C6101	NCB21CK-105X	C CAPACITOR	1uF 16V K		R136	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6103	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		R137	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6104	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R138	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
C6201	NCB21CK-105X	C CAPACITOR	1uF 16V K		R140	NRSA63J-753X	MG RESISTOR	75kΩ 1/16W J	
C6203	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		R141	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
C6204	NCB31HK-102X	C CAPACITOR	1000pF 50V K		R142	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6301	NCB11CK-225X	C CAPACITOR	2.2uF 16V K		R143	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
C6303	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		R144	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
C6304	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R145	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6401	NCB21CK-105X	C CAPACITOR	1uF 16V K		R147	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
C6403	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R148	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6405	NCB31CK-683X	C CAPACITOR	0.068uF 16V K		R149	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6501	NCB21CK-105X	C CAPACITOR	1uF 16V K		R150	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6503	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R151	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6505	NCB21CK-105X	C CAPACITOR	1uF 16V K		R152	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6602	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R153	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6603	NCB11EK-105X	C CAPACITOR	1uF 25V K		R154	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6606	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R155	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C6607	NCB11EK-105X	C CAPACITOR	1uF 25V K		△ R156	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6701	NCB21CK-105X	C CAPACITOR	1uF 16V K		R158	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6703	NCB21CK-105X	C CAPACITOR	1uF 16V K		R159	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C6705	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R160	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6801	NDC31HJ-101X	C CAPACITOR	100pF 50V J		R163	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C6802	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R164	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
C6803	NCF21CZ-105X	C CAPACITOR	1uF 16V Z		R165	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C6804	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R166	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C7001	NEAF1EM-475X	E CAPACITOR	4.7uF 25V M		R167	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
C7002	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R168	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
C7003	NEAF1CM-106X	E CAPACITOR	10uF 16V M		R169	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C7004	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R170	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C7005	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R171	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
C7006	NCB21CK-105X	C CAPACITOR	1uF 16V K		R172	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
C7007	NCB21CK-105X	C CAPACITOR	1uF 16V K		R173	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
C7008	NCB21CK-105X	C CAPACITOR	1uF 16V K		R174	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
C7009	NDC31HJ-330X	C CAPACITOR	33pF 50V J		R175	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
C7010	NDC31HJ-330X	C CAPACITOR	33pF 50V J		R176	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C7011	NDC31HJ-330X	C CAPACITOR	33pF 50V J		R177	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C7302	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R178	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C7303	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R179	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
C7304	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R180	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C7306	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R190	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
C7307	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R191	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C7308	NCB21CK-334X	C CAPACITOR	0.33uF 16V K		R192	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C7309	NCB21CK-334X	C CAPACITOR	0.33uF 16V K		R193	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C7311	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R198	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C7312	NEAF1CM-106X	E CAPACITOR	10uF 16V M		R1601	NRV142F-R33X	CMF RESISTOR	0.33Ω 1/4W F	
C7313	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R1602	NRV142F-R33X	CMF RESISTOR	0.33Ω 1/4W F	
R101	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R1603	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R102	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R1604	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R103	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R1605	NRSA63J-684X	MG RESISTOR	680kΩ 1/16W J	
R105	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R1606	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J	
R106	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		R1607	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R107	NRVA63D-153X	CMF RESISTOR	15kΩ 1/16W D		R1608	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R108	NRVA63D-243X	CMF RESISTOR	24kΩ 1/16W D		R1609	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J	
R109	NRVA63D-183X	CMF RESISTOR	18kΩ 1/16W D		R1610	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R110	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R1611	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J	
R111	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J		R1612	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J	
R112	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R1613	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R113	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R1614	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J	
					R1615	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R1616	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J		R4211	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R1617	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R4214	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R1618	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R4215	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J	
R1619	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R4216	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2001	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R4217	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2002	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R4219	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R2003	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R4221	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R2004	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J		R4222	NRSA63J-184X	MG RESISTOR	180kΩ 1/16W J	
R2005	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J		R4223	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R2006	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R4224	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2011	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		△ R4501	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2012	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		△ R4502	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2021	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		△ R4503	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2022	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J		△ R4504	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2023	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J		R4505	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2024	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R4507	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2025	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J		R4508	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2027	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R4509	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R2028	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R4516	NRSA63J-271X	MG RESISTOR	270Ω 1/16W J	
R2030	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R4527	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2031	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R4701	NRSA63J-131X	MG RESISTOR	130Ω 1/16W J	
R2051	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R4704	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R2071	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R4706	NRSA63D-750X	MG RESISTOR	75Ω 1/16W D	
R2072	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R4710	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R2401	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R4714	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2402	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R4715	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2403	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R5201	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R3501	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R5203	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R3502	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R5204	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R3506	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R5205	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R3507	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R5206	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R3508	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R5208	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R3901	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J		R5212	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3902	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J		R5214	NRSA63J-121X	MG RESISTOR	120Ω 1/16W J	
R3903	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J		R5218	NQR0360-001X	FERRITE BEADS		
R4001	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R5219	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R4002	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J		R5220	NQR0360-001X	FERRITE BEADS		
R4003	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		R5221	NQR0360-001X	FERRITE BEADS		
R4004	NRSA63D-682X	MG RESISTOR	6.8kΩ 1/16W D		R6007	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R4009	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D		R6008	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R4010	NRSA63D-682X	MG RESISTOR	6.8kΩ 1/16W D		R6027	NRSA63D-153X	MG RESISTOR	15kΩ 1/16W D	
R4015	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R6028	NRSA63D-681X	MG RESISTOR	680Ω 1/16W D	
R4019	NRSA63D-272X	MG RESISTOR	2.7kΩ 1/16W D		R6029	NRSA63D-912X	MG RESISTOR	9.1kΩ 1/16W D	
R4020	NRSA63D-221X	MG RESISTOR	220Ω 1/16W D		R6030	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R4021	NRSA63D-101X	MG RESISTOR	100Ω 1/16W D		R6031	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4022	NRSA63D-152X	MG RESISTOR	1.5kΩ 1/16W D		R6033	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R4024	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R6034	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R4025	NRSA63D-152X	MG RESISTOR	1.5kΩ 1/16W D		R6035	NRSA63D-184X	MG RESISTOR	180kΩ 1/16W D	
R4027	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R6036	NRSA63D-184X	MG RESISTOR	180kΩ 1/16W D	
R4028	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R6037	NRSA63D-562X	MG RESISTOR	5.6kΩ 1/16W D	
R4029	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R6038	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R4030	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R6039	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R4031	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R6044	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J	
R4032	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R6045	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R4033	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R6046	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R4034	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R6047	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R4035	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R6102	NRVA63D-223X	CMF RESISTOR	22kΩ 1/16W D	
R4037	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R6103	NRVA63D-103X	CMF RESISTOR	10kΩ 1/16W D	
R4038	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R6110	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R4039	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R6202	NRVA63D-103X	CMF RESISTOR	10kΩ 1/16W D	
R4040	NRSA63J-121X	MG RESISTOR	120Ω 1/16W J		R6203	NRVA63D-123X	CMF RESISTOR	12kΩ 1/16W D	
R4041	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D		R6204	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R4042	NRSA63D-122X	MG RESISTOR	1.2kΩ 1/16W D		R6302	NRVA63D-183X	CMF RESISTOR	18kΩ 1/16W D	
R4043	NRSA63D-122X	MG RESISTOR	1.2kΩ 1/16W D		R6303	NRVA63D-472X	CMF RESISTOR	4.7kΩ 1/16W D	
R4044	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D		R6310	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R4045	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R6402	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R4046	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R6403	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R4047	NQR0406-003X	FERRITE BEADS			R6405	NRSA63J-753X	MG RESISTOR	75kΩ 1/16W J	
R4201	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R6406	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R4202	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R6502	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R4203	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R6503	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R4204	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R6505	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R4205	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J		R6506	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R4206	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R6507	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J	
R4207	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R6602	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J	
R4208	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R6603	NRVA63D-392X	CMF RESISTOR	3.9kΩ 1/16W D	
R4209	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R6604	NRVA63D-683X	CMF RESISTOR	68kΩ 1/16W D	
R4210	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J		R6612	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R6613	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J		L2001	NQL315K-470X	INDUCTOR	47uH K	
R6619	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		L2003	NQL914K-470X	INDUCTOR	47uH K	
R6620	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L2004	NQR0406-003X	FERRITE BEADS		
R6621	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L2005	NQR0406-003X	FERRITE BEADS		
R6701	NRZ0098-R20X	MG RESISTOR	0.2Ω		L2021	NQR0006-001X	FERRITE BEADS		
R6703	NRVA63D-153X	CMF RESISTOR	15kΩ 1/16W D		L2022	NQR0406-003X	FERRITE BEADS		
R6706	NRVA63D-823X	CMF RESISTOR	82kΩ 1/16W D		L2023	NQR0406-003X	FERRITE BEADS		
R6707	NRVA63D-333X	CMF RESISTOR	33kΩ 1/16W D		L2052	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6708	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J		L2072	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R6709	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		L2401	NQR0006-001X	FERRITE BEADS		
R6710	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		L3502	NQR0006-001X	FERRITE BEADS		
R6711	NRS016J-121X	MG RESISTOR	120Ω 1W J		L3503	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R6712	NRS016J-121X	MG RESISTOR	120Ω 1W J		L4001	NQR0006-001X	FERRITE BEADS		
R6713	NRS016J-121X	MG RESISTOR	120Ω 1W J		L4002	NQR0006-001X	FERRITE BEADS		
R6802	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		L4201	NQR0006-001X	FERRITE BEADS		
R6803	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L4501	NQR0006-001X	FERRITE BEADS		
R6804	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J		L4502	NQL914K-220X	INDUCTOR	22uH K	
R6805	NRVA63D-104X	CMF RESISTOR	100kΩ 1/16W D		L4701	NQR0006-001X	FERRITE BEADS		
R6806	NRVA63D-124X	CMF RESISTOR	120kΩ 1/16W D		L5201	NQL315K-220X	INDUCTOR	22uH K	
R6807	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		L5203	NQR0006-001X	FERRITE BEADS		
R6808	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		L5204	NQR0006-001X	FERRITE BEADS		
R6811	NRVA63D-154X	CMF RESISTOR	150kΩ 1/16W D		L6001	NQL73EM-100X	INDUCTOR	10uH M	
R7001	NRSA63D-123X	MG RESISTOR	12kΩ 1/16W D		L6002	NQL73EM-100X	INDUCTOR	10uH M	
R7002	NRSA63D-103X	MG RESISTOR	10kΩ 1/16W D		L6101	NQL82EN-330X	INDUCTOR	33uH N	
R7003	NRSA63D-242X	MG RESISTOR	2.4kΩ 1/16W D		L6201	NQL82EN-470X	INDUCTOR	47uH N	
R7004	NRSA63D-822X	MG RESISTOR	8.2kΩ 1/16W D		L6301	NQL52EM-220X	INDUCTOR	22uH M	
R7005	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		L6401	NQL52EM-470X	INDUCTOR	47uH M	
R7006	NRSA63D-242X	MG RESISTOR	2.4kΩ 1/16W D		L6501	NQL52EM-470X	INDUCTOR	47uH M	
R7007	NRSA63D-822X	MG RESISTOR	8.2kΩ 1/16W D		L6601	NQL52EM-221X	INDUCTOR	220uH M	
R7008	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		L6701	NQL73EM-100X	INDUCTOR	10uH M	
R7009	NRSA63D-242X	MG RESISTOR	2.4kΩ 1/16W D		L7001	NQL315K-220X	INDUCTOR	22uH K	
R7010	NRSA63D-822X	MG RESISTOR	8.2kΩ 1/16W D		L7002	NQL315K-220X	INDUCTOR	22uH K	
R7011	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		L7301	NQR0006-001X	FERRITE BEADS		
R7012	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		L7302	NQL315K-220X	INDUCTOR	22uH K	
R7013	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		CN1	QGF0534F2-10X	CONNECTOR	DRUM MOTOR FFC/FPC (1-10)	
R7014	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		CN2	QGF0534F2-14X	CONNECTOR	SENSOR FFC/FPC (1-14)	
R7015	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		CN3	QGF0503F8-18X	CONNECTOR	CAPSTAN M. FFC/FPC (1-18)	
R7016	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		CN4	QGA1201F2-02X	CONNECTOR	LOADING M. W-B (1-2)	
R7017	NRSA63D-333X	MG RESISTOR	33kΩ 1/16W D		CN5	QGF0534F2-11X	CONNECTOR	VIDEO HEAD FFC/FPC (1-11)	
R7018	NRSA63J-150X	MG RESISTOR	15Ω 1/16W J		CN7	QGF0534F2-11X	CONNECTOR	A/C HEAD FFC/FPC (1-11)	
R7019	NRSA63J-150X	MG RESISTOR	15Ω 1/16W J		CN8	QGA1201C2-02X	CONNECTOR	MIC W-B (1-2)	
R7020	NRSA63J-150X	MG RESISTOR	15Ω 1/16W J		CN13	QGF0507F8-14X	CONNECTOR	JVC Z OPE FFC/FPC (1-14)	
R7301	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		CN15	QGF0534F2-24X	CONNECTOR	OP FFC/FPC (1-24)	
R7302	NRSA63D-821X	MG RESISTOR	820Ω 1/16W D		CN16	QGF0534F2-25X	CONNECTOR	LCD 2SP FFC/FPC (1-25)	
R7303	NRSA63J-121X	MG RESISTOR	120Ω 1/16W J		CN18	QGF0536C3-06W	CONNECTOR	TOP OPE FFC/FPC (1-6)	
R7304	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		CN22	QGF0534F2-14X	CONNECTOR	CCD FFC/FPC (1-14)	
R7308	NRSA63J-514X	MG RESISTOR	510kΩ 1/16W J		CN25	QGB0801M1-20X	CONNECTOR	JV/PA JIG B-B (1-20)	
R7309	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		CN27	QGA1201C2-02X	CONNECTOR	SPEAKER 2P W-B (1-2)	
R7311	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		CN28	QGA1002F1-10X	CONNECTOR	REAR UNIT W-B (1-10)	
R7313	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		CN7301	QGF0534F2-14X	CONNECTOR	BWVF FFC/FPC (1-14)	
R7314	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		△ F1601	NMFZ007-R20X-K	FUSE	UNREG 0.2A 50V	
R7316	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		△ F1602	NMFZ007-R50X-K	FUSE	REG 3.2V 0.5A 50V	
R7318	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		△ F6001	NMFZ007-2R0X-K	FUSE	2A 32V	
R7325	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		△ F6301	NMFZ007-1R6X-K	FUSE	1.6A 32V	
R7327	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D		△ F6302	NMFZ019-R40X-H	FUSE	0.4A 32V	
R7328	NRSA63D-472X	MG RESISTOR	4.7kΩ 1/16W D		△ F6801	NMFZ019-R25X-H	FUSE	0.25A 32V	
R7331	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J		△ J101	QAB0050-001	LI BATTERY	LITHIUM CR2032 3V 220mAh	
R7332	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J		J504	LY33041-001A	JACK UNIT	AV OUT	
R7333	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		Q101	2SA1774/RS/-X	TRANSISTOR	UNREG	
R7335	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		X101	NAX0571-001	CRYSTAL	16.000MHz	
R7336	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		X102	NAX0564-001X	CRYSTAL	32.768kHz	
R7344	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		X4001	QAX0783-001	CRYSTAL		
R7345	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		OT1	LY30016-049A	SPACER-A	AUDIO PB	
RA101	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4		SD1	LY43421-001B	SHIELD PLATE	SHIELD	
RA102	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4		WR1	WJV0081-001A-E	E-PRIMARY WIRE	AUDIO PB	
RA103	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4						
RA104	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4						
RA107	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4						
RA108	NRZ0038-222X	NET RESISTOR	2.2kΩ 1/16W J x4						
RA109	NRZ0038-474X	NET RESISTOR	470kΩ 1/16W J x4						
RA110	NRZ0038-474X	NET RESISTOR	470kΩ 1/16W J x4						
RA111	NRZ0038-474X	NET RESISTOR	470kΩ 1/16W J x4						
RA112	NRZ0038-104X	NET RESISTOR	100kΩ 1/16W J x4						
RA6001	NRZ0038-102X	NET RESISTOR	1kΩ 1/16W J x4						
L101	NQL315K-220X	INDUCTOR	22uH K						
L1603	NQL315K-470X	INDUCTOR	47uH K						
L1604	NQL315K-470X	INDUCTOR	47uH K						
CCD BOARD ASSEMBLY <02>									
△ Symbol No.	Part No.	Part Name	Description	Local					
PW2	LYA10022-01D2	CCD BOARD ASSY							
Q5301	2SC3931/CD/-X	TRANSISTOR							
Q5301	or 2SC4774/RS/-X	TRANSISTOR							
Q5301	or 2SC5345U/Y/-X	TRANSISTOR							

MODEL	MARK
GR-FXM42EK	A
GR-FXM42EX	B
GR-FXM42EZ	C

△ Symbol No.	Part No.	Part Name	Description	Local
C5301	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C5302	NCB11CK-225X	C CAPACITOR	2.2uF 16V K	
C5303	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C5304	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
R5301	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R5302	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
CN5301	QGF0501F5-14X	CONNECTOR	M5A/C FFC/FPC (1-14)	

TOP BOARD ASSEMBLY <04>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LYA20018-02A	TOP BOARD ASSY		
R401	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R402	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R403	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J	
R404	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
CN401	QGF0503F7-06X	CONNECTOR	TOP OPE FFC/FPC (1-6)	
DI401	SML-010LT-X	LED		
S401	NSW0198-001X	TACT SWITCH	REW	
S402	NSW0198-001X	TACT SWITCH	FF	
S403	NSW0198-001X	TACT SWITCH	PLAY/STILL	
S404	NSW0198-001X	TACT SWITCH	STOP/EJECT	

VF BOARD ASSEMBLY <05>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LYA20016-02A	BWVF BOARD ASSY		
D7401	E1S35AW0C501-X	LED		
C7401	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
CN7401	QGF0545F2-14X	CONNECTOR	FFC/FPC (1-14)	
CN7402	QGF0530F4-15W	CONNECTOR	FFC/FPC (1-15)	

MONITOR BOARD ASSEMBLY <07>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	LYA20015-02A	MONITOR BOARD ASSY		
IC7604	DN8797MS-X	IC		
Q7501	2SD1664/QR/-W	TRANSISTOR		
Q7501 or	STD1664/Y/-W	TRANSISTOR		
Q7502	2SD1664/QR/-W	TRANSISTOR		
Q7502 or	STD1664/Y/-W	TRANSISTOR		
Q7503	DTA144EE-X	DIGI TRANSISTOR		
Q7503 or	UN9113J-X	DIGI TRANSISTOR		
Q7503 or	RN2104-X	DIGI TRANSISTOR		
Q7503 or	BCR198T-X	DIGI TRANSISTOR		
Q7504	DTC144EE-X	DIGI TRANSISTOR		
Q7504 or	UN9213J-X	DIGI TRANSISTOR		
Q7504 or	BCR148T-X	DIGI TRANSISTOR		
C7501	NCZ1016-120X	C CAPACITOR	12pF 2kV J	
C7502	NCB21EK-273X	C CAPACITOR	0.027uF 25V K	
C7503	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C7504	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C7602	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C7603	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C7604	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7605	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C7606	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	

△ Symbol No.	Part No.	Part Name	Description	Local
C7610	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7611	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7612	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C7613	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7614	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C7615	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C7616	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7617	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7618	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7619	NCB31CK-105X	C CAPACITOR	1uF 16V K	
C7622	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	

R7501	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7502	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7503	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R7602	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R7603	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R7604	NRSA63J-363X	MG RESISTOR	36kΩ 1/16W J
R7605	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J

L7501	NQLZ010-680X	INDUCTOR	68uH
L7502	NQL03BK-100X	P COIL	10uH K
L7601	NQL315K-100X	INDUCTOR	10uH K
L7603	NQL315K-100X	INDUCTOR	10uH K
T7501	NQS0056-001X	SW TARNSF	

CN7601	QGF0303F2-25W	CONNECTOR	FFC/FPC (1-25)
CN7602	QGF0508F3-40X	CONNECTOR	FFC/FPC (1-40)
△ F7501	NMFZ007-R40X-K	FUSE	0.4A 50V
OT1	QAL0449-002	FPC	


JVC

SCHEMATIC DIAGRAMS

COMPACT VHS CAMCORDER

GR-FXM42EK, GR-FXM42EX, GR-FXM42EZ

CD-ROM No.SML200602

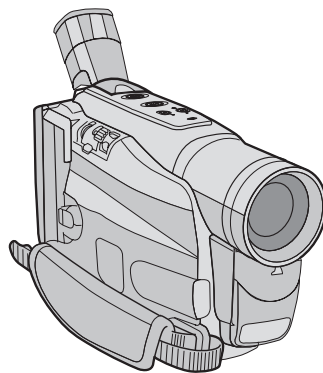

Compact VHS

GR-FXM42EKM, GR-FXM42EXM,
GR-FXM42EZM[M6A622]

For disassembling and assembling of MECHANISM ASSEMBLY, refer to the SERVICE MANUAL No.86700(MECHANISM ASSEMBLY).
Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade).

CHARTS AND DIAGRAMS

NOTES OF SCHEMATIC DIAGRAM

Safety precautions
The Components identified by the symbol  are critical for safety. For continued safety, replace safety critical components only with manufacturer's recommended parts.

1. Units of components on the schematic diagram


- Unless otherwise specified.
- 1) All resistance values are in ohm. 1/6 W, 1/8 W (refer to parts list).
Chip resistors are 1/16 W.
K: KΩ(1000Ω), M: MΩ (1000KΩ)
 - 2) All capacitance values are in μF, (P: PF).
 - 3) All inductance values are in μH, (m: mH).
 - 4) All diodes are 1SS133, MA165 or 1N4148M (refer to parts list).

Note: The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

2. Indications of control voltage

- AUX : Active at high.
 $\overline{\text{AUX}}$ or AUX(L) : Active at low.


3. Interpreting Connector indications

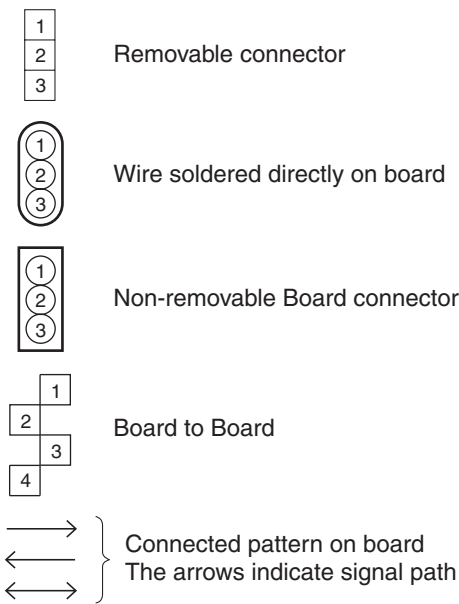

Note: For the destination of each signal and further line connections that are cut off from the diagram, refer to "BOARD INTERCONNECTIONS"

4. Voltage measurement

- 1) Regulator (DC/DC CONV) circuits
REC : Colour bar signal.
PB : Alignment tape (Colour bar).
— : Unmeasurable or unnecessary to measure.
- 2) Indication on schematic diagram
Voltage indications for REC and PB mode on the schematic diagram are as shown below.

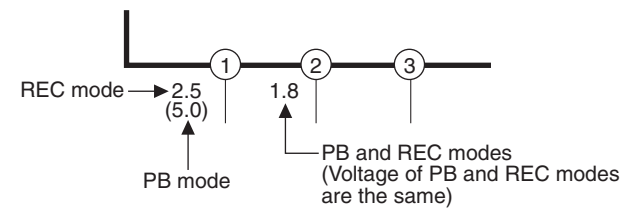


Note: If the voltages are not indicated on the schematic diagram, refer to the voltage charts.


5. Signal path Symbols

The arrows indicate the signal path as follows.

NOTE : The arrow is DVC unique object.

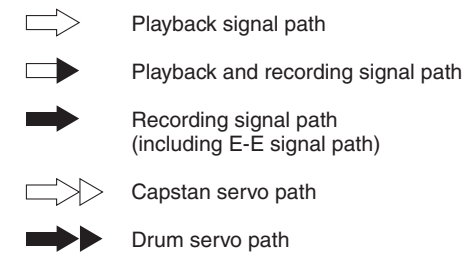

(Example)



6. Indication of the parts for adjustments

The parts for the adjustments are surrounded with the circle as shown below.



7. Indication of the parts not mounted on the circuit board

"OPEN" is indicated by the parts not mounted on the circuit board.



CIRCUIT BOARD NOTES


1. Foil and Component sides

- 1) Foil side (B side) :
Parts on the foil side seen from foil face (pattern face) are indicated.
- 2) Component side (A side) :
Parts on the component side seen from component face (parts face) indicated.

Parts location are indicated by guide scale on the circuit board.


2. Parts location guides

Parts location are indicated by guide scale on the circuit board.

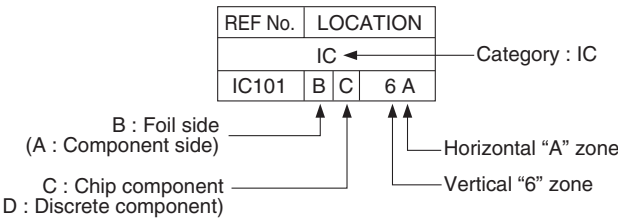

Note: For general information in service manual, please refer to the Service Manual of GENERAL INFORMATION Edition 4 No. 82054D (January 1994).

BOARD INTERCONNECTION

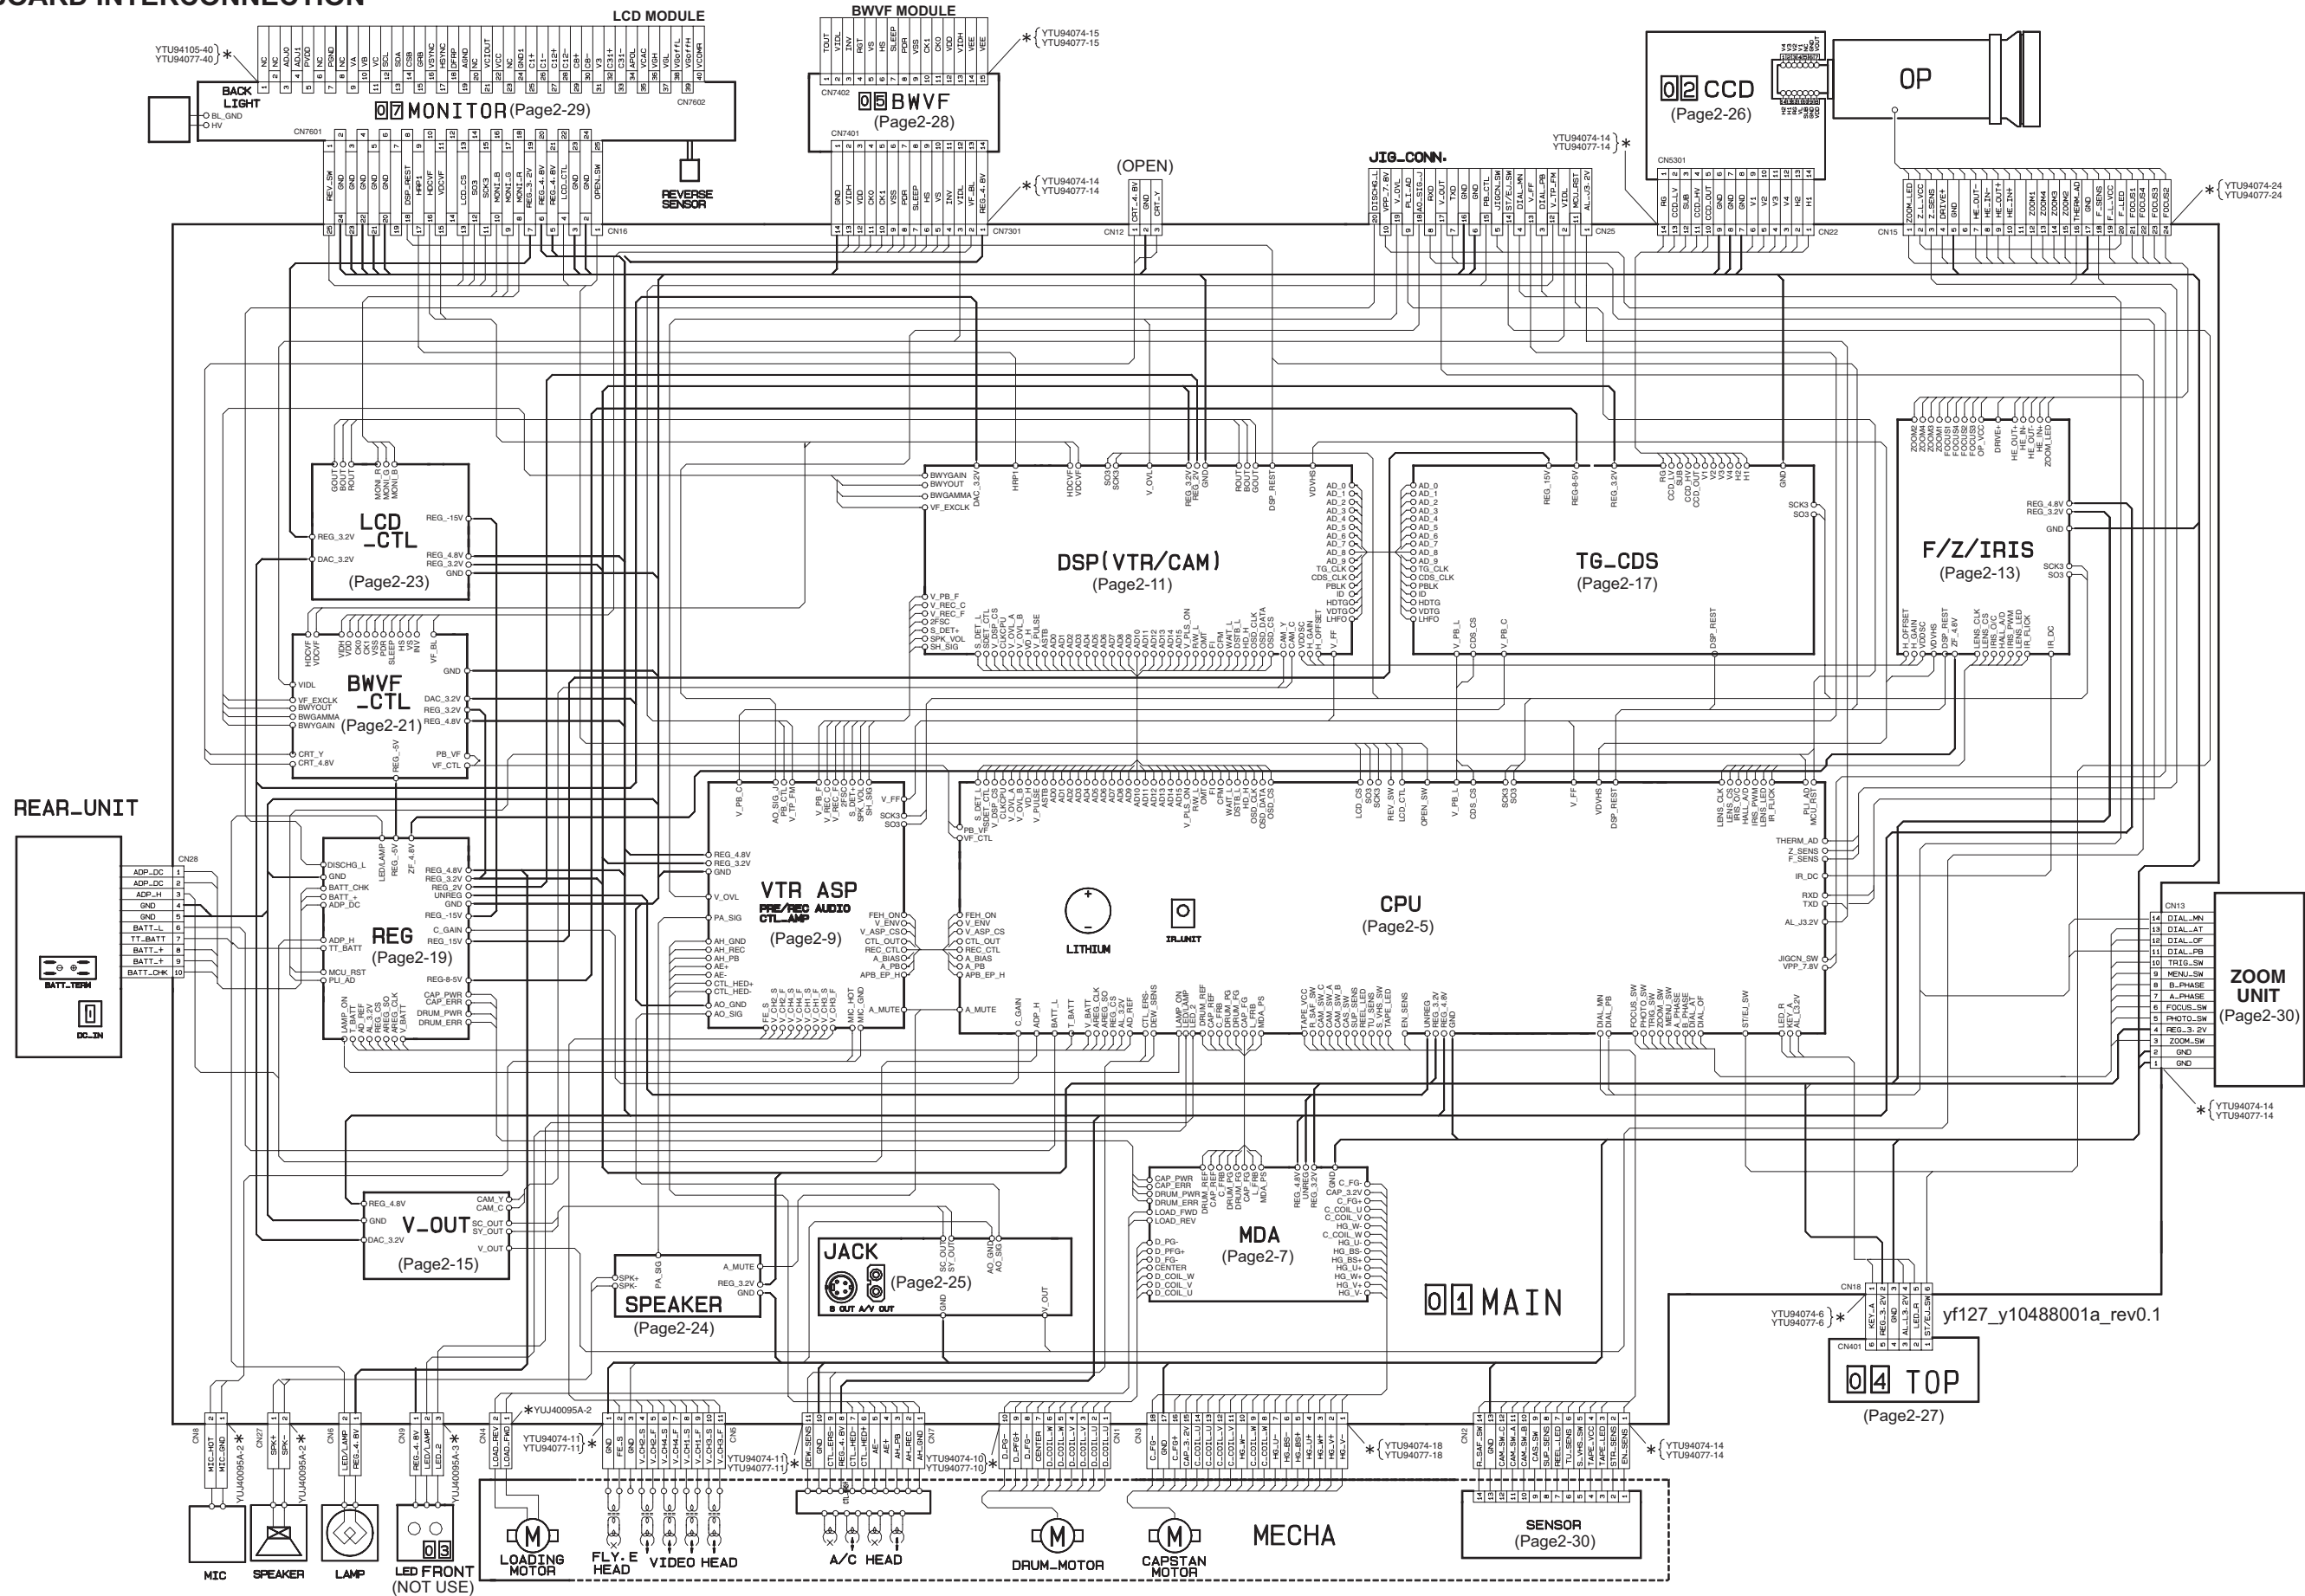

NOTE: The number of patch cords (*) are indicated by interconnection.

01 MAIN(CPU)

TO MDA, REG — UNREG

TO JIG_CONN — GND

TO SENSOR — GND

TO CN13 — GND

TO REG — AL_3.2V

TO REG — MCU_RST

TO JIG_CONN — MCU_RST

TO JIG_CONN — REG_3.2V

TO JIG_CONN — REG_4.8V

TO JIG_CONN — VPP_7.8V

TO TOP — REG_3.2V

TO TOP — REG_3.2V

TO REEL_LED — REEL_LED

TO SENSOR — TU_SENS

TO SENSOR — SUP_SENS

TO JIG_CONN — JIGON_SW

TO CN13 — TL104

TO CN13 — FOCUS_SW

TO VTR ASP — REC_CTL

TO VTR ASP — A_BIAS

TO VTR ASP — FEH_ON

TO MDA — L_FRB

TO VTR ASP — V_FF

TO DSP(VTR/CAM) — V_OVL_A

TO DSP(VTR/CAM) — V_OVL_B

TO DSP(VTR/CAM) — V_PULSE

TO DSP(VTR/CAM) — V_PL_S ON

TO DSP(VTR/CAM) — SDET_CTL

TO REG — ADP_H

TO SENSOR — R_SAF_SW

TO CN13 — B_PHASE

TO CN13 — A_PHASE

TO TOP, JIG_CONN — STEL_SW

TO REG — BATT_L

TO DSP(VTR/CAM) — VD_H

TO REG — C_GAIN

TO DSP(VTR/CAM) — OMT

TO JIG_CONN — STEL_SW

TO DSP(VTR/CAM) — FI

TO MDA — CFM

TO DSP(VTR/CAM) — DRUM_PG

TO MDA — CAM_SW_A

TO SENSOR — CAM_SW_B

TO DSP(VTR/CAM) — CAM_SW_C

TO MDA — VDHS

TO MDA — CAP_PG

TO VTR ASP — CTL_OUT

TO MDA — DRUM_PG

TO CN13 — MENU_SW

TO VTR ASP — V_ENV

TO FZ/IRIS — HALL_AD

TO A/C HEAD — IR_DC

TO DEW_SENS — DEW_SENS

TO OP — F_SENS

TO OP — Z_SENS

TO SENSOR — EN_SENS

TO TOP — KEY_A

TO OP — THERM_AD

TO REG — PLI_AD

TO CN13 — ZOOM_SW

TO CN13 — PHOTO_SW

TO SENSOR — S_WHS_SW

TO REG — AD_REF

TO REG — WAIT_L

TO REG — ASIB

TO REG — DSTB_L

TO REG — CLKCPU

TO REG — RW_L

TO DSP(VTR/CAM) — AD15

TO DSP(VTR/CAM) — AD14

TO DSP(VTR/CAM) — AD13

TO DSP(VTR/CAM) — AD12

TO DSP(VTR/CAM) — AD11

TO DSP(VTR/CAM) — AD10

TO DSP(VTR/CAM) — AD9

TO DSP(VTR/CAM) — AD8

TO DSP(VTR/CAM) — AD7

TO DSP(VTR/CAM) — AD6

TO DSP(VTR/CAM) — AD5

TO DSP(VTR/CAM) — AD4

TO DSP(VTR/CAM) — AD3

TO DSP(VTR/CAM) — AD2

TO DSP(VTR/CAM) — AD1

TO DSP(VTR/CAM) — AD0

TO REG — T_BATT

TO LCD_CTL — LCD_CTL

FUNCTION IC1801, R122

RCU MODEL o

NO RCU MODEL x

FUNCTION R139, R157

SVHSC MODEL o

VHS MODEL x

MODEL IC101 ROM NO.

PAL -M5CE

NTSC -M5CU

FUNCTION C109, Q118, Q119, R161, R199, R200, R201, R202, R203


LED MODEL o

LAMP MODEL x

NO LED/LAMP MODEL x


yf127_y10489001a_rev1.1

■ MAIN(MDA) SCHEMATIC DIAGRAM

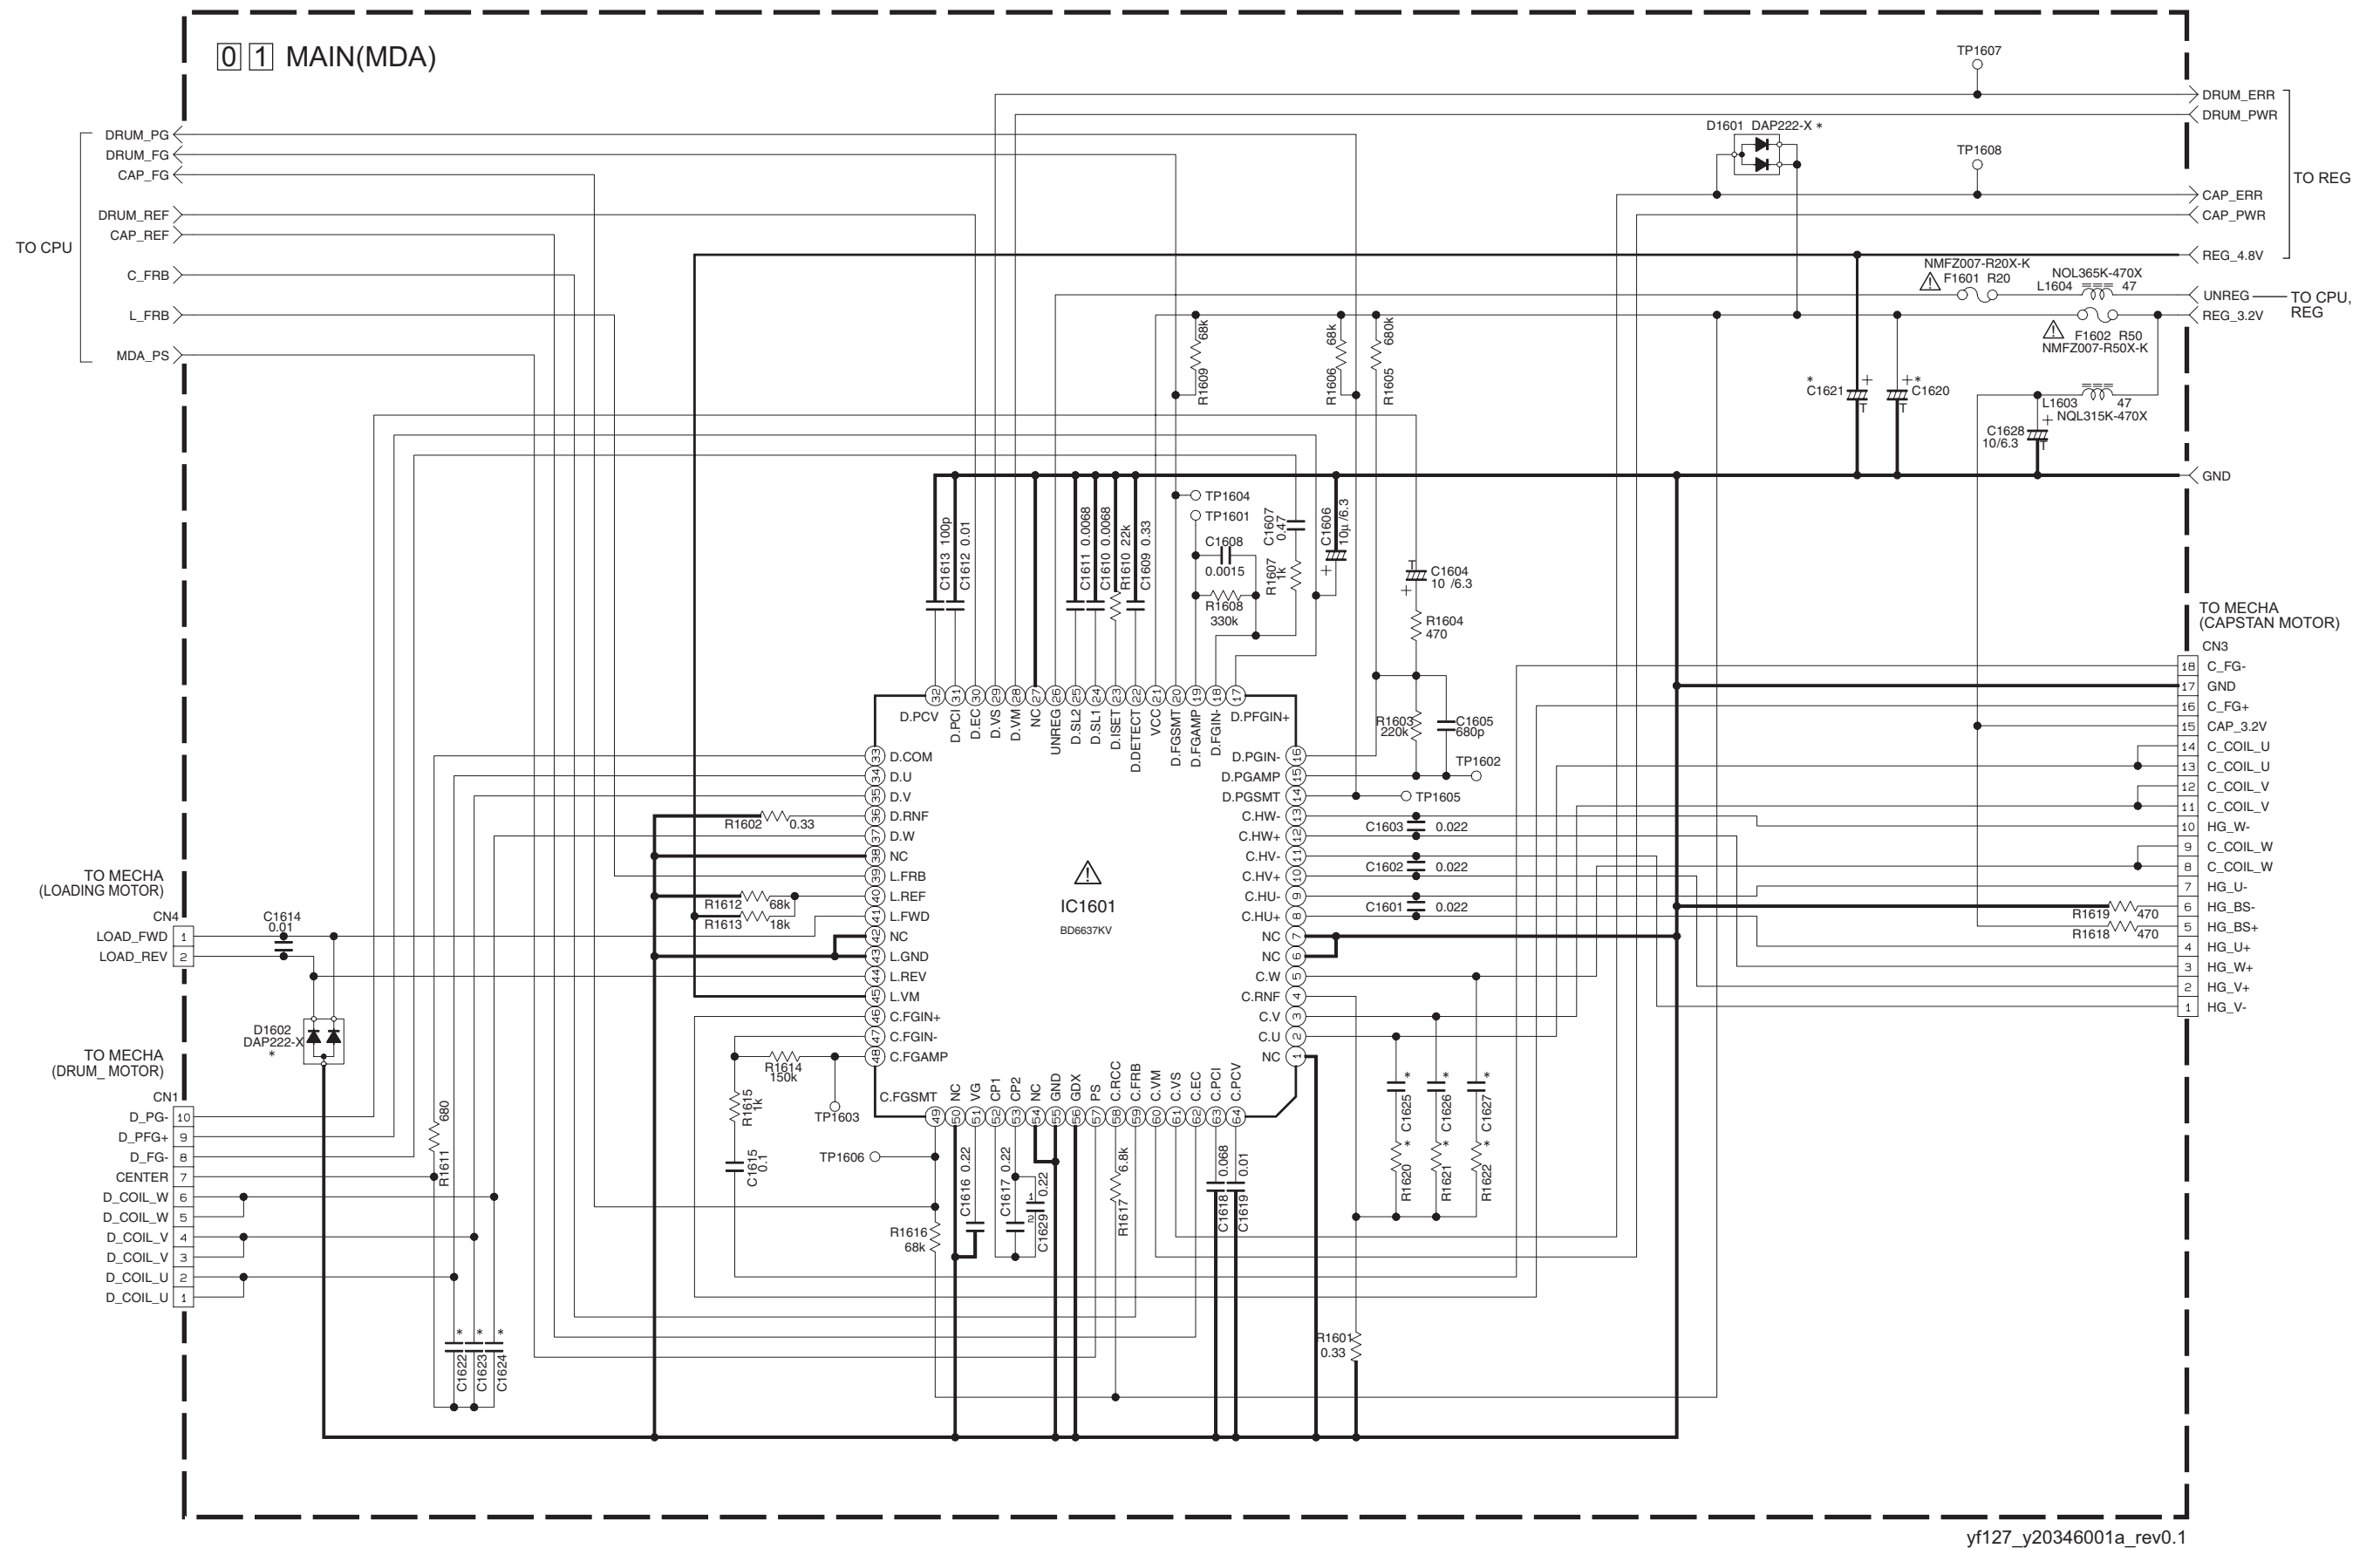

NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.


MAIN(VTR ASP) SCHEMATIC DIAGRAM

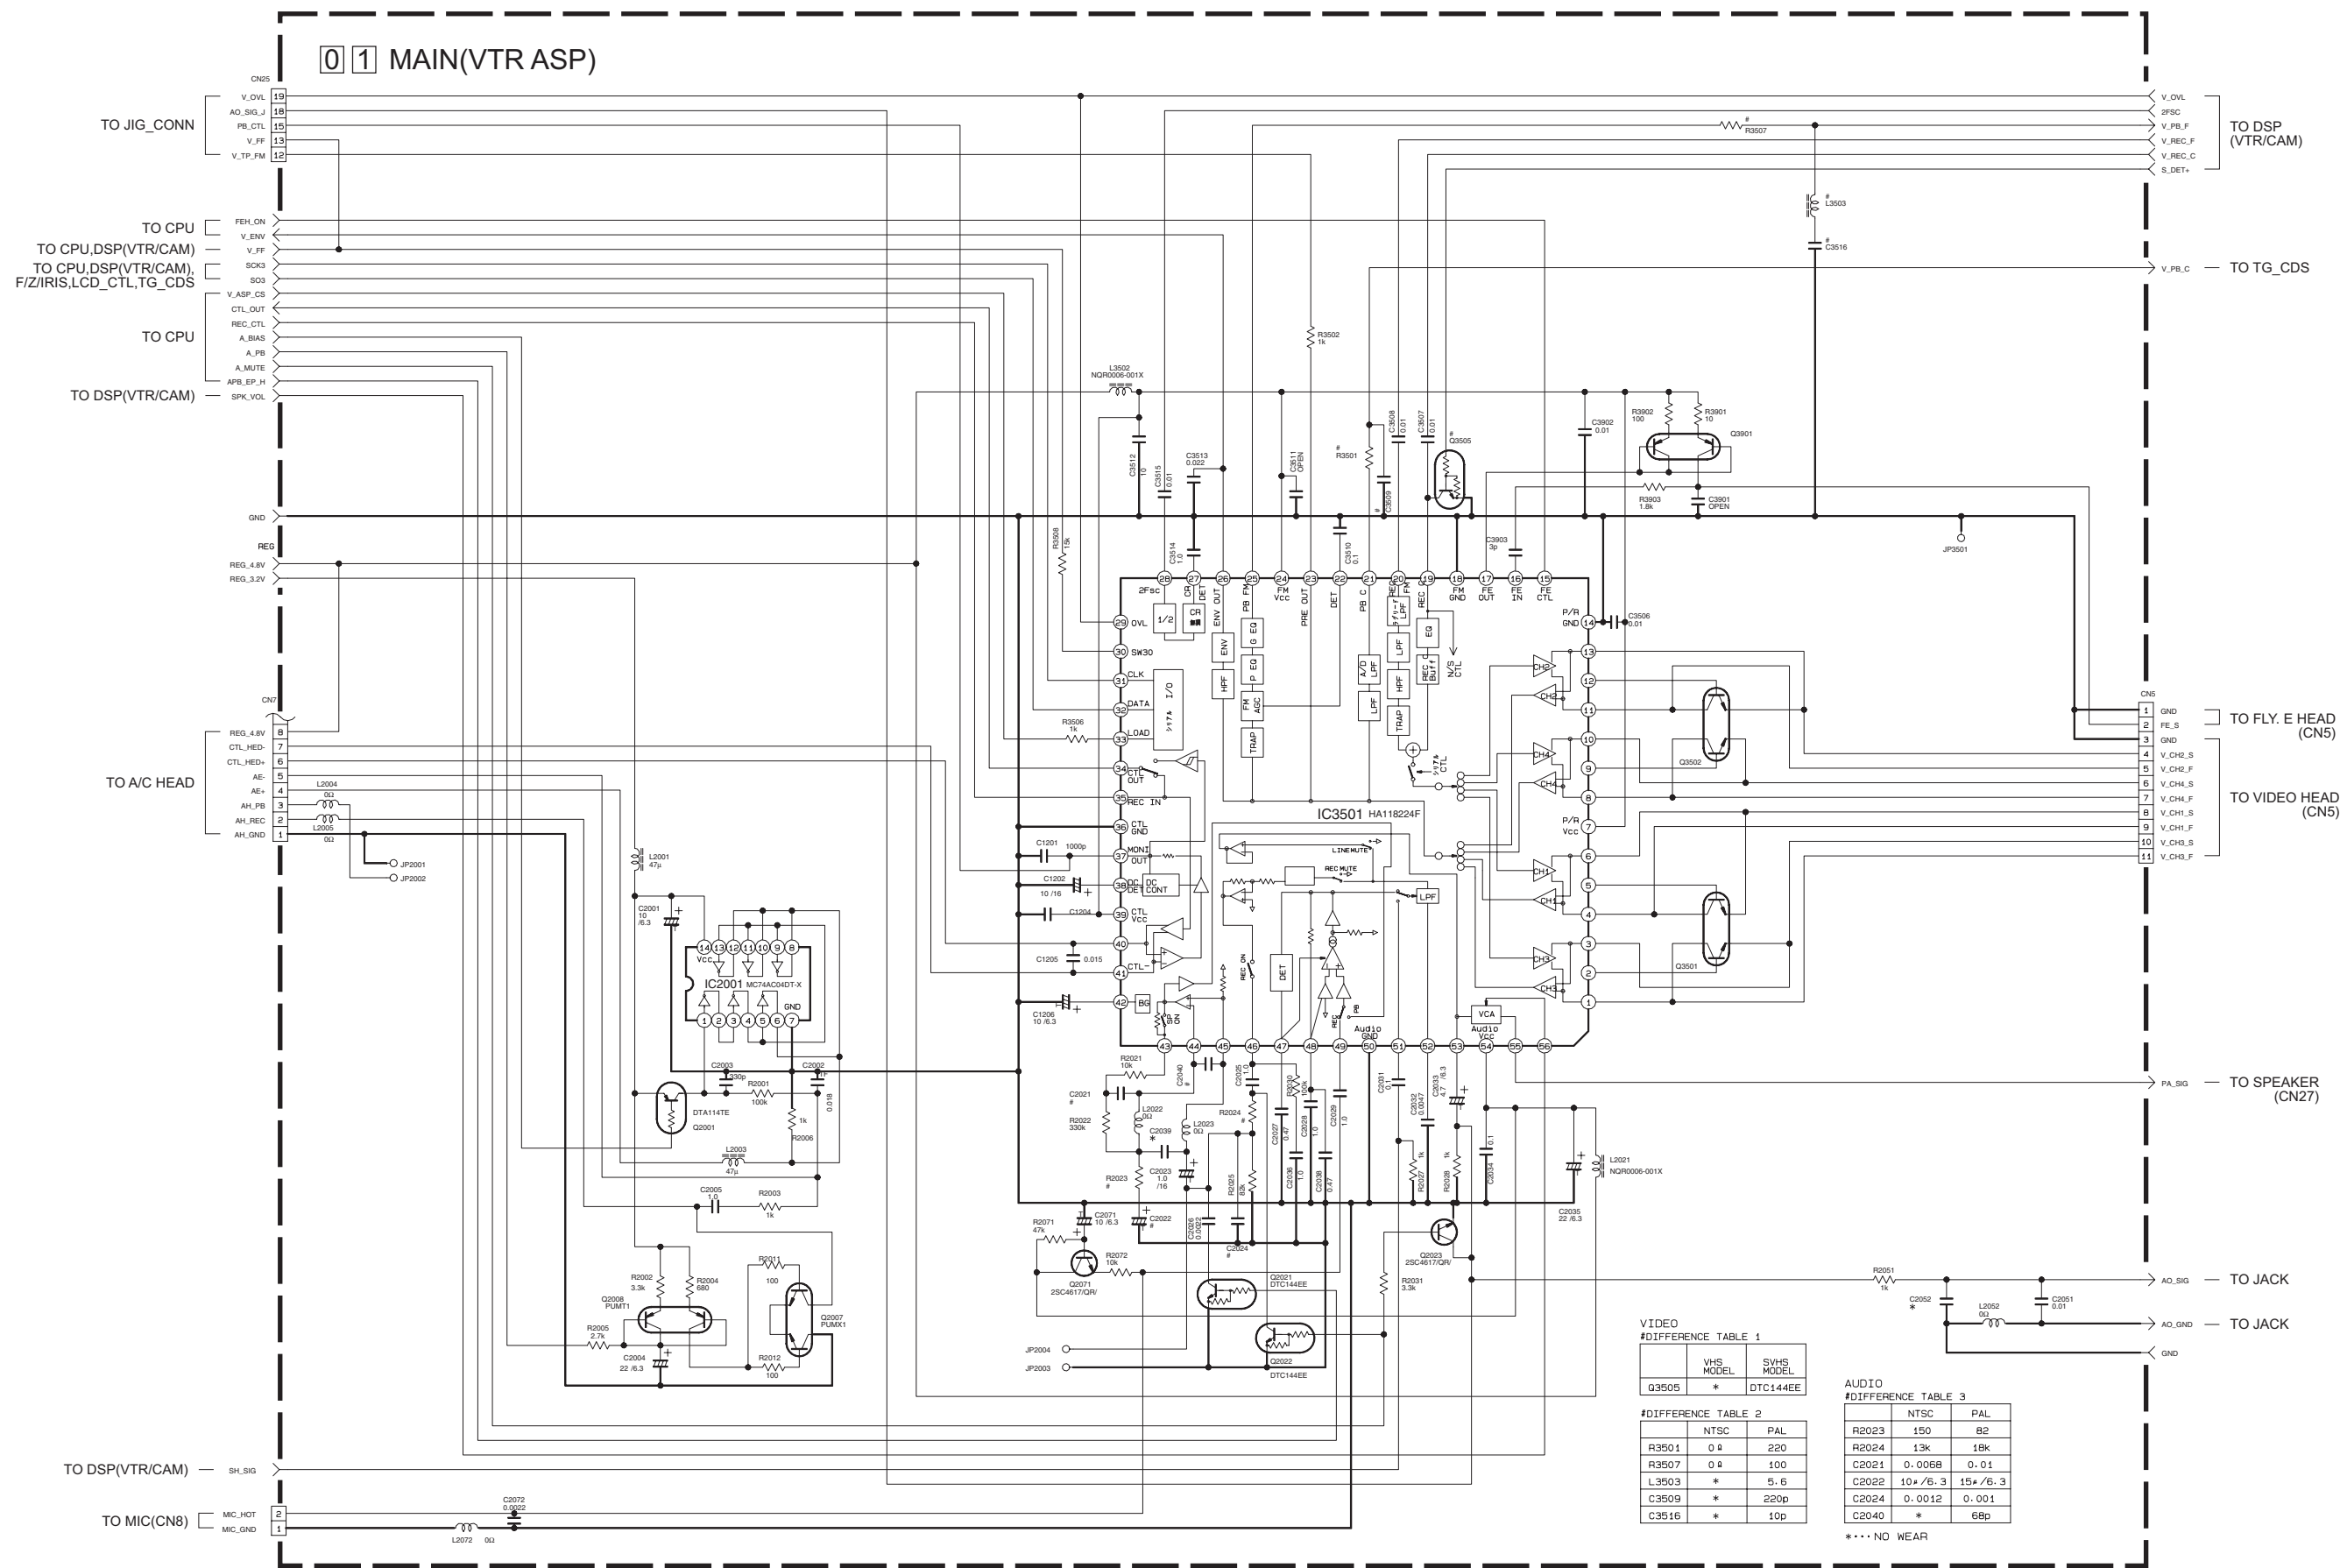

NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.


yf127_y20348001a_rev0.1

■ MAIN(DSP) SCHEMATIC DIAGRAM

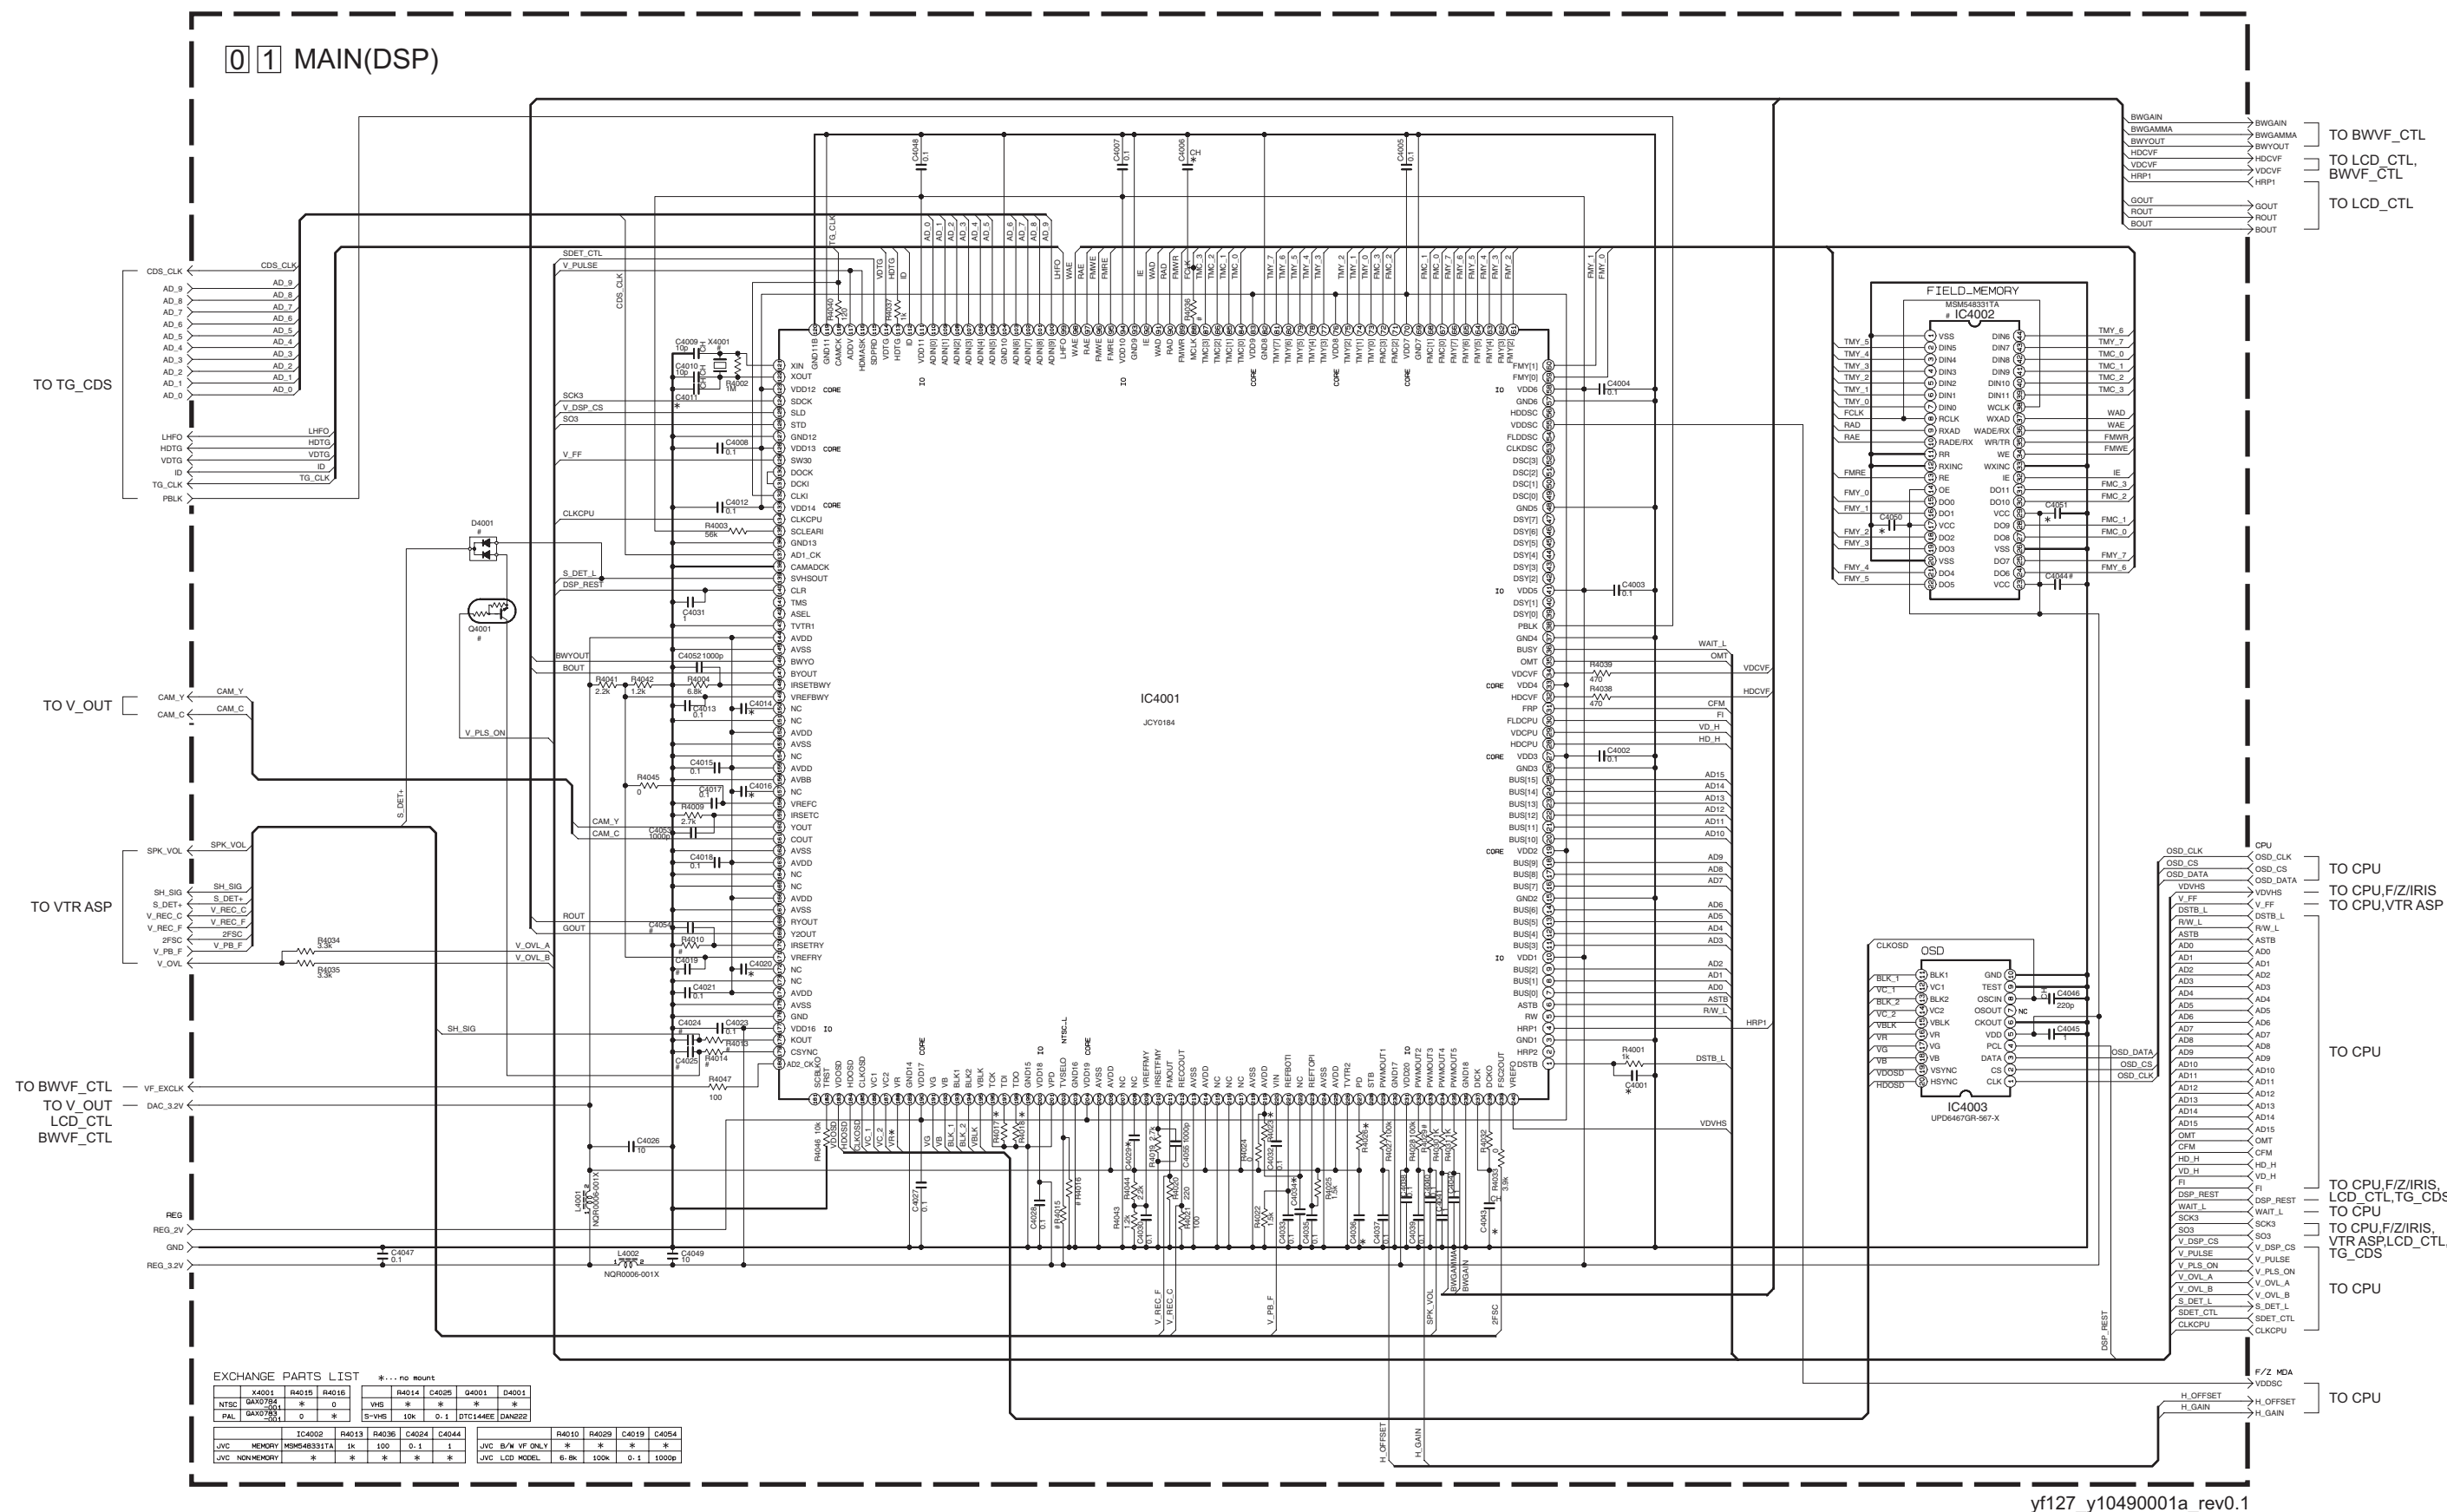

NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.


■ MAIN(F/Z/IRIS) SCHEMATIC DIAGRAM

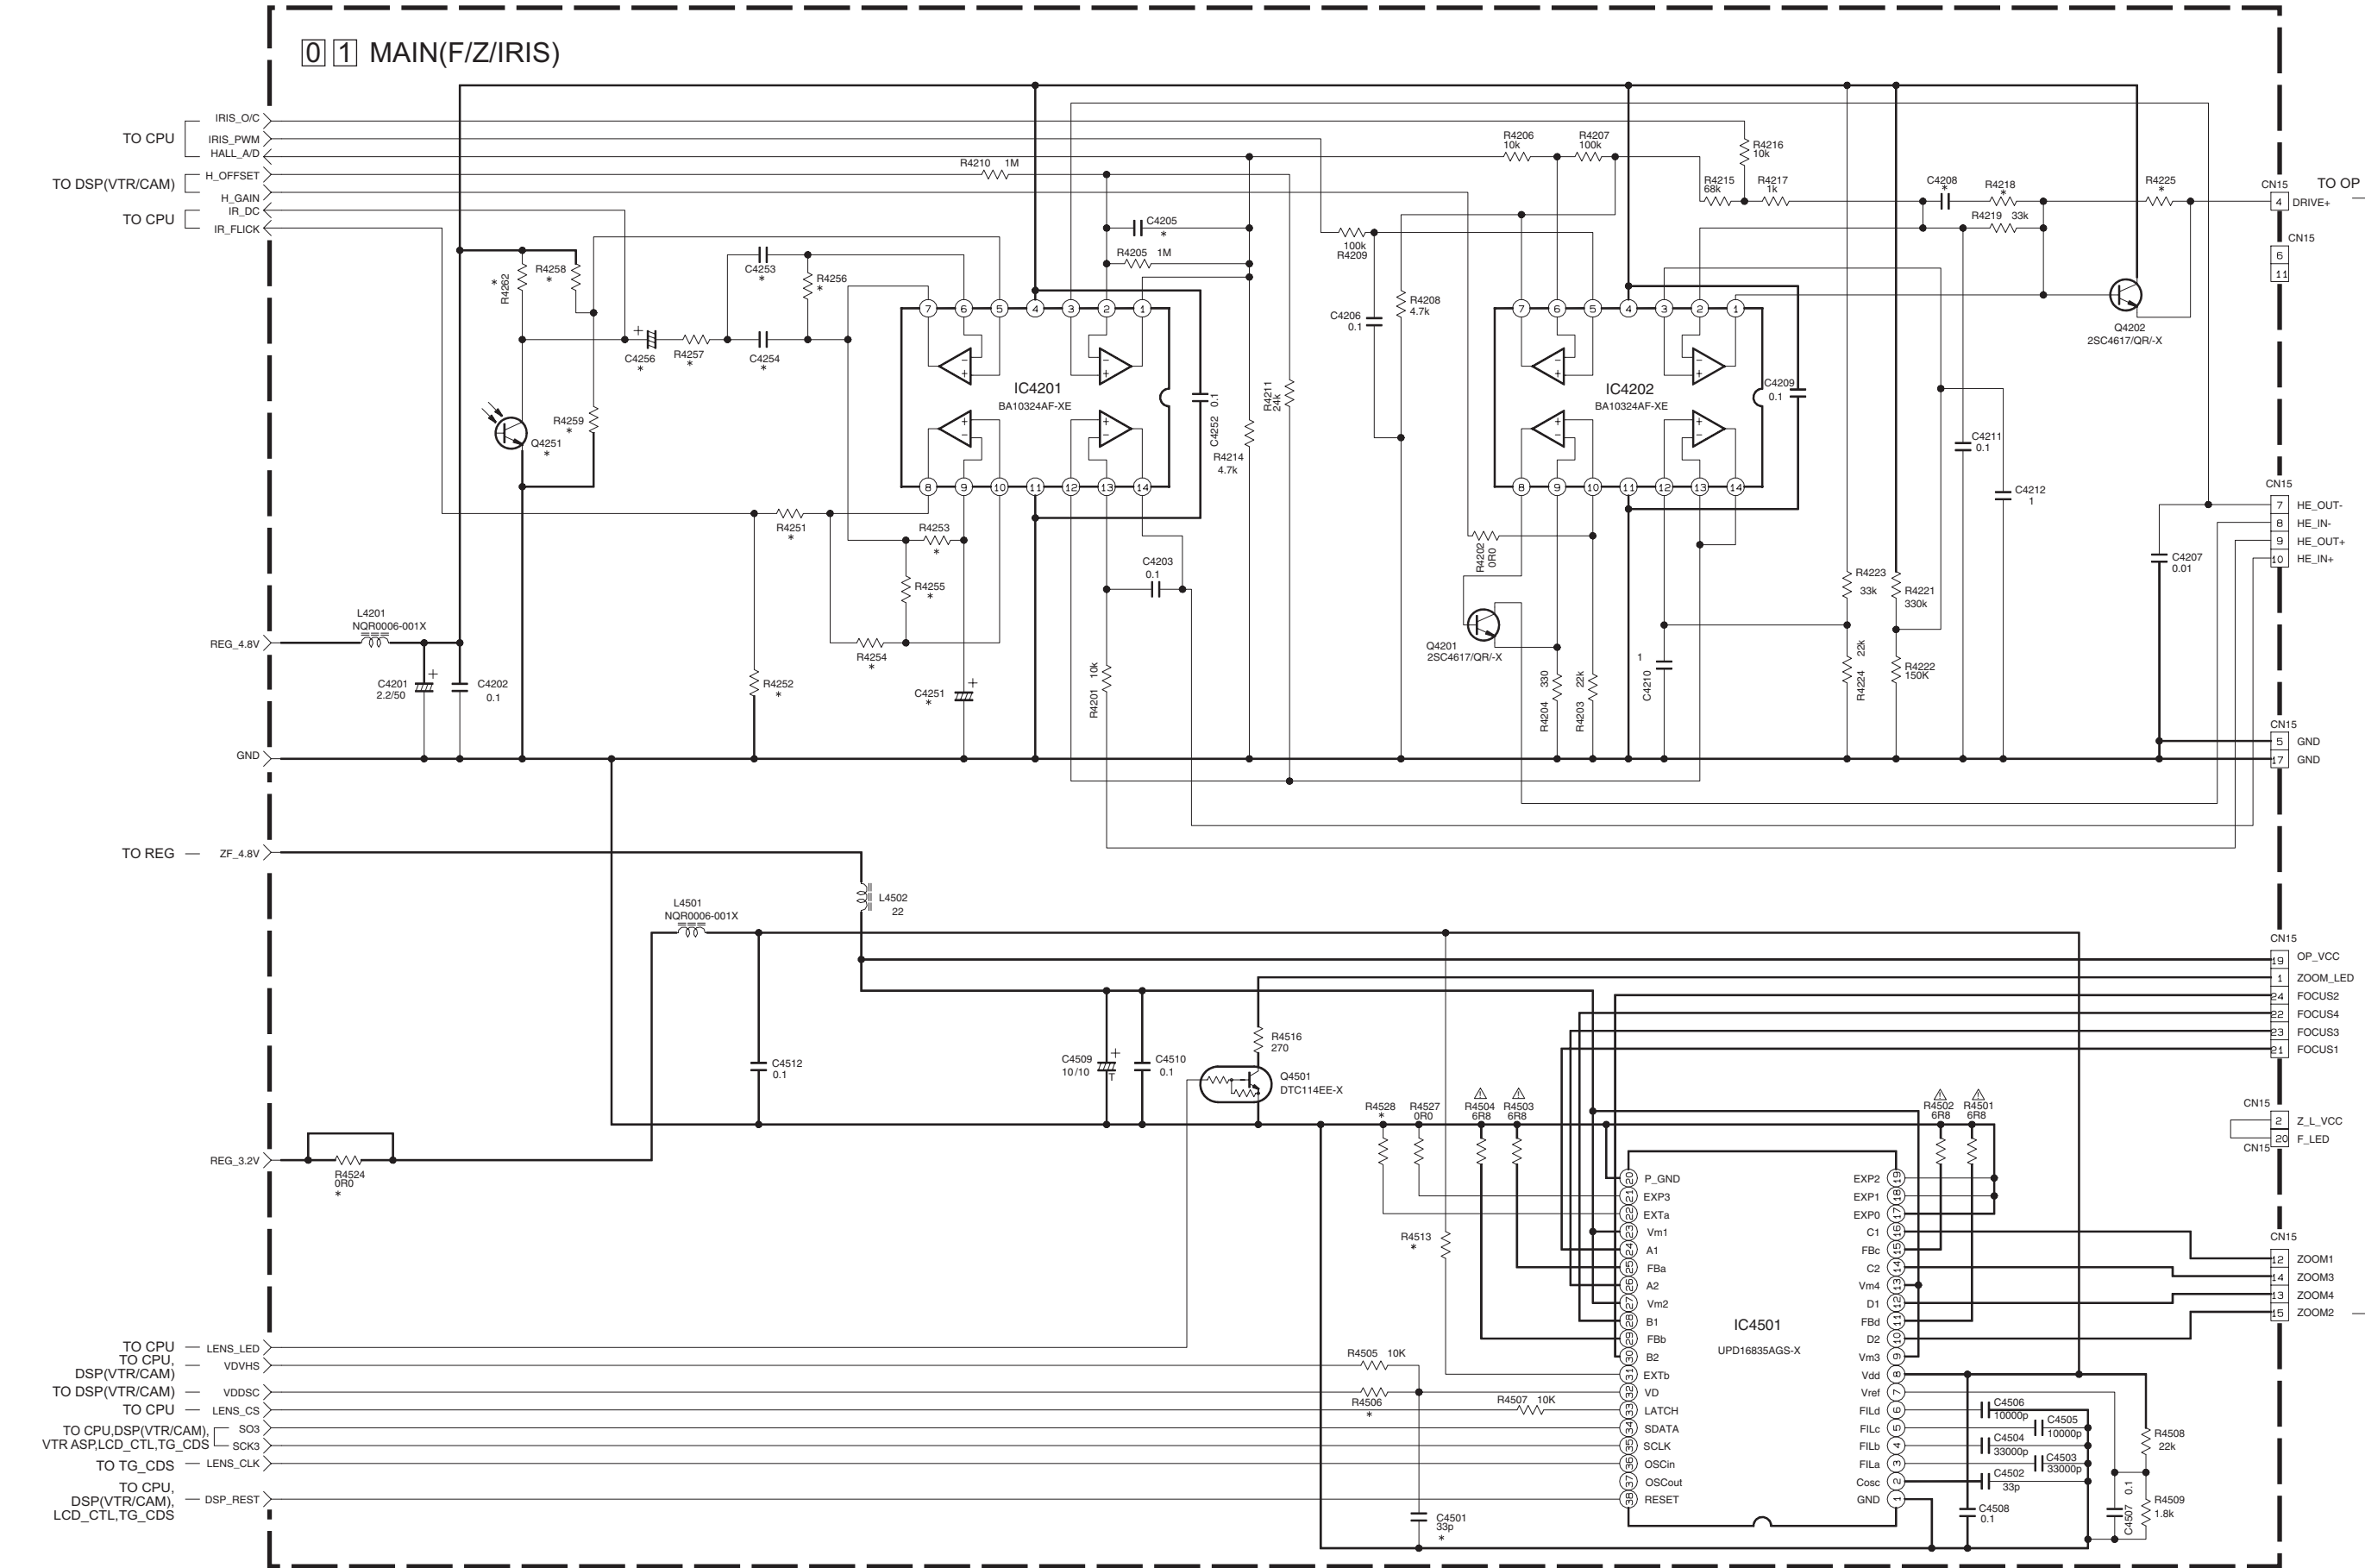

NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

yf127_y20347001a_rev0.1

■ MAIN(V_OUT) SCHEMATIC DIAGRAM

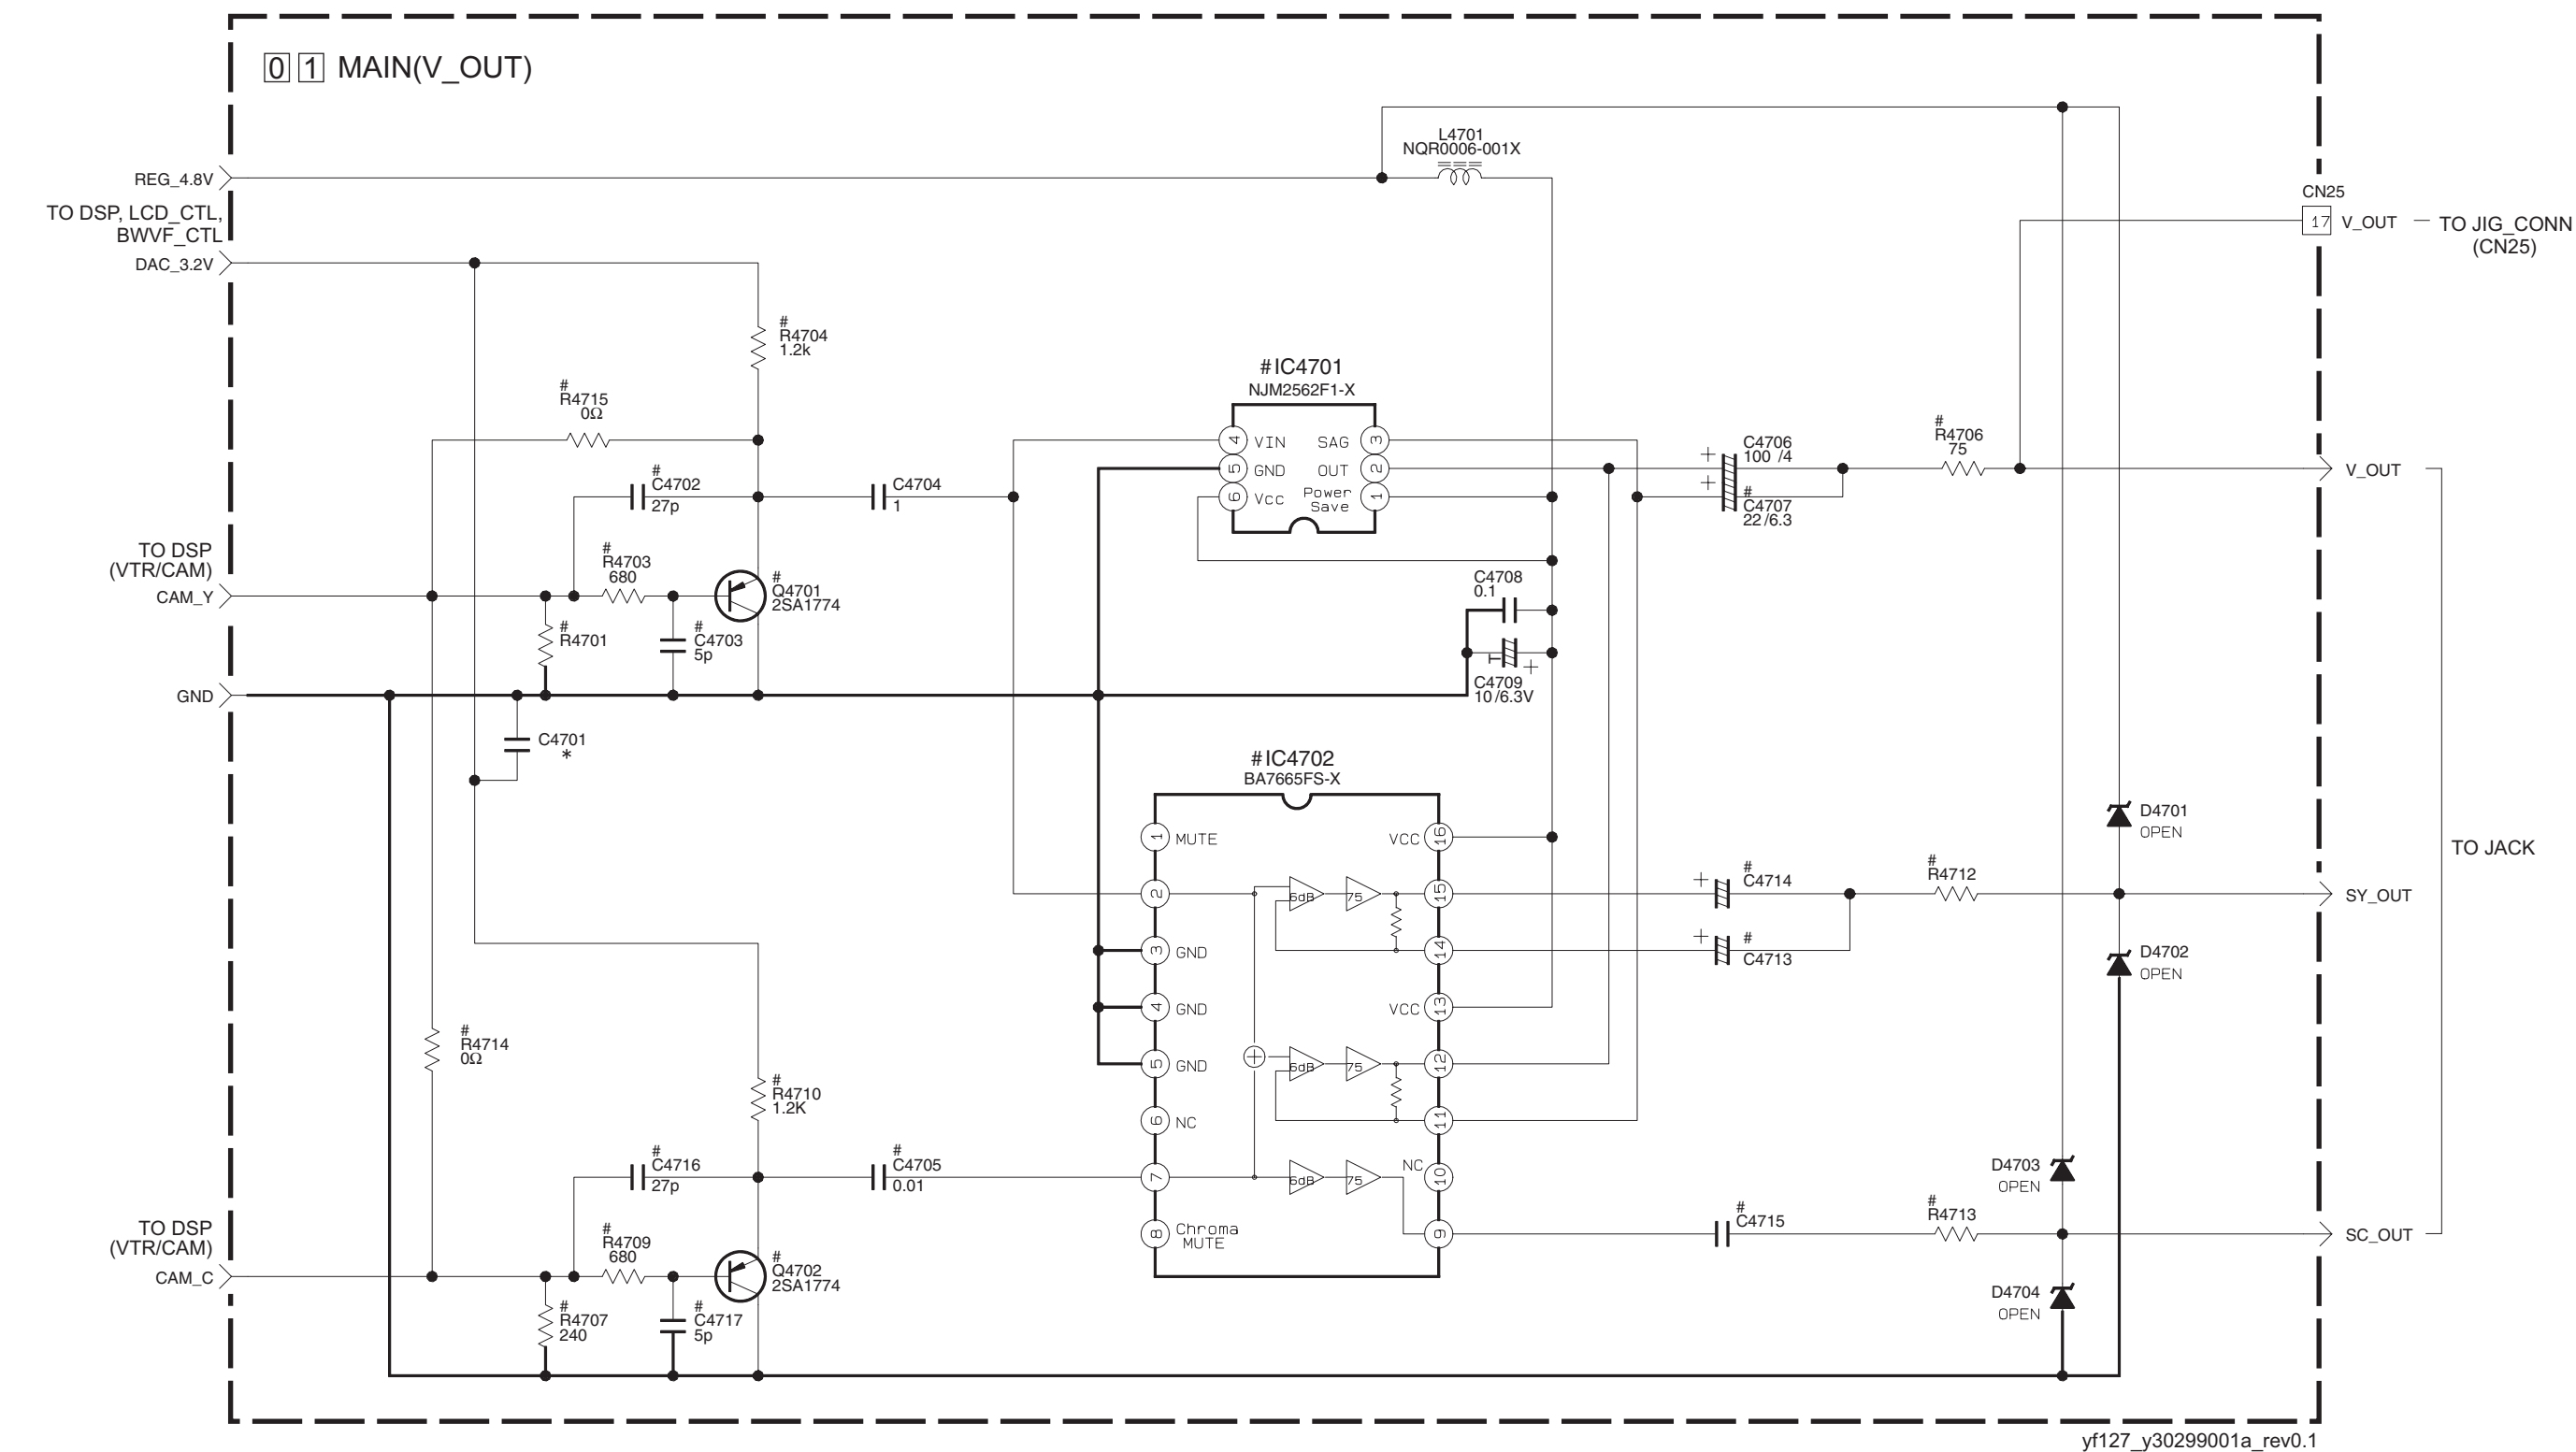

EXCHANGE PARTS LIST


*...no mount

	IC4701	IC4702	Q4701, Q4702	R4701	R4703, R4709	R4707	R4710	R4712
VHS MODEL	NJM2562F1	*	*	130	*	*	*	*
SVHS MODEL	*	BA7665FS	2SA1774	240	680	240	1.2k	75

	R4713	R4714, R4715	C4702, C4716	C4703, C4717	C4705	C4707	C4713	C4714	C4715
VHS MODEL	*	0	*	*	*	33u/10	*	*	*
SVHS MODEL	75	*	27p	5p	0.01	22u/6.3	22u/6.3	100u/4	0.01

NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
 2. The parts with marked (*) is not used.


■ MAIN(TG_CDS) SCHEMATIC DIAGRAM

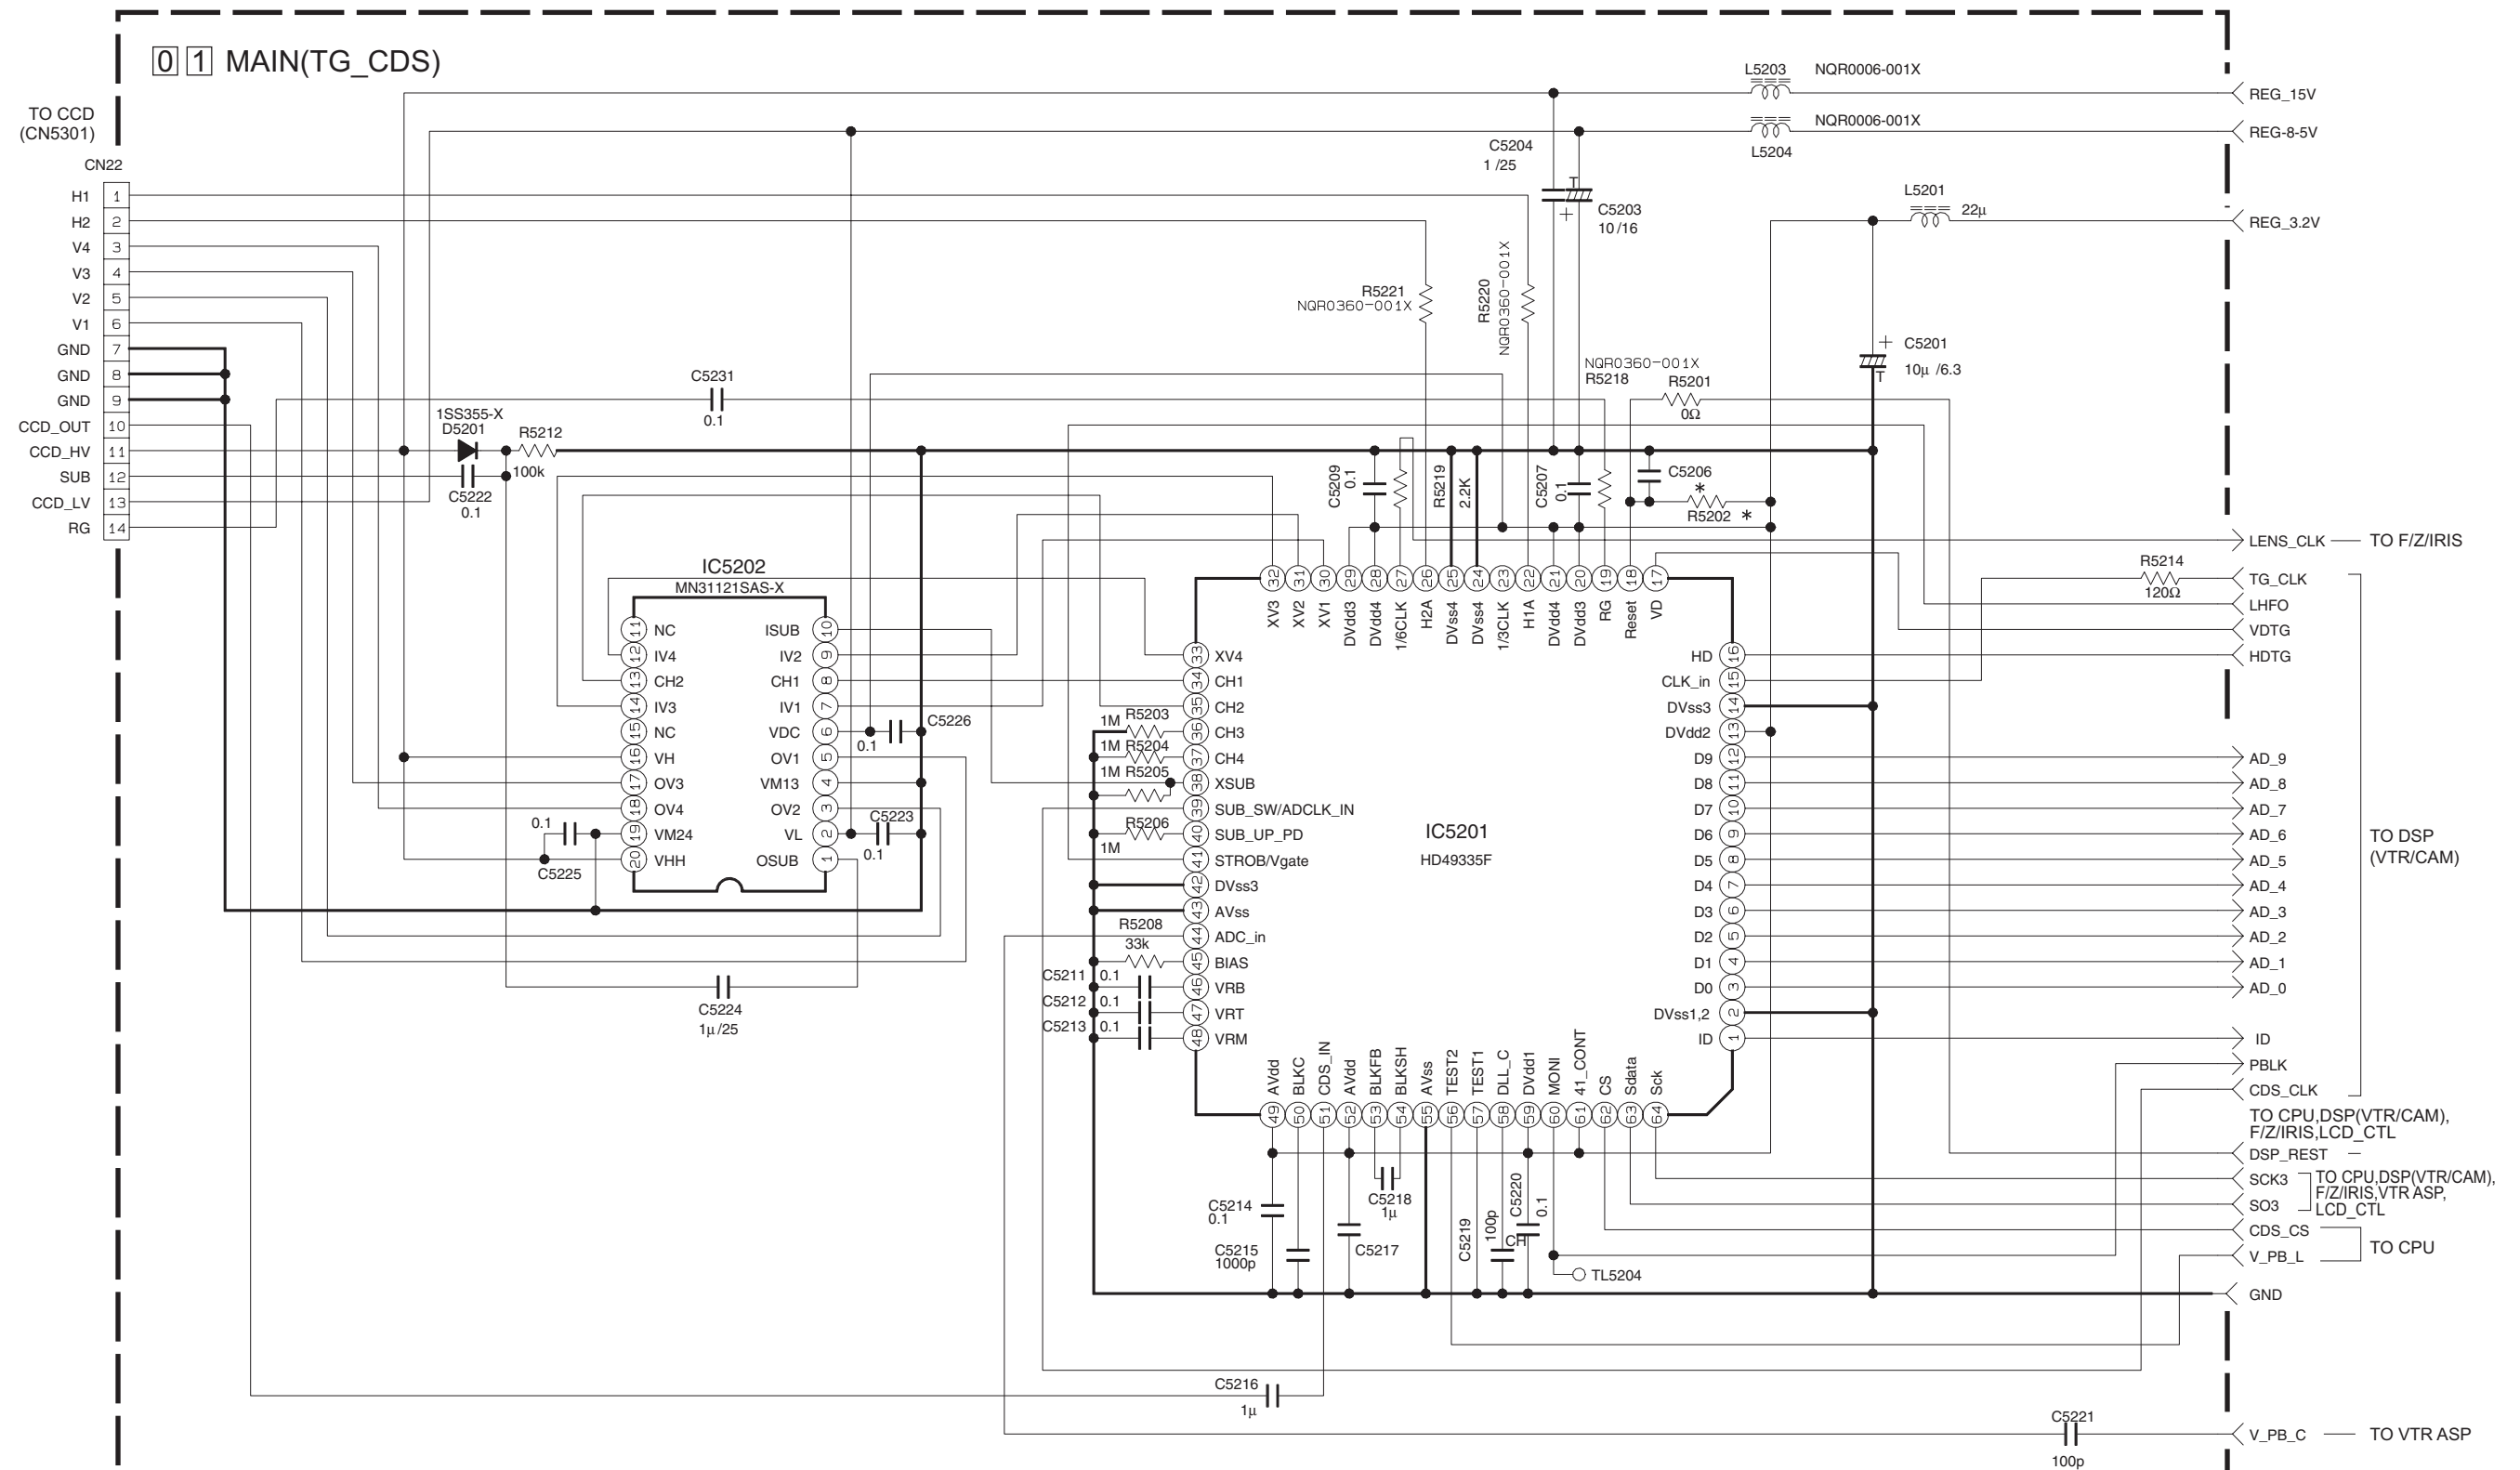

yf127_y30298001a_rev0.1


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ MAIN(REG) SCHEMATIC DIAGRAM

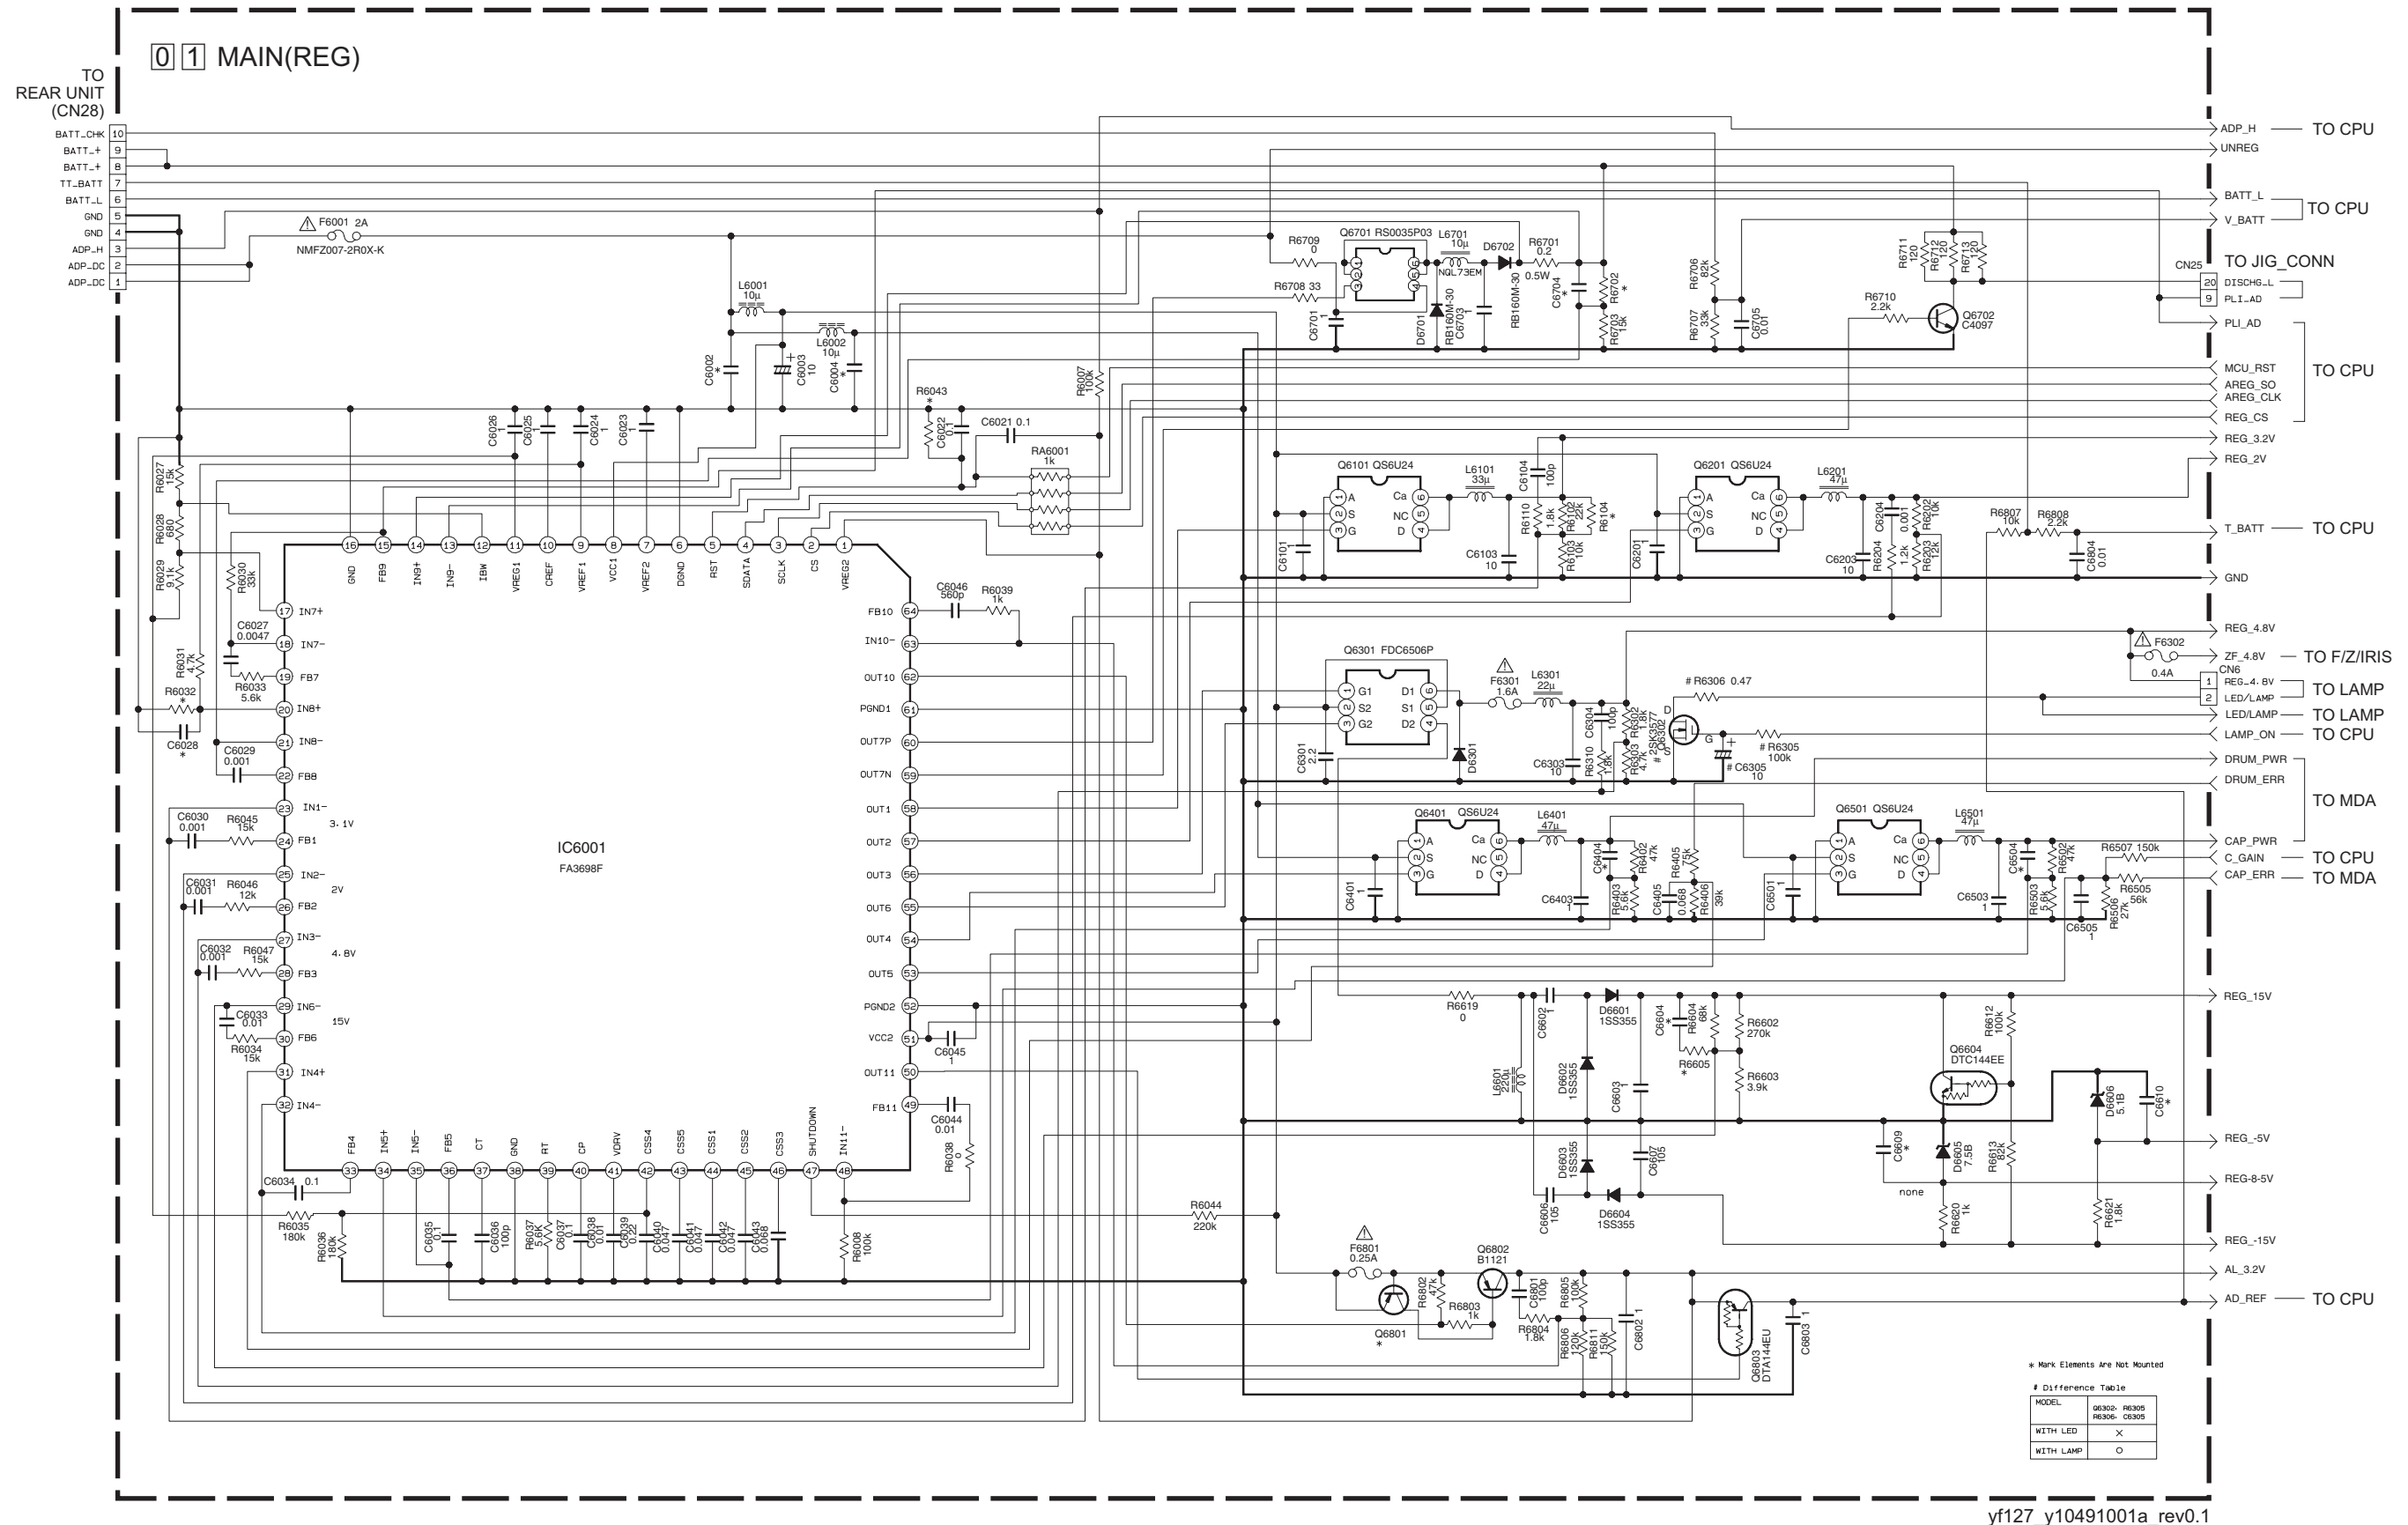


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ MAIN(BWVF_CTL) SCHEMATIC DIAGRAM

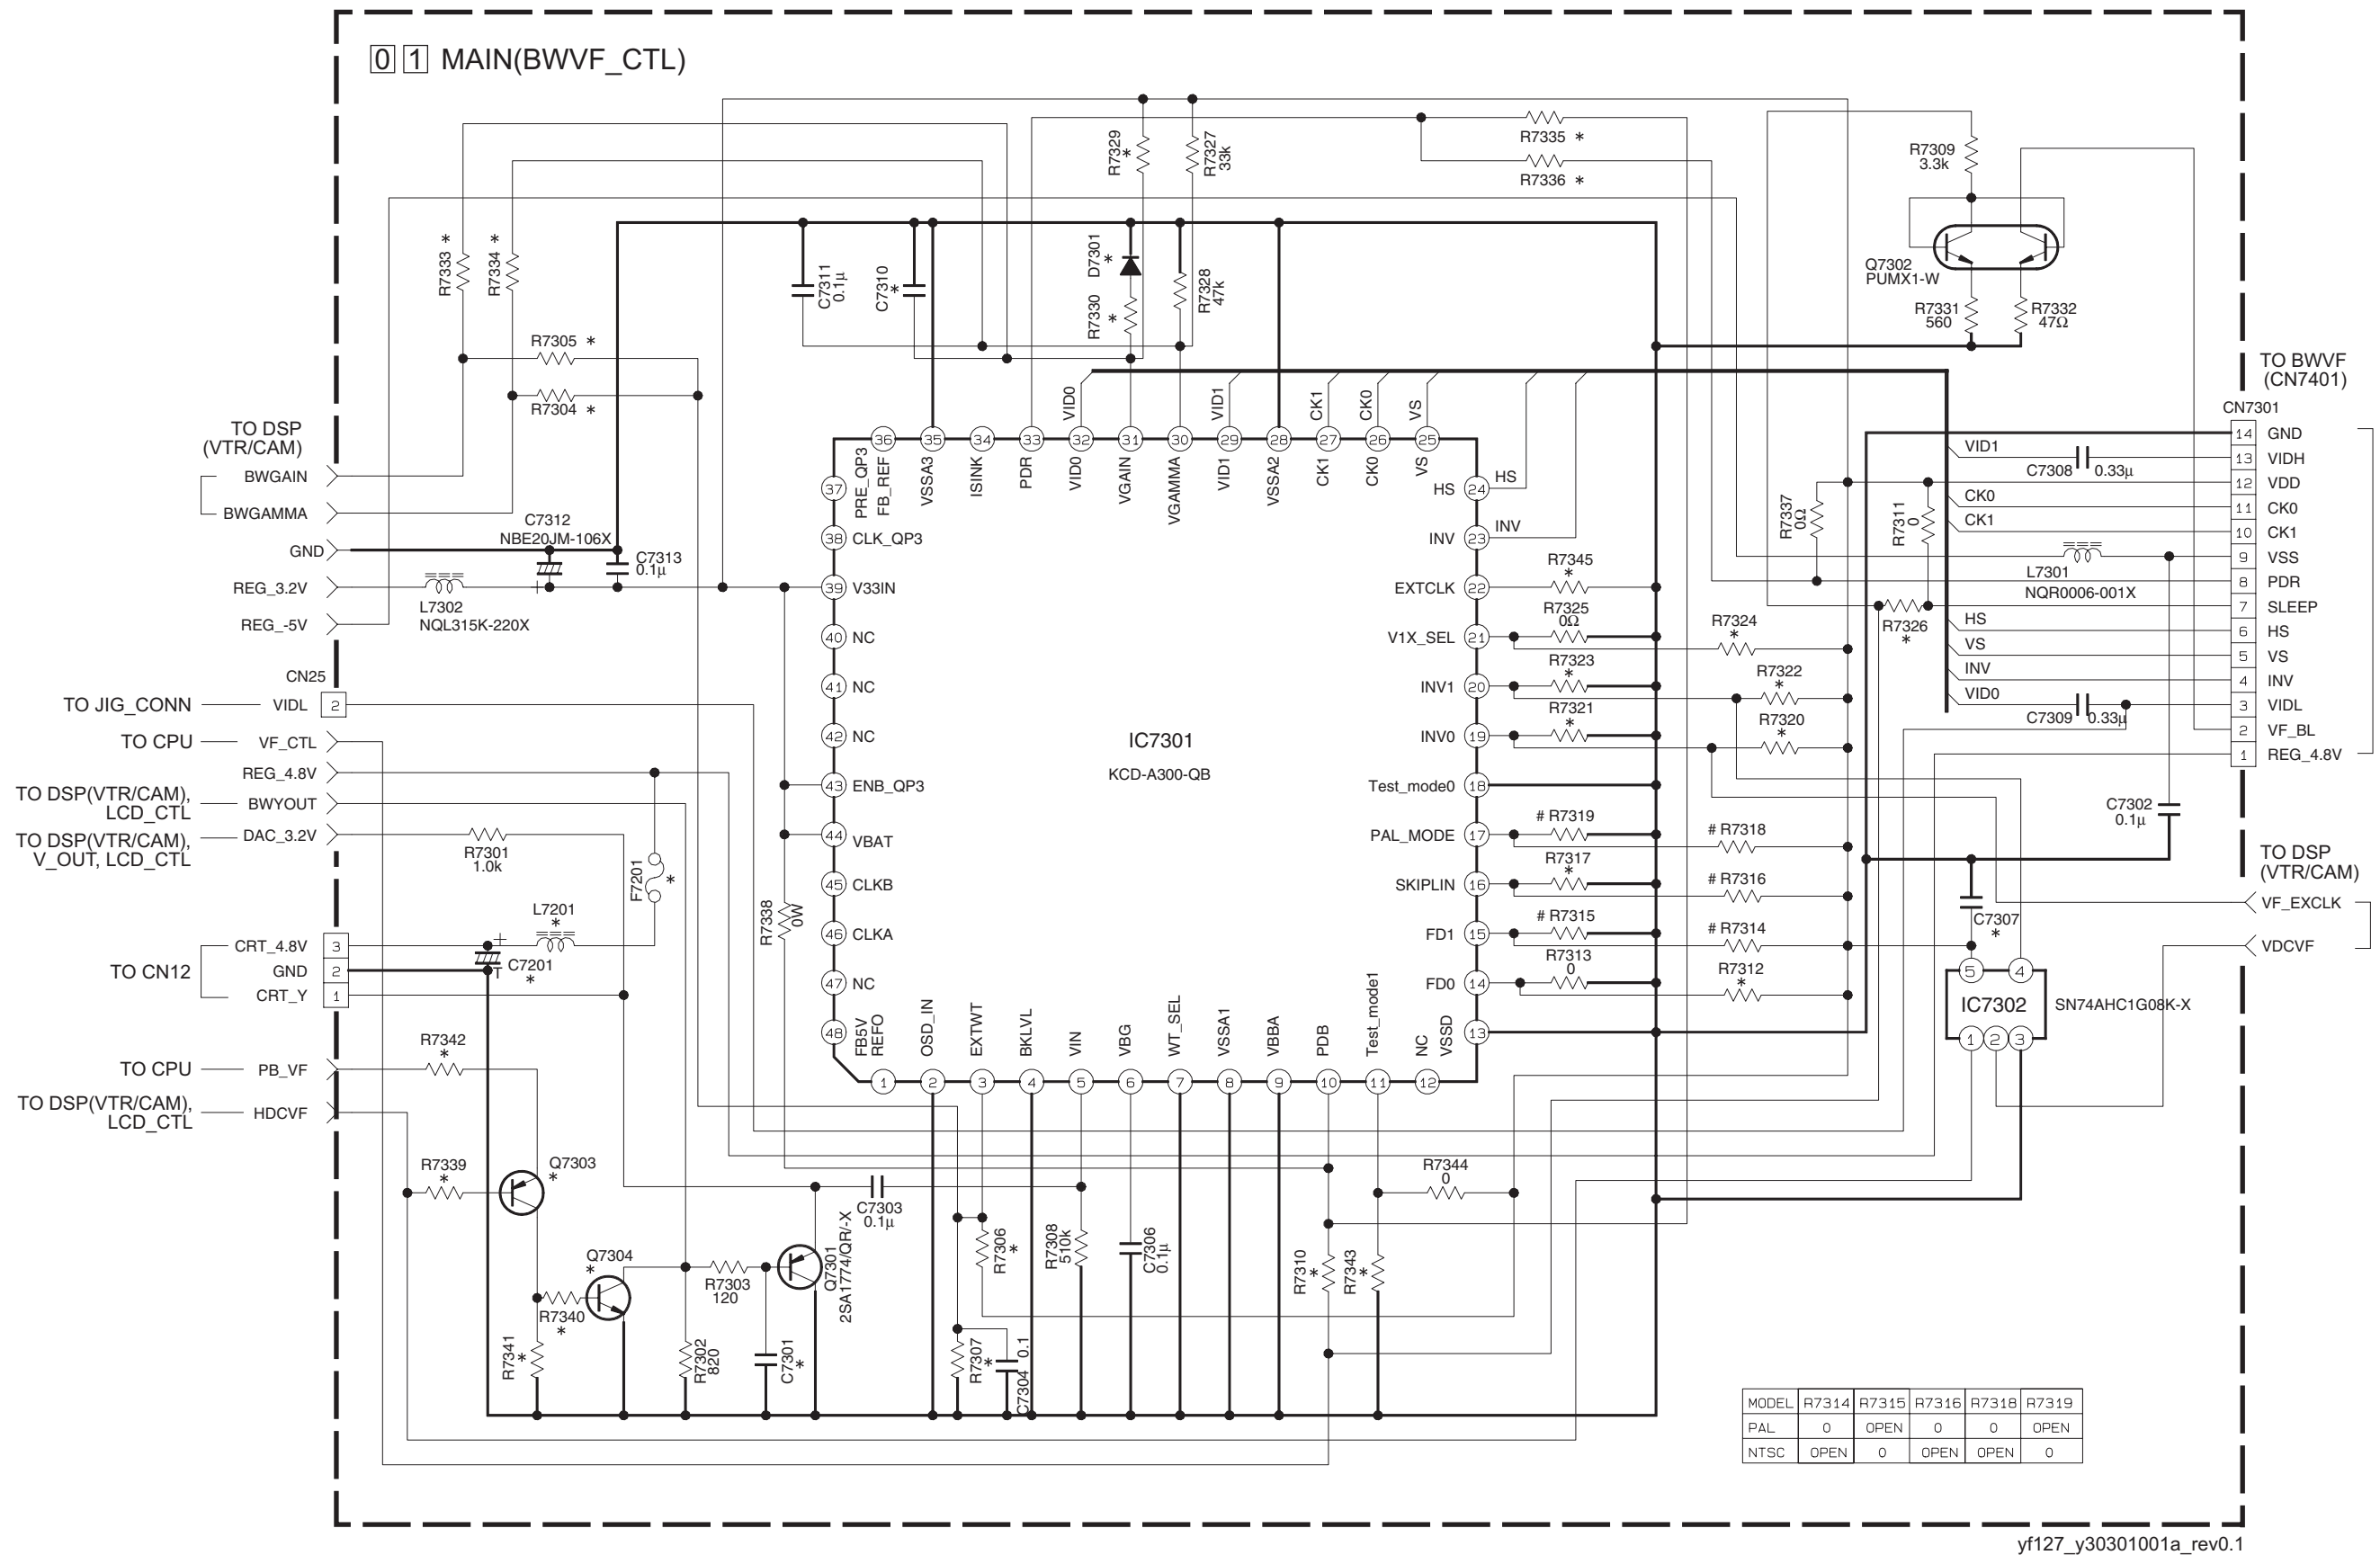


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ MAIN(LCD_CTL) SCHEMATIC DIAGRAM

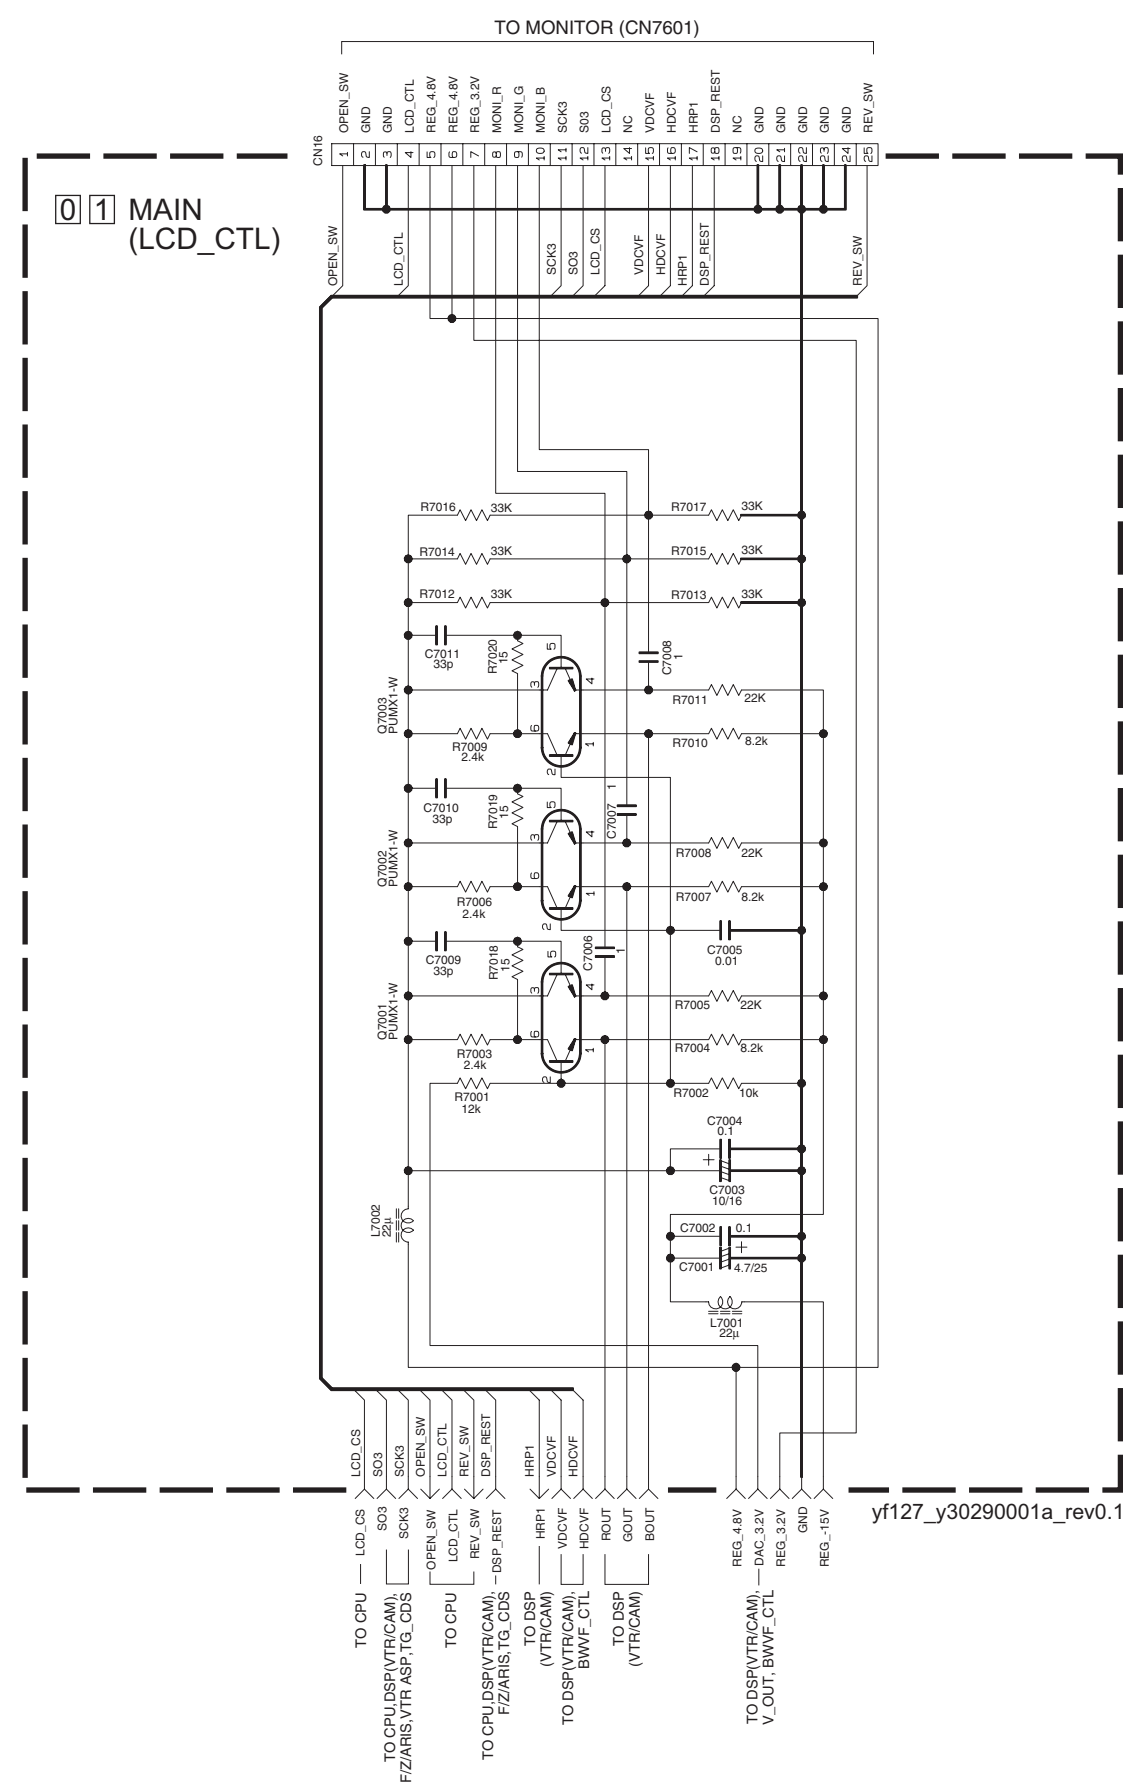


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ MAIN(SPEAKER) SCHEMATIC DIAGRAM

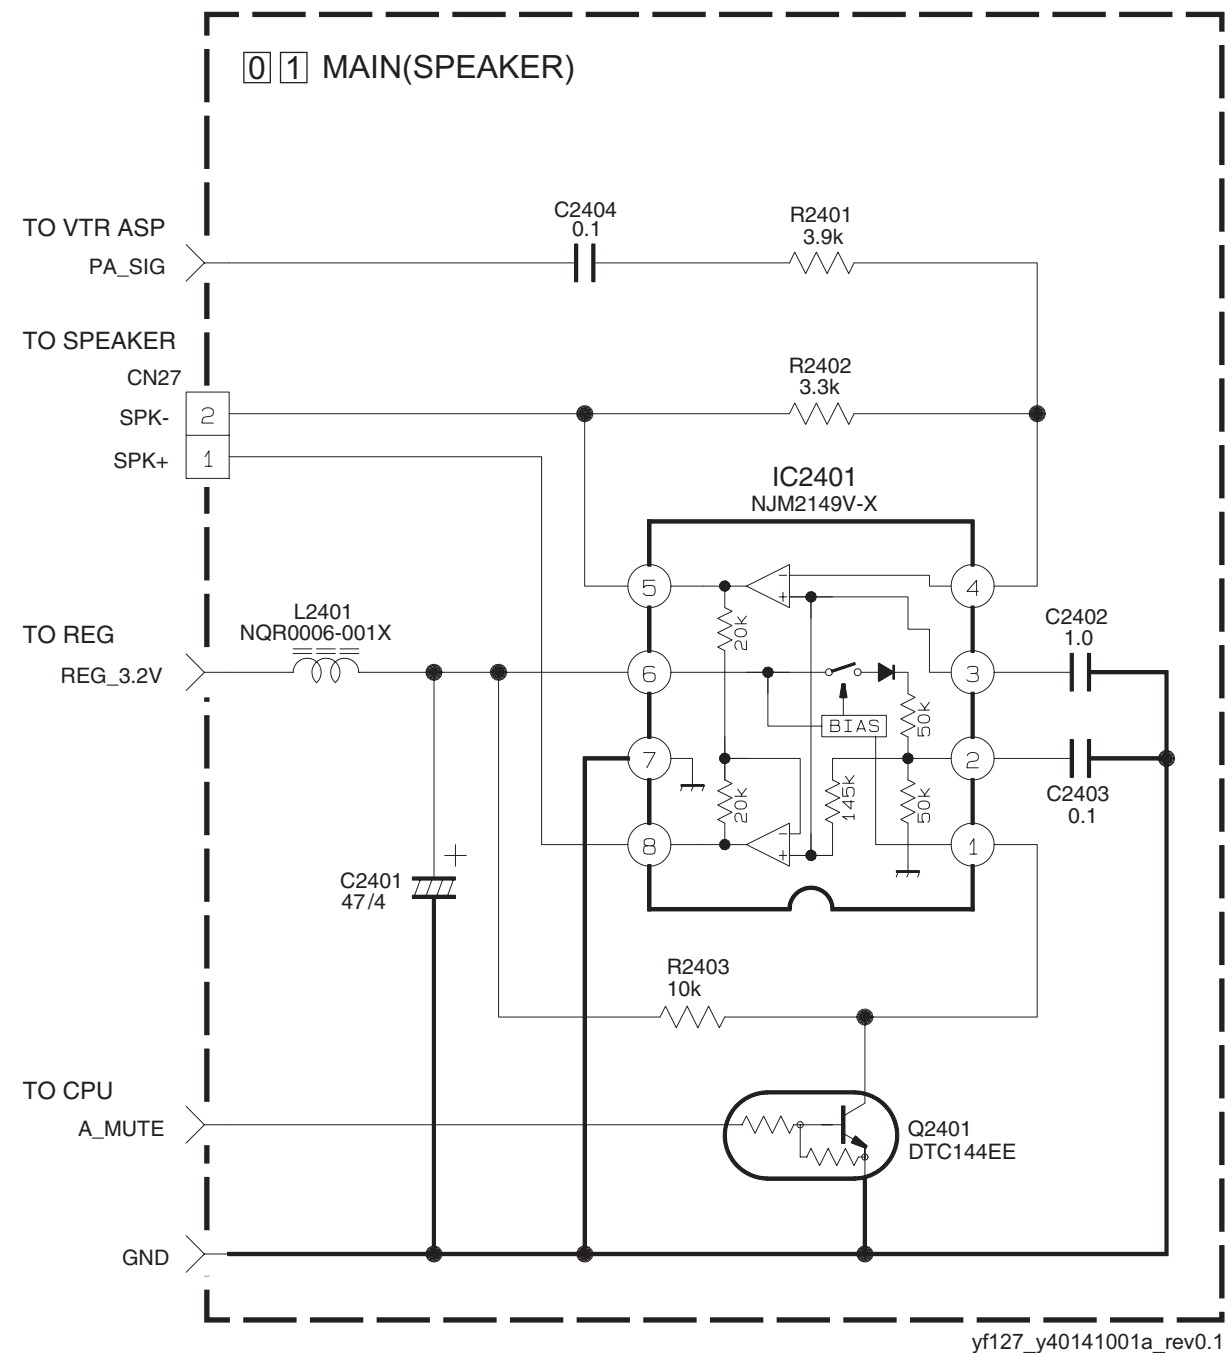


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ MAIN(JACK) SCHEMATIC DIAGRAM

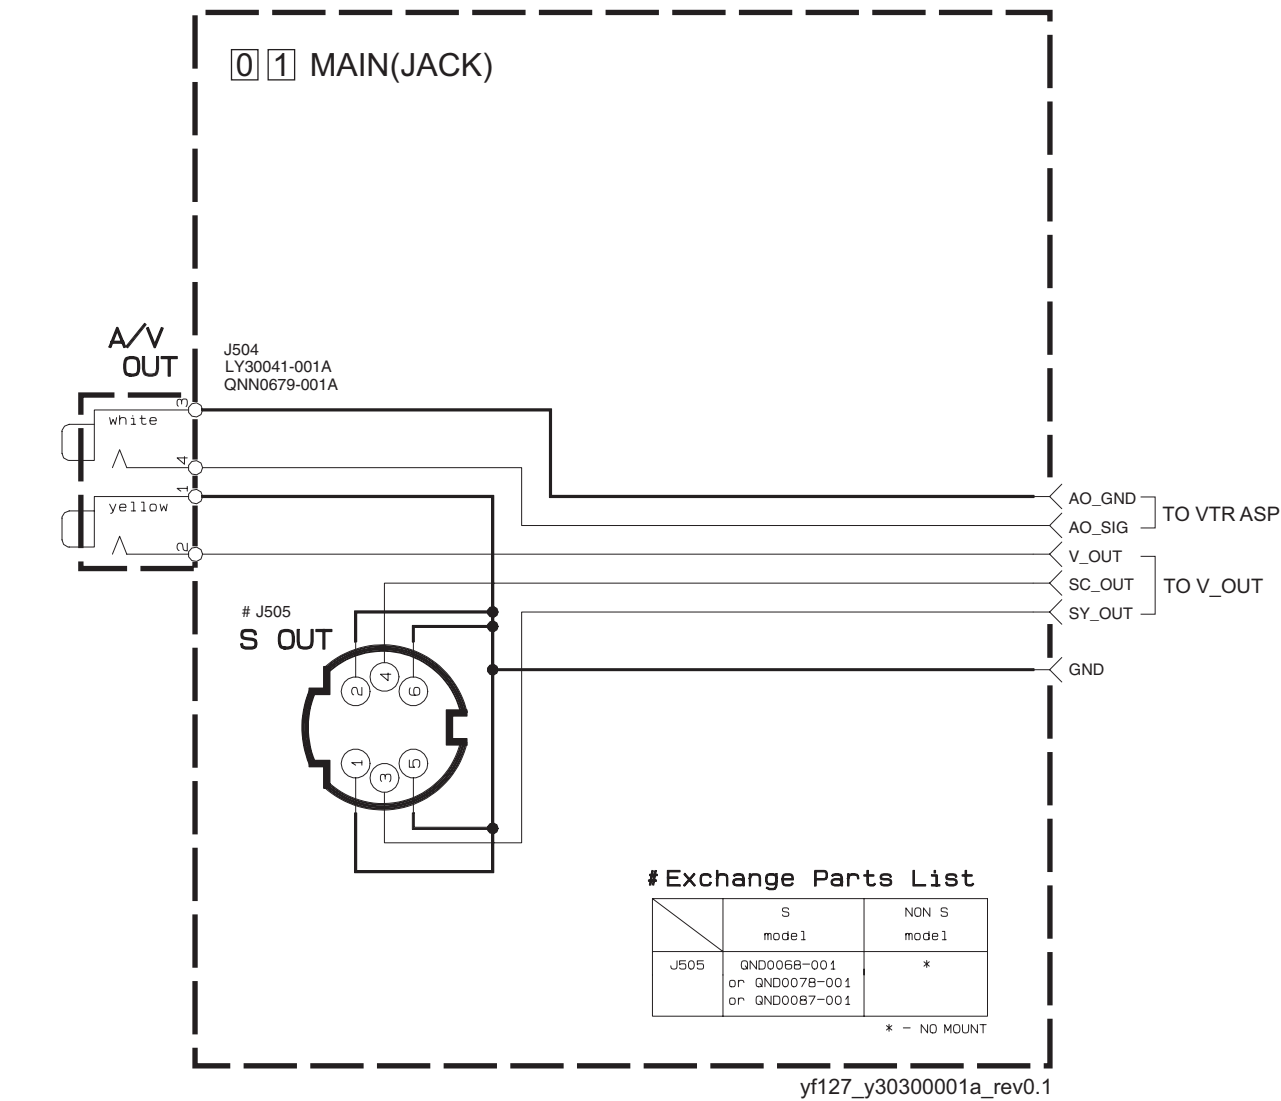


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ CCD SCHEMATIC DIAGRAM

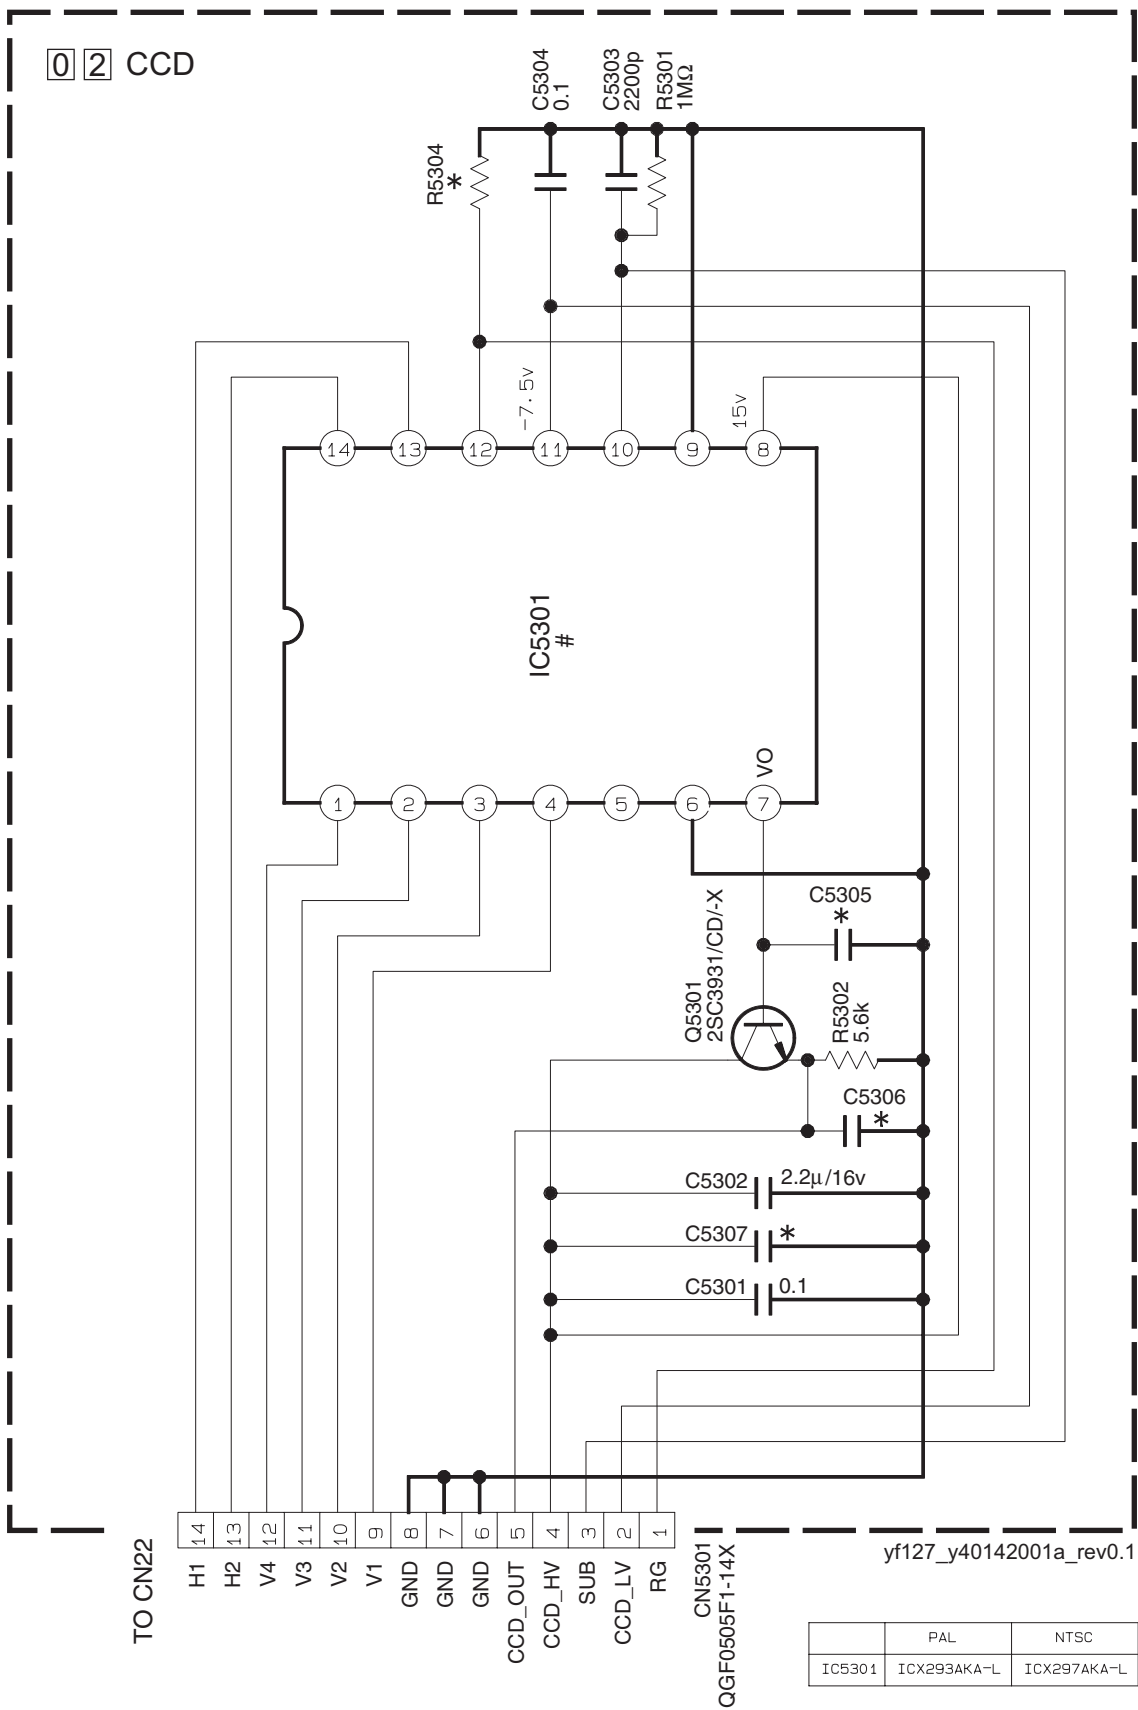


NOTES :1. For the destination of each signal and further line connectionthat are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.
3. IC5301 is incorporated in the CCD base assembly .
When IC5301 needs replacement, replace the CCD base assembly in whole because it cannot be replaced alone.

■ TOP SCHEMATIC DIAGRAM

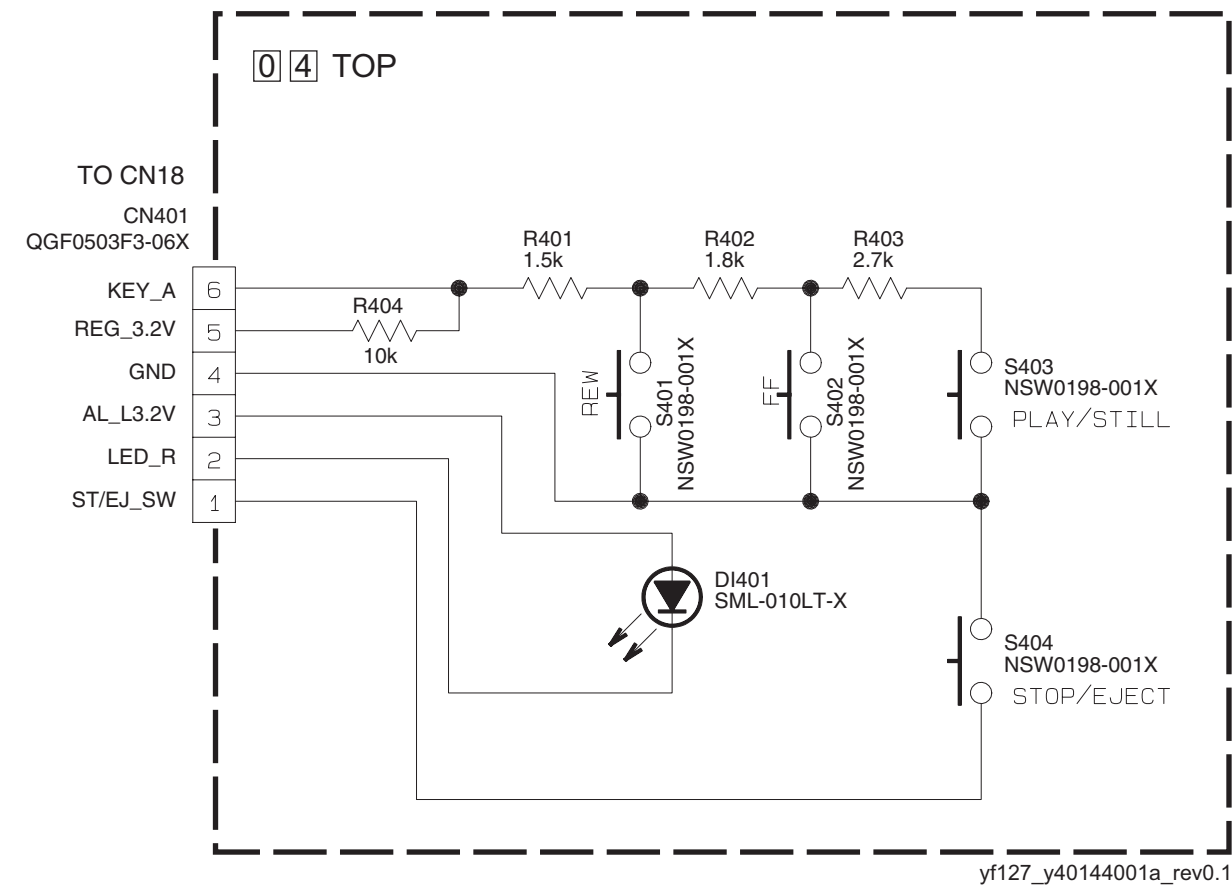


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

■ BWVF SCHEMATIC DIAGRAM

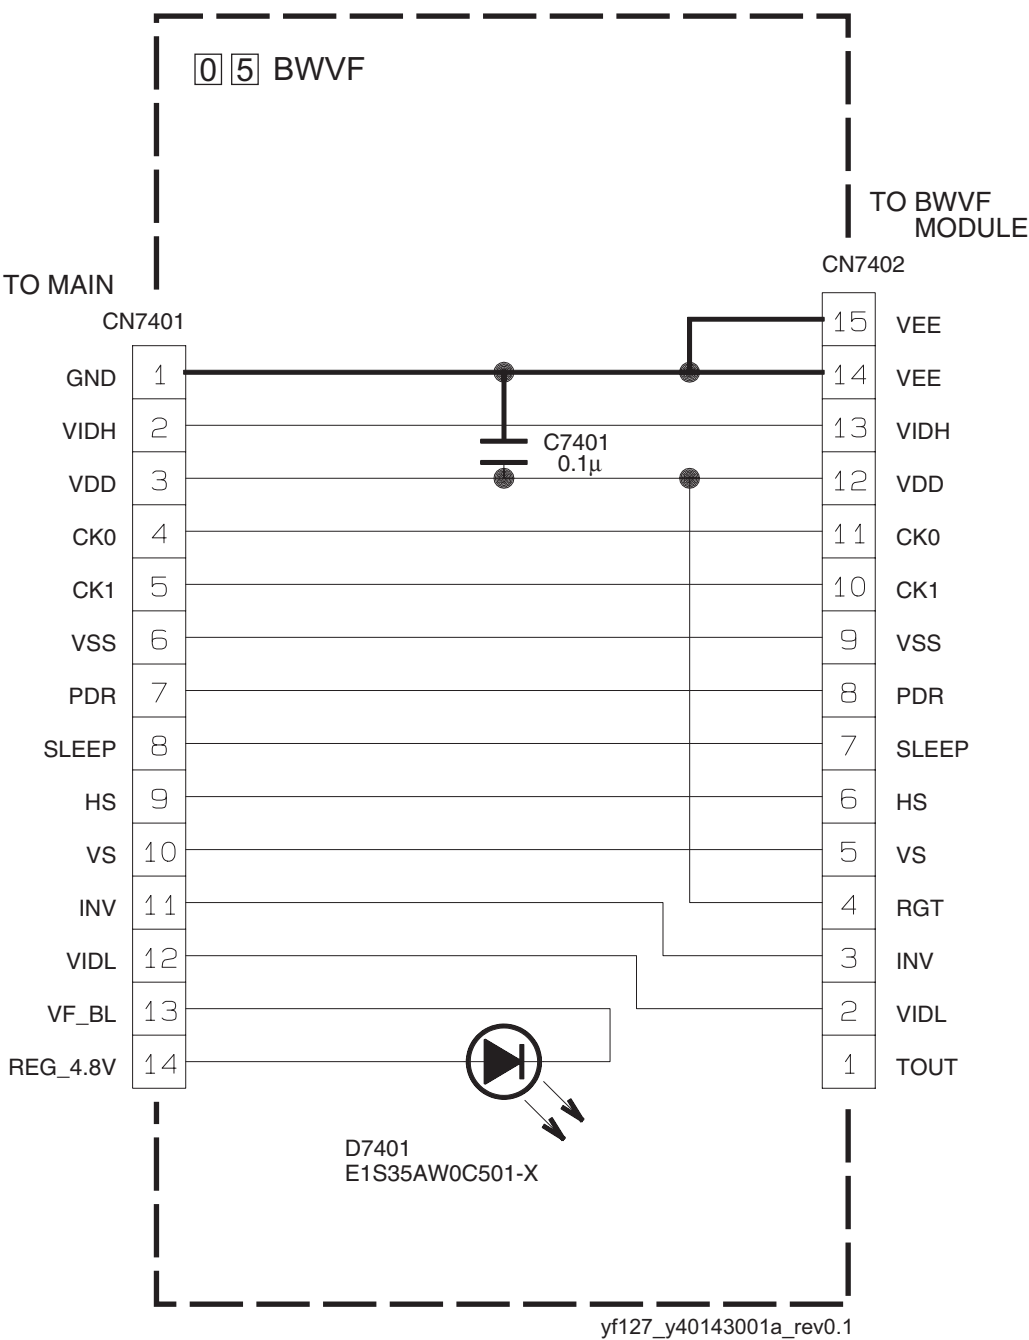


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

MONITOR SCHEMATIC DIAGRAM

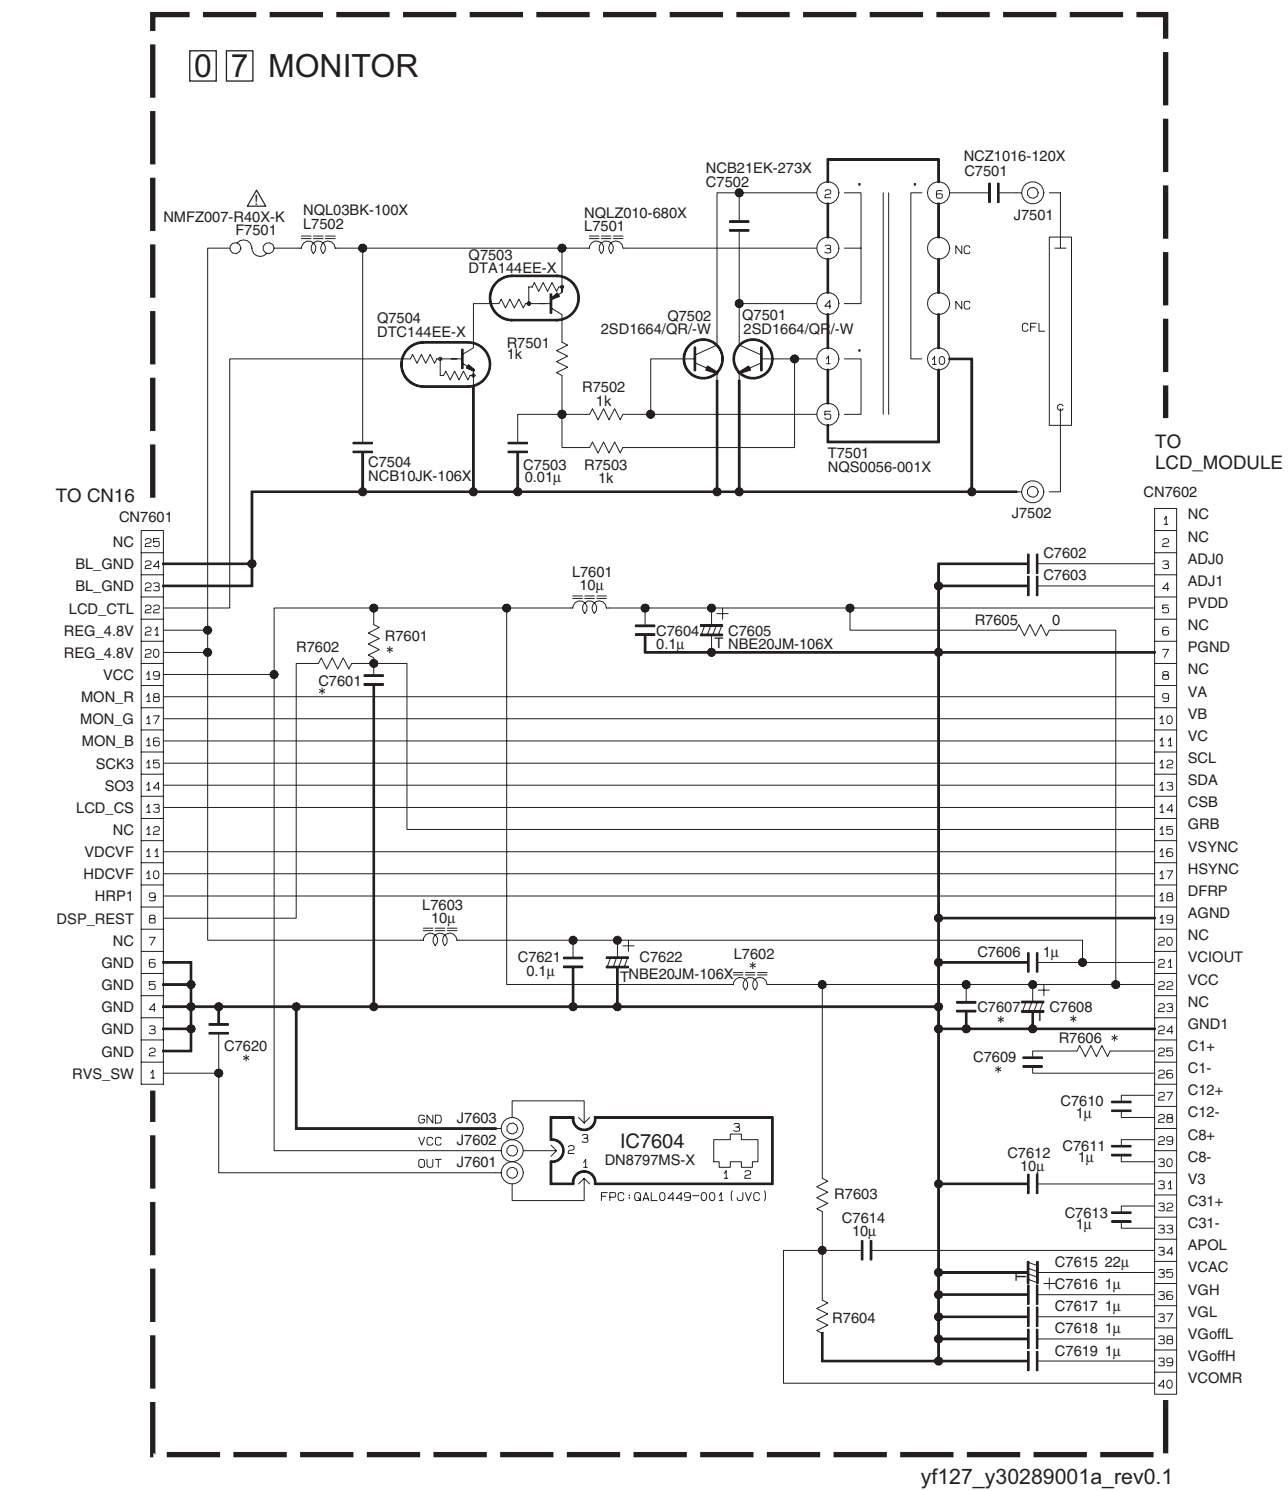


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.

ZOOM UNIT AND SENSOR SCHEMATIC DIAGRAMS

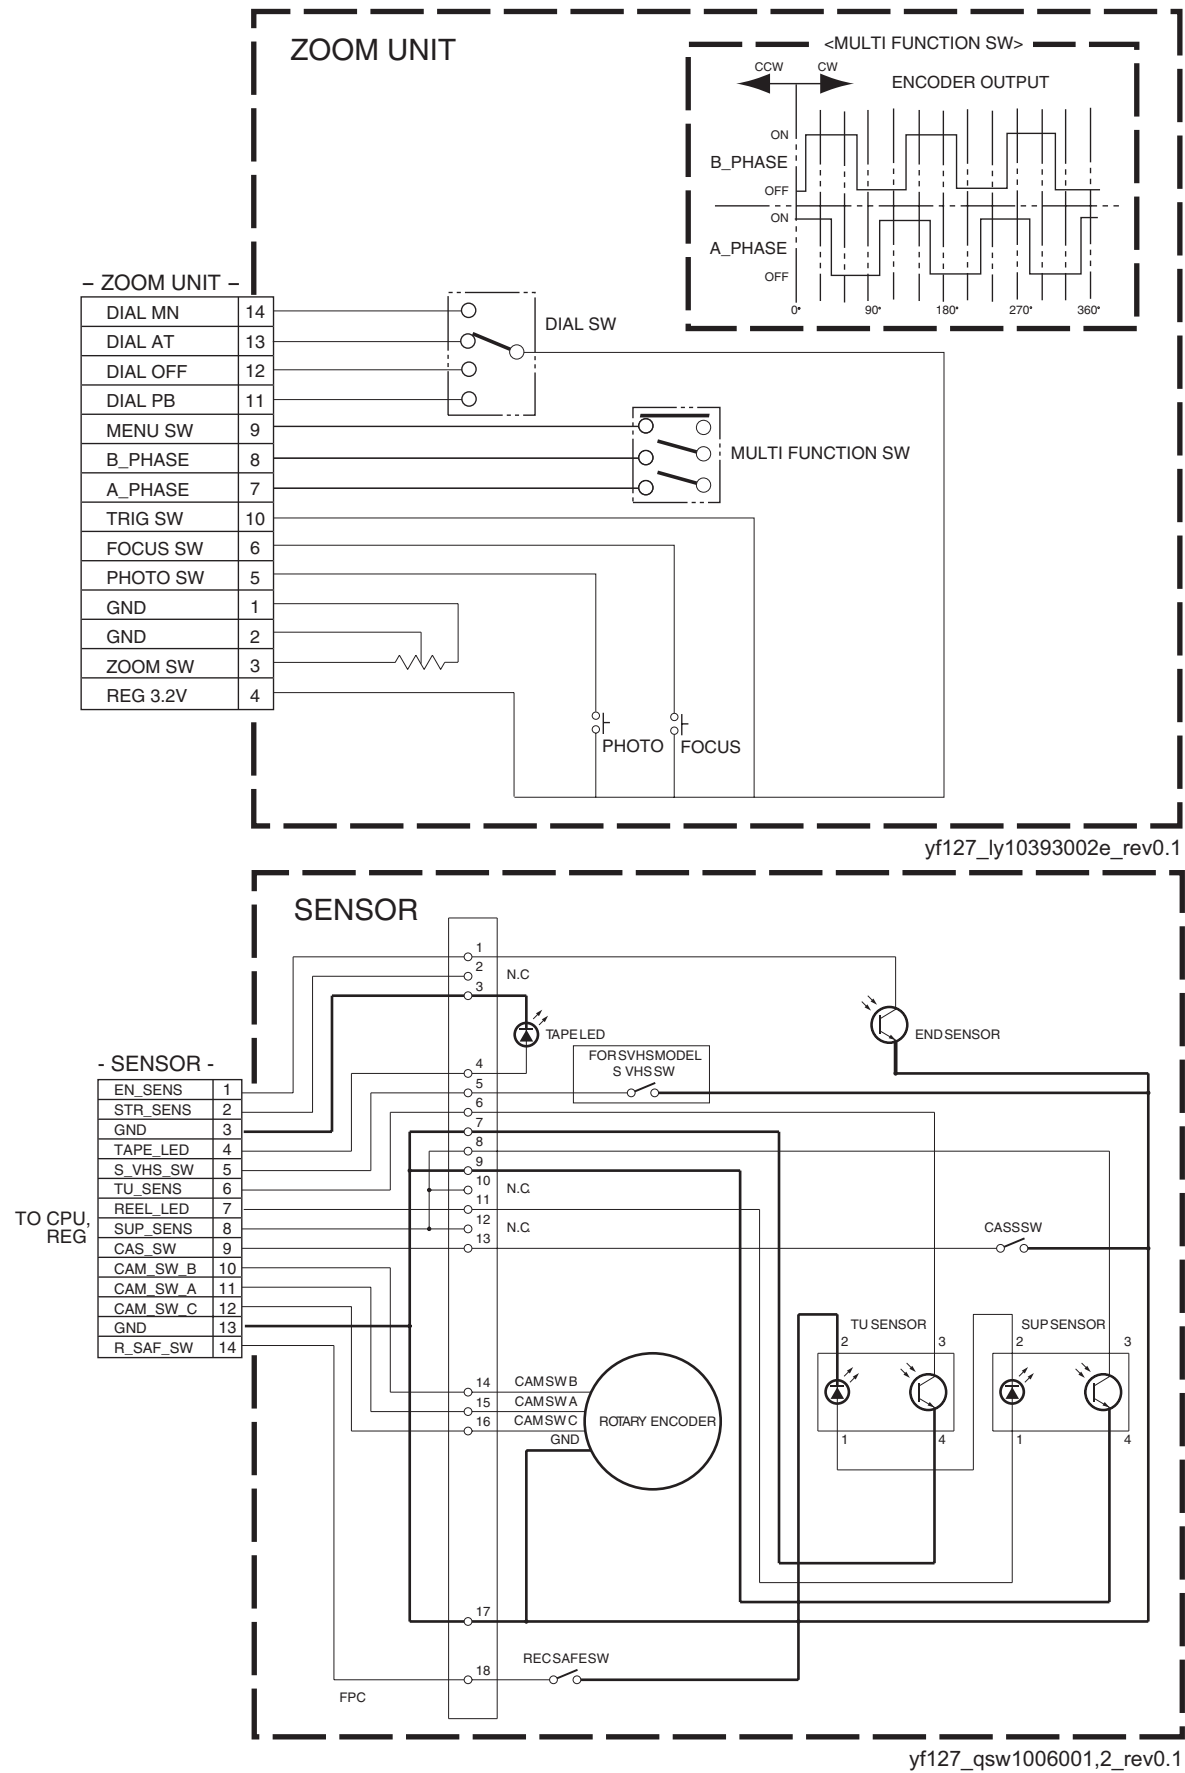


NOTES: 1. For the destination of each signal and further line connections that are cut off from this diagram, refer to "BOARD INTERCONNECTIONS".
2. The parts with marked (*) is not used.
3. The schematic diagram is only for reference. Avoid replacing individual parts. Replace the entire unit only.

<01>MAIN
LYB10022-001C



MAIN PWB ASS'Y
LYA10022

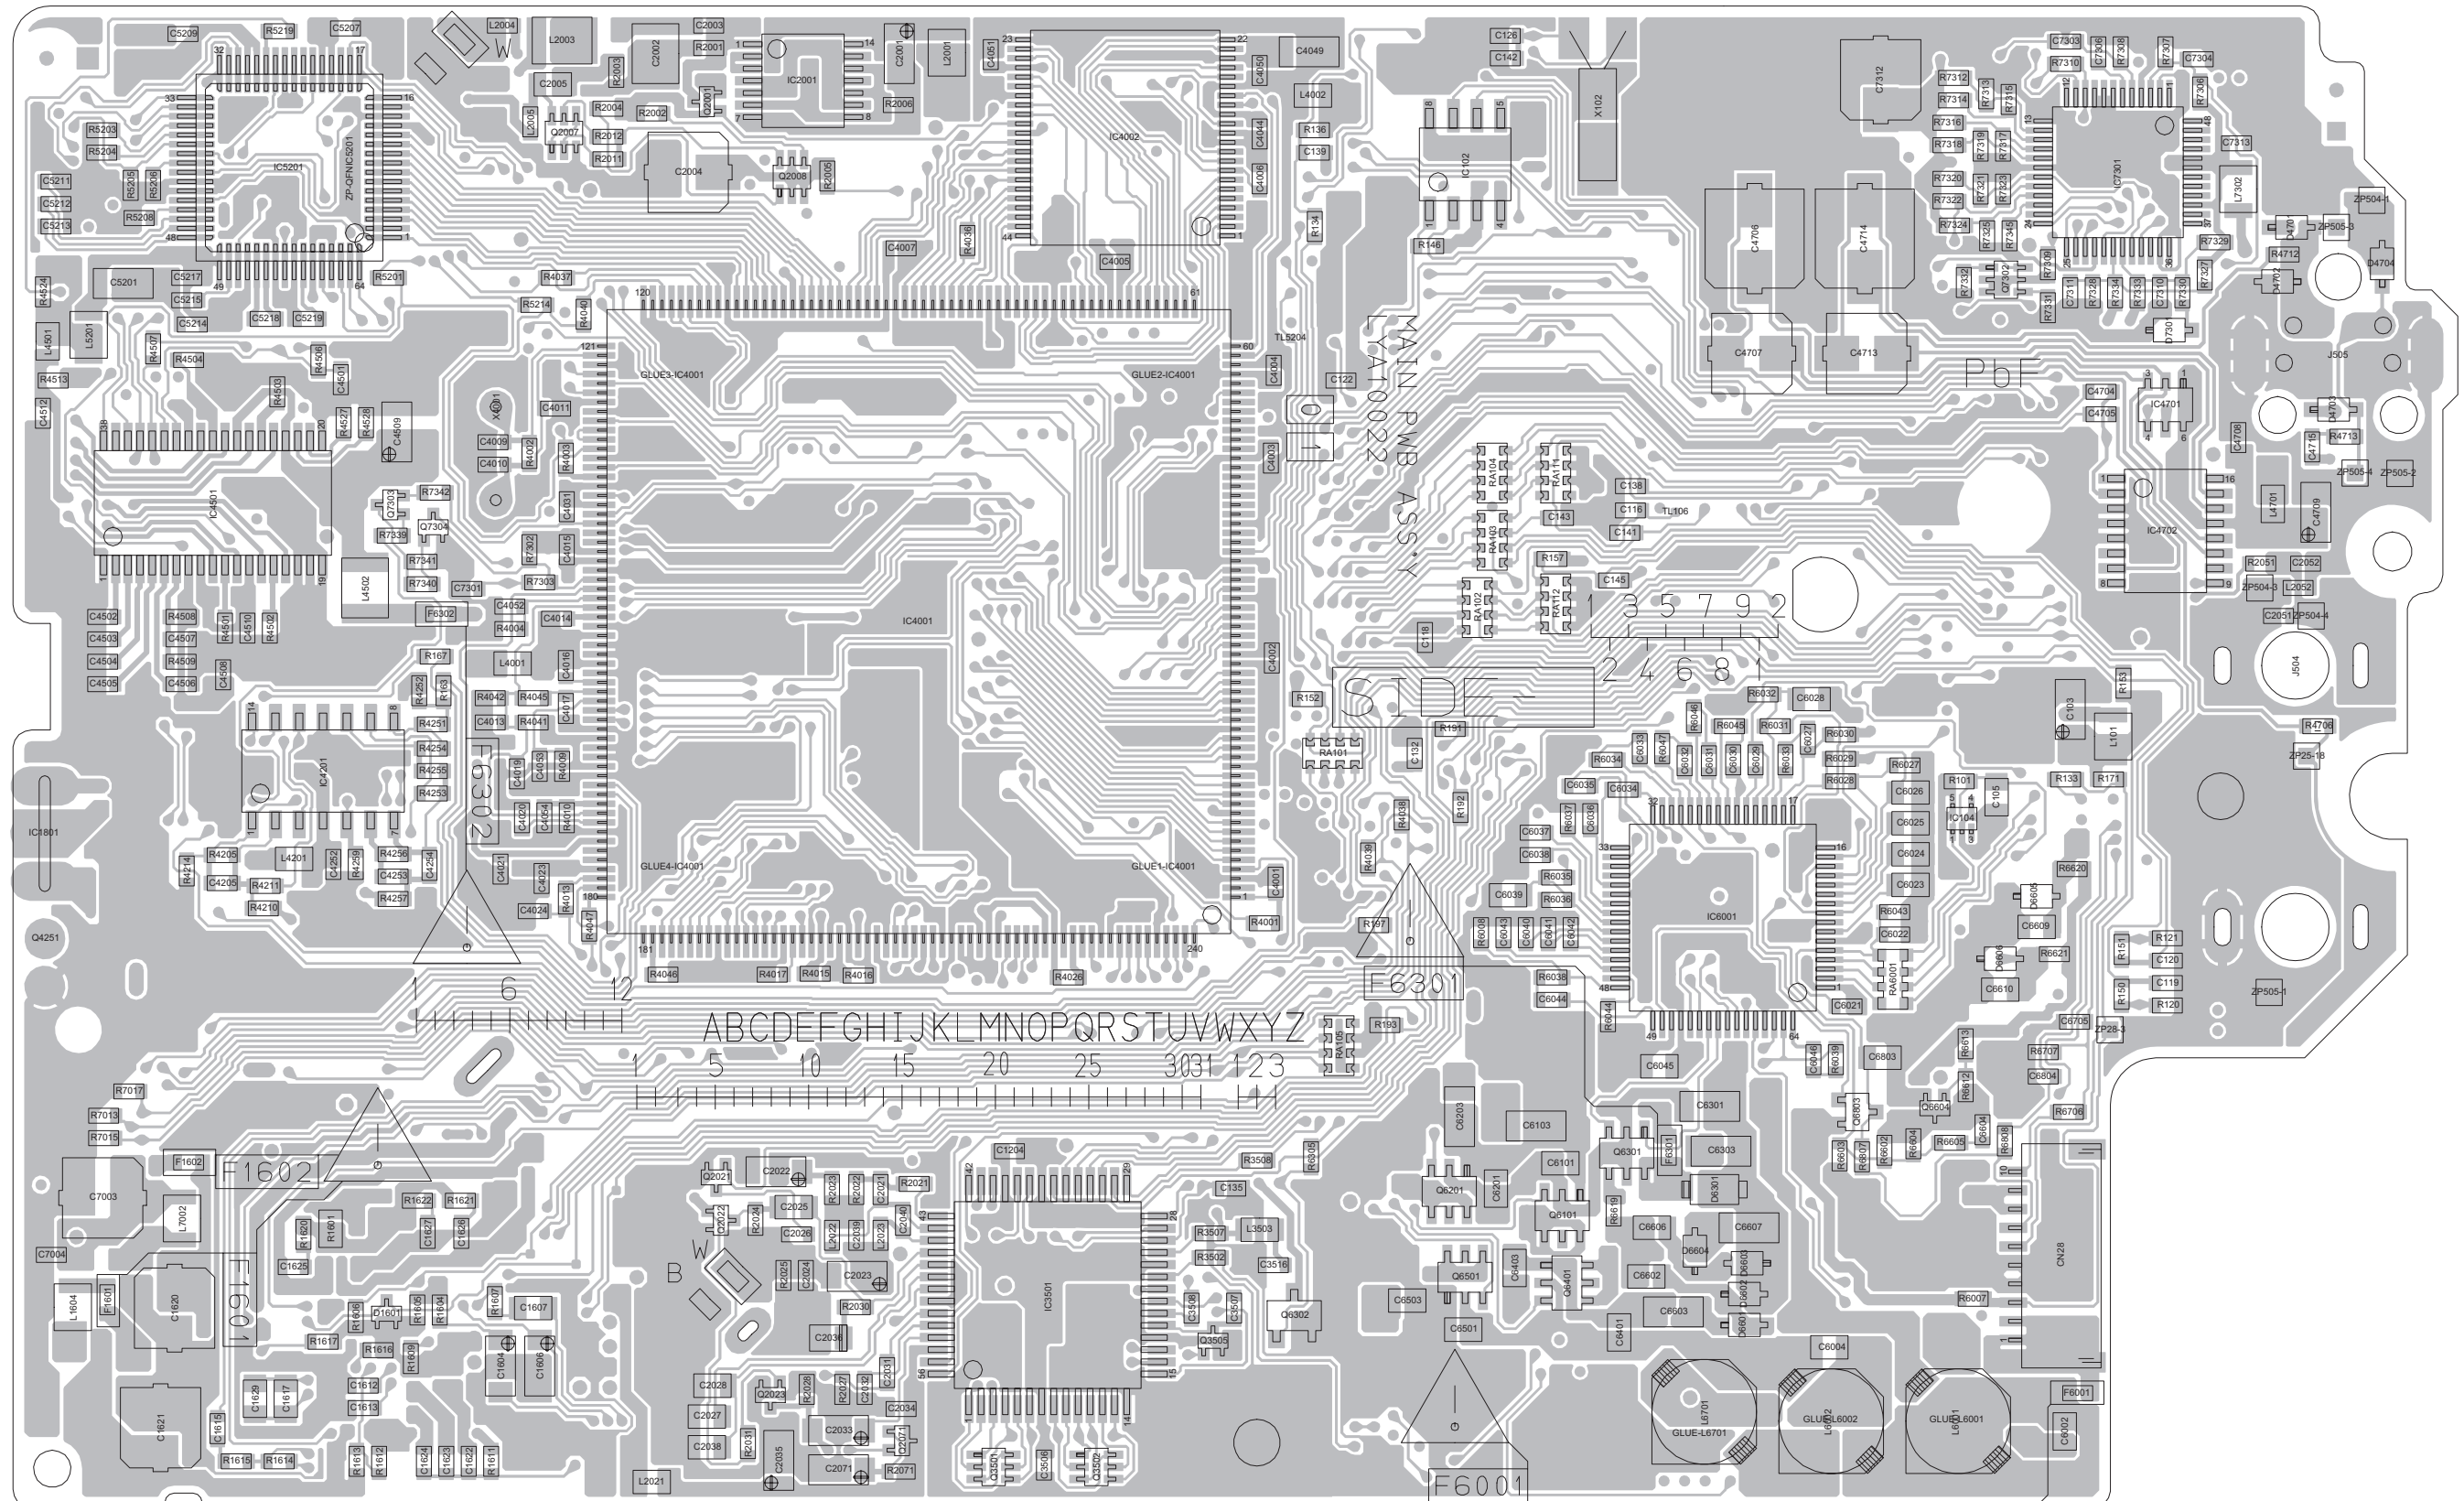


<01>MAIN
LYB10022-001C

CAUTION :
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE AND RATED FUSE(S).
ATTENTION :
POUR UNE PROTECTION PERMANENTE CONTRE LES RISQUE D'INCENDIE,
REEMPLACER LES FUSIBLES PAR UN AUTRE DE MEME TYPE ET DE MEME TENSION.

■ CCD, TOP, VF AND MONITOR CIRCUIT BOARDS


<02>CCD
LYB10022-001C

COMPONENT SIDE(A)

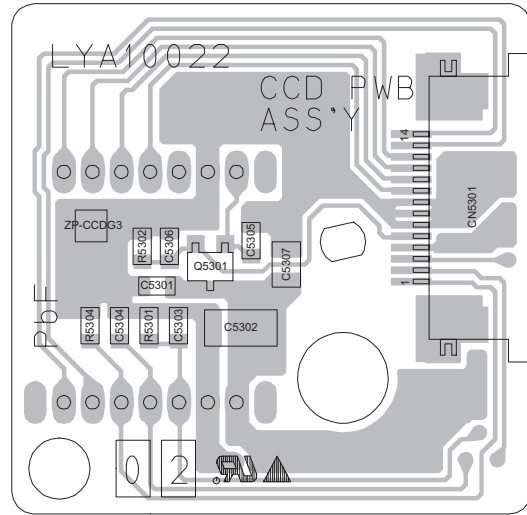


<07>MONITOR
LYB20015-001A

COMPONENT SIDE(A)

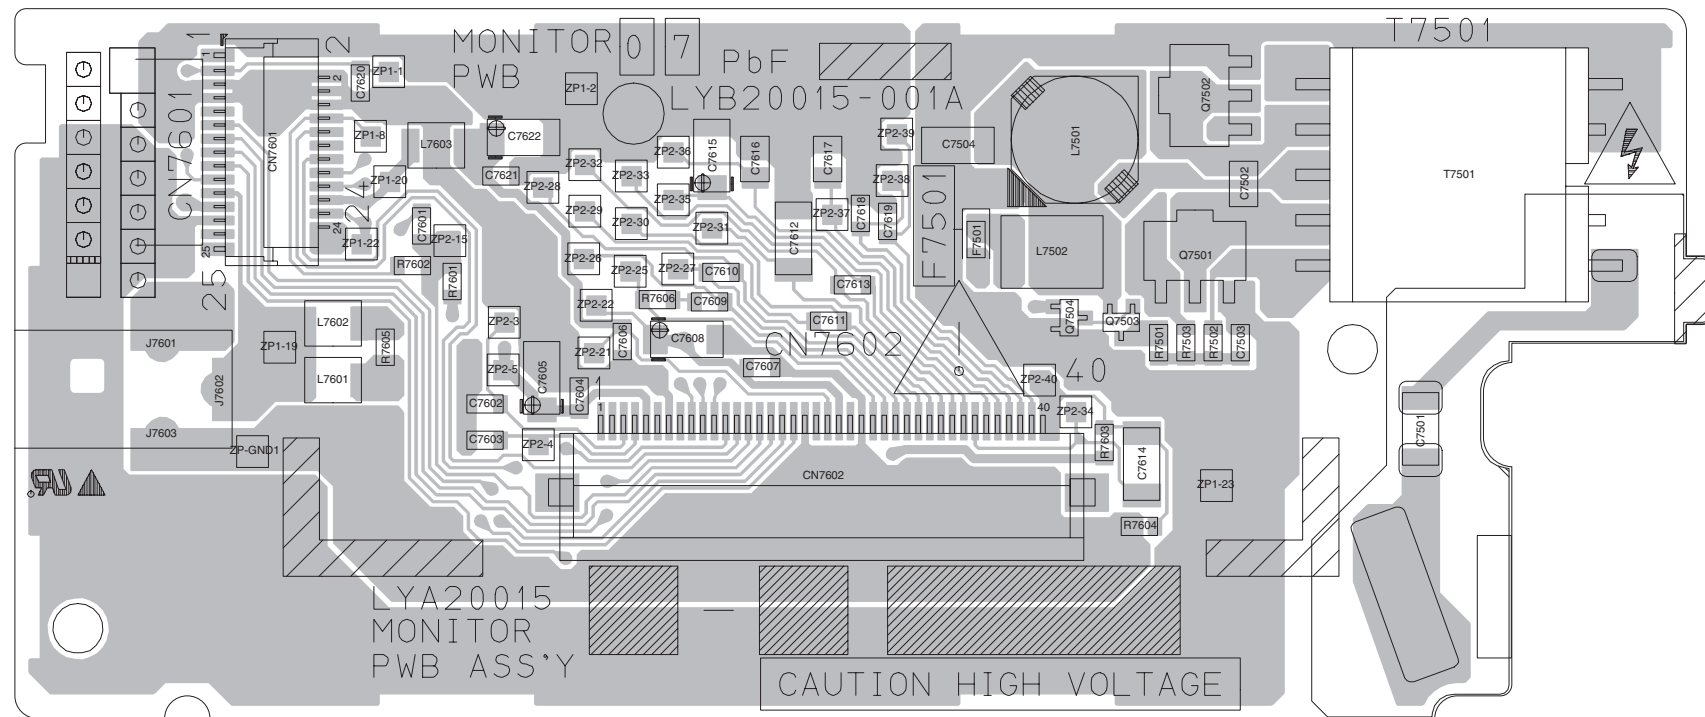


<04>TOP
LYB20018-001A

COMPONENT SIDE(A)

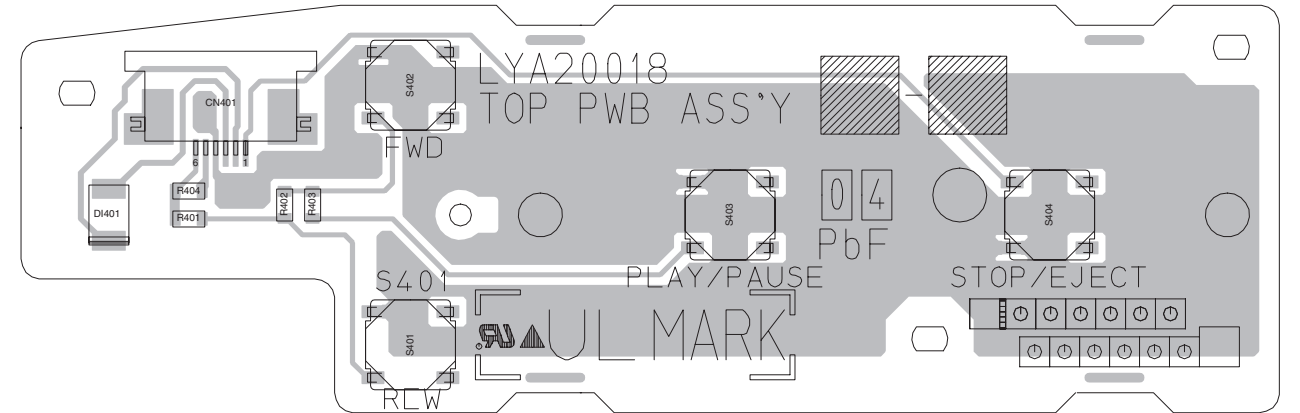


<05>BWVF
LYB20016-001A

FOIL SIDE(B)

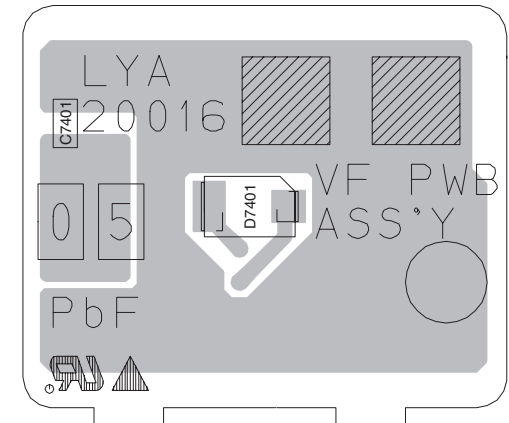


COMPONENT SIDE(A)

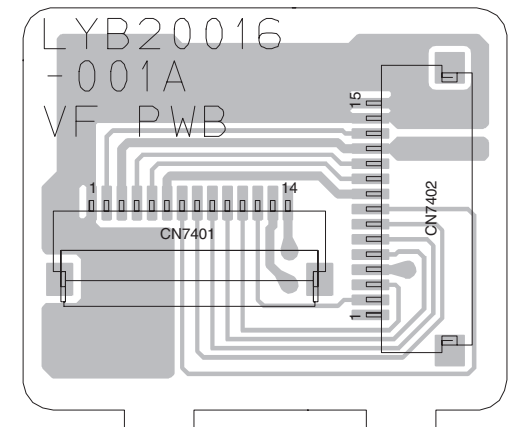


CAUTION : FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE AND RATED FUSE(S).
ATTENTION : POUR UNE PROTECTION PERMANENTE CONTRE LES RISQUES D'INCENDIE, REMPLACER LES FUSIBLES PAR UN AUTRE DE MEME TYPE ET DE MEME TENSION.


■ POWER SYSTEM BLOCK DIAGRAM

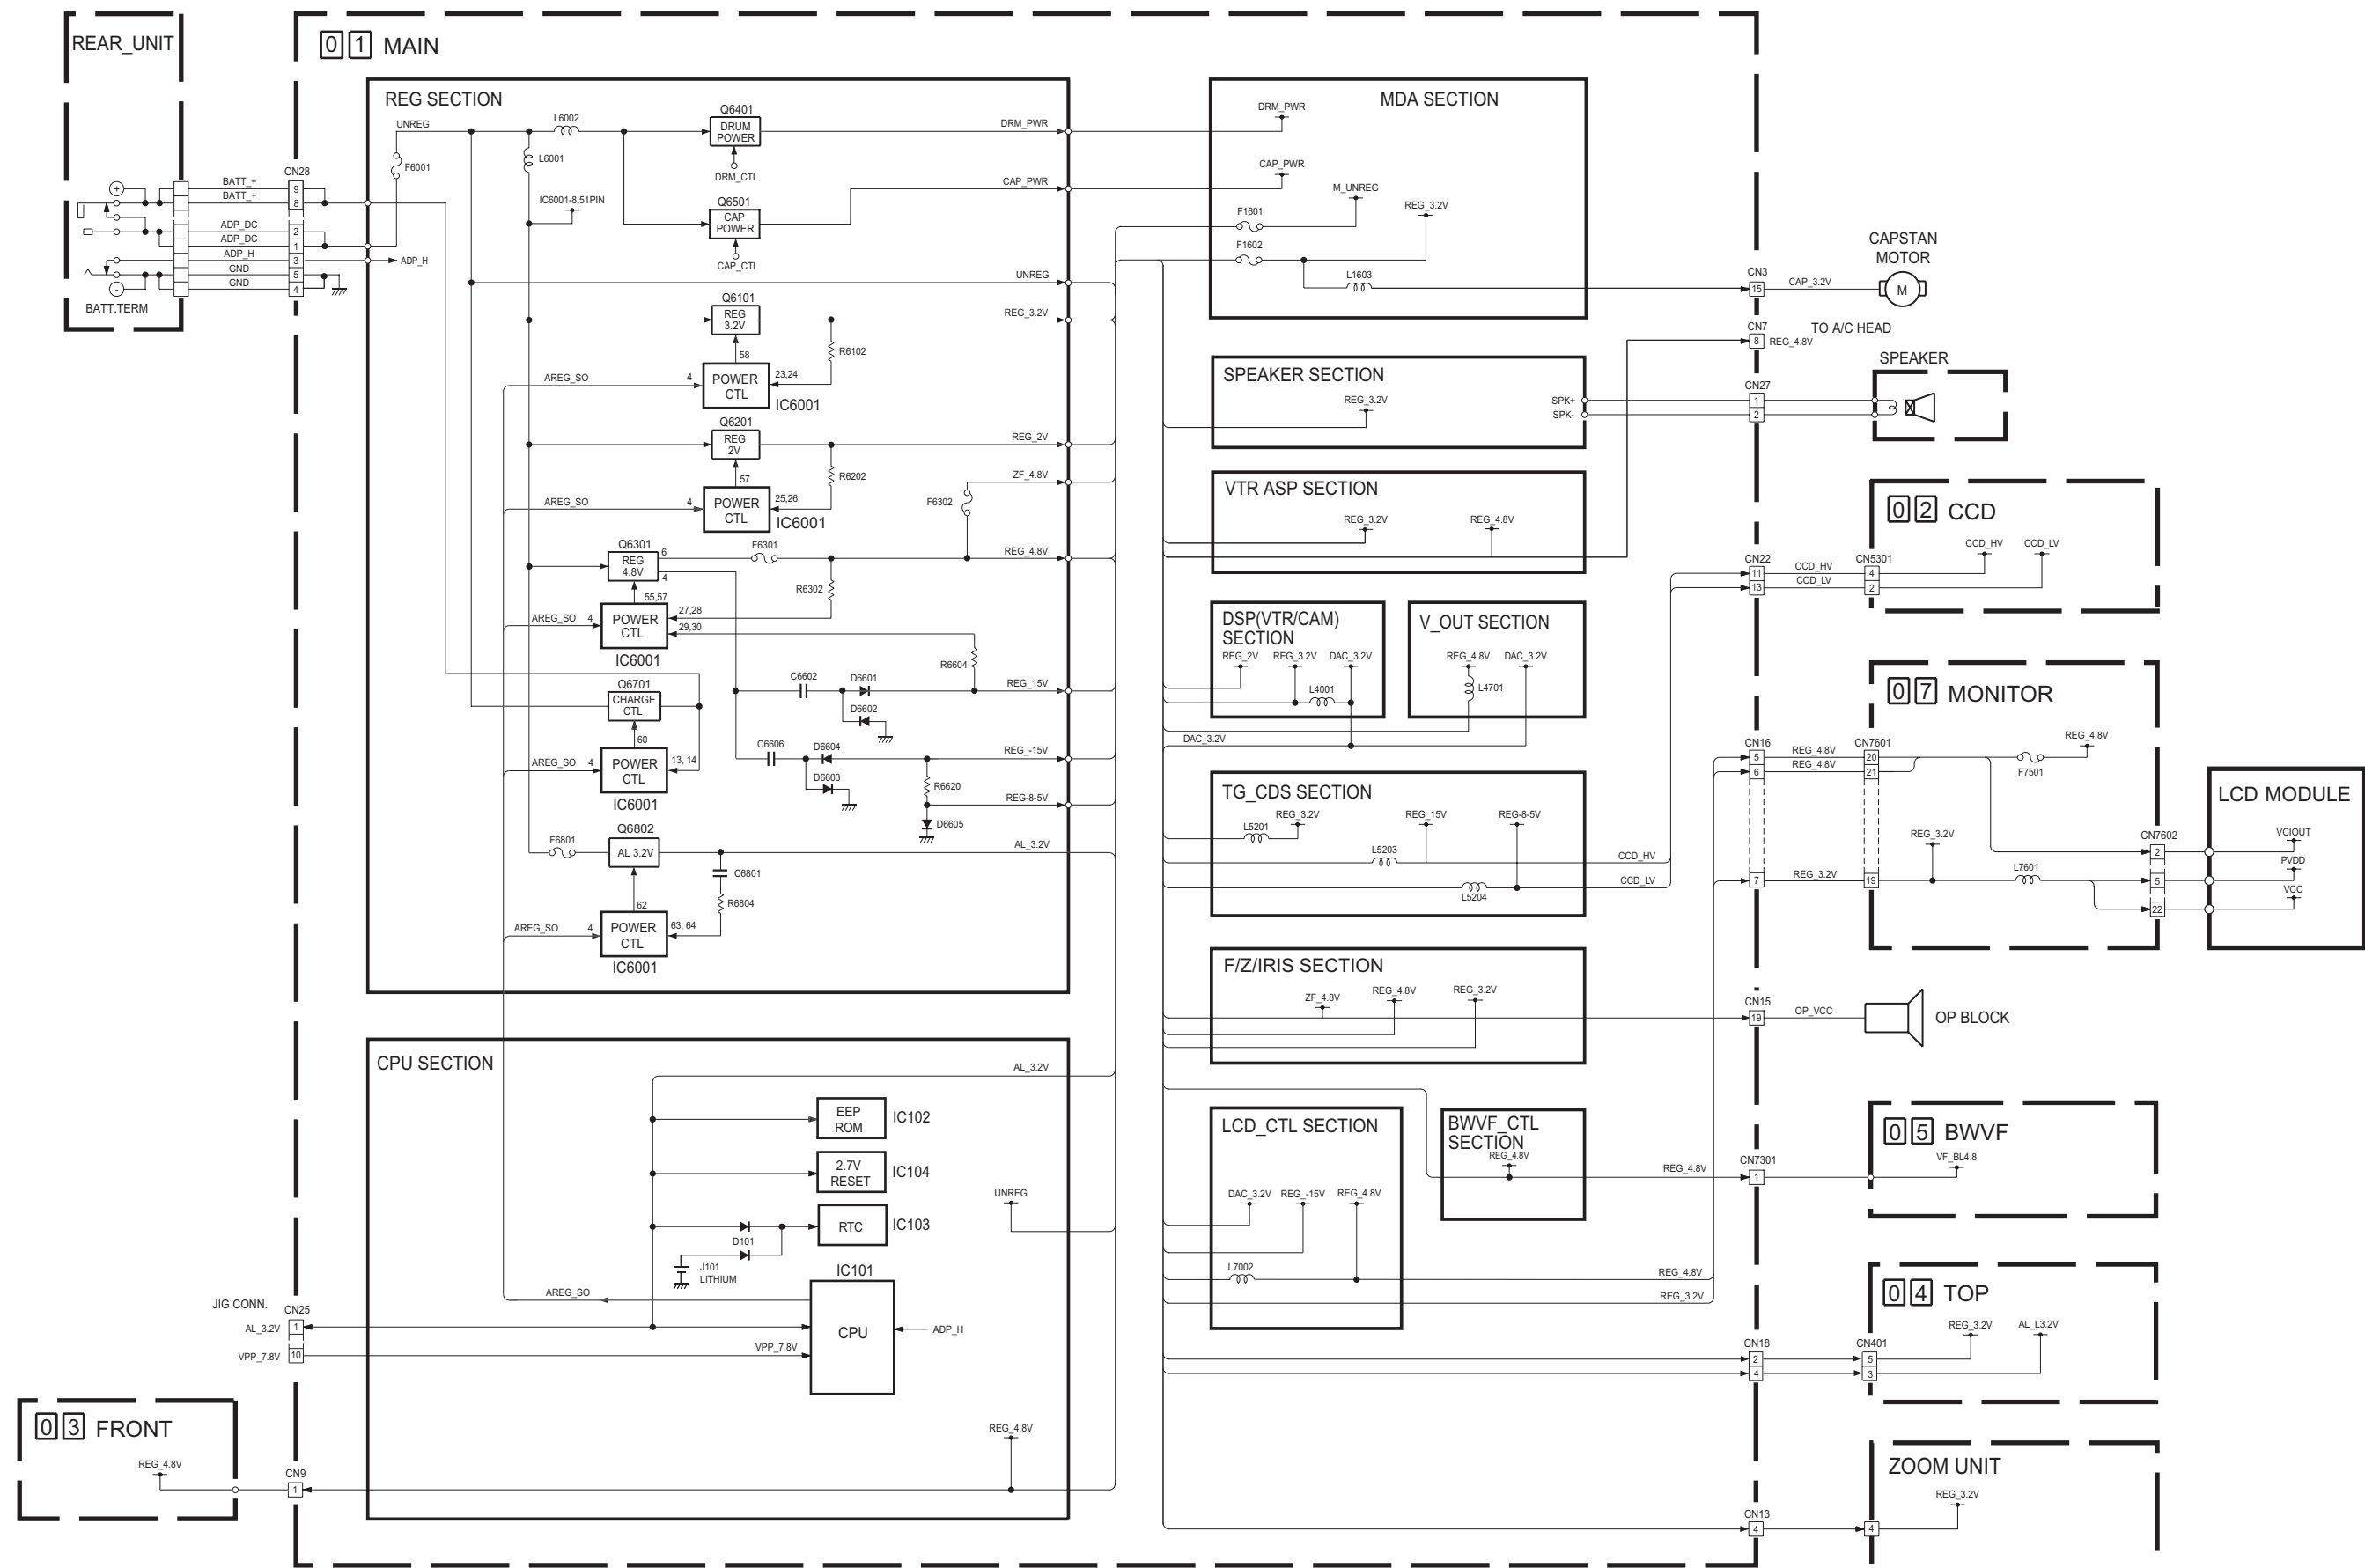

■ CAMERA AND Y/C SYSTEM BLOCK DIAGRAM (1/2)

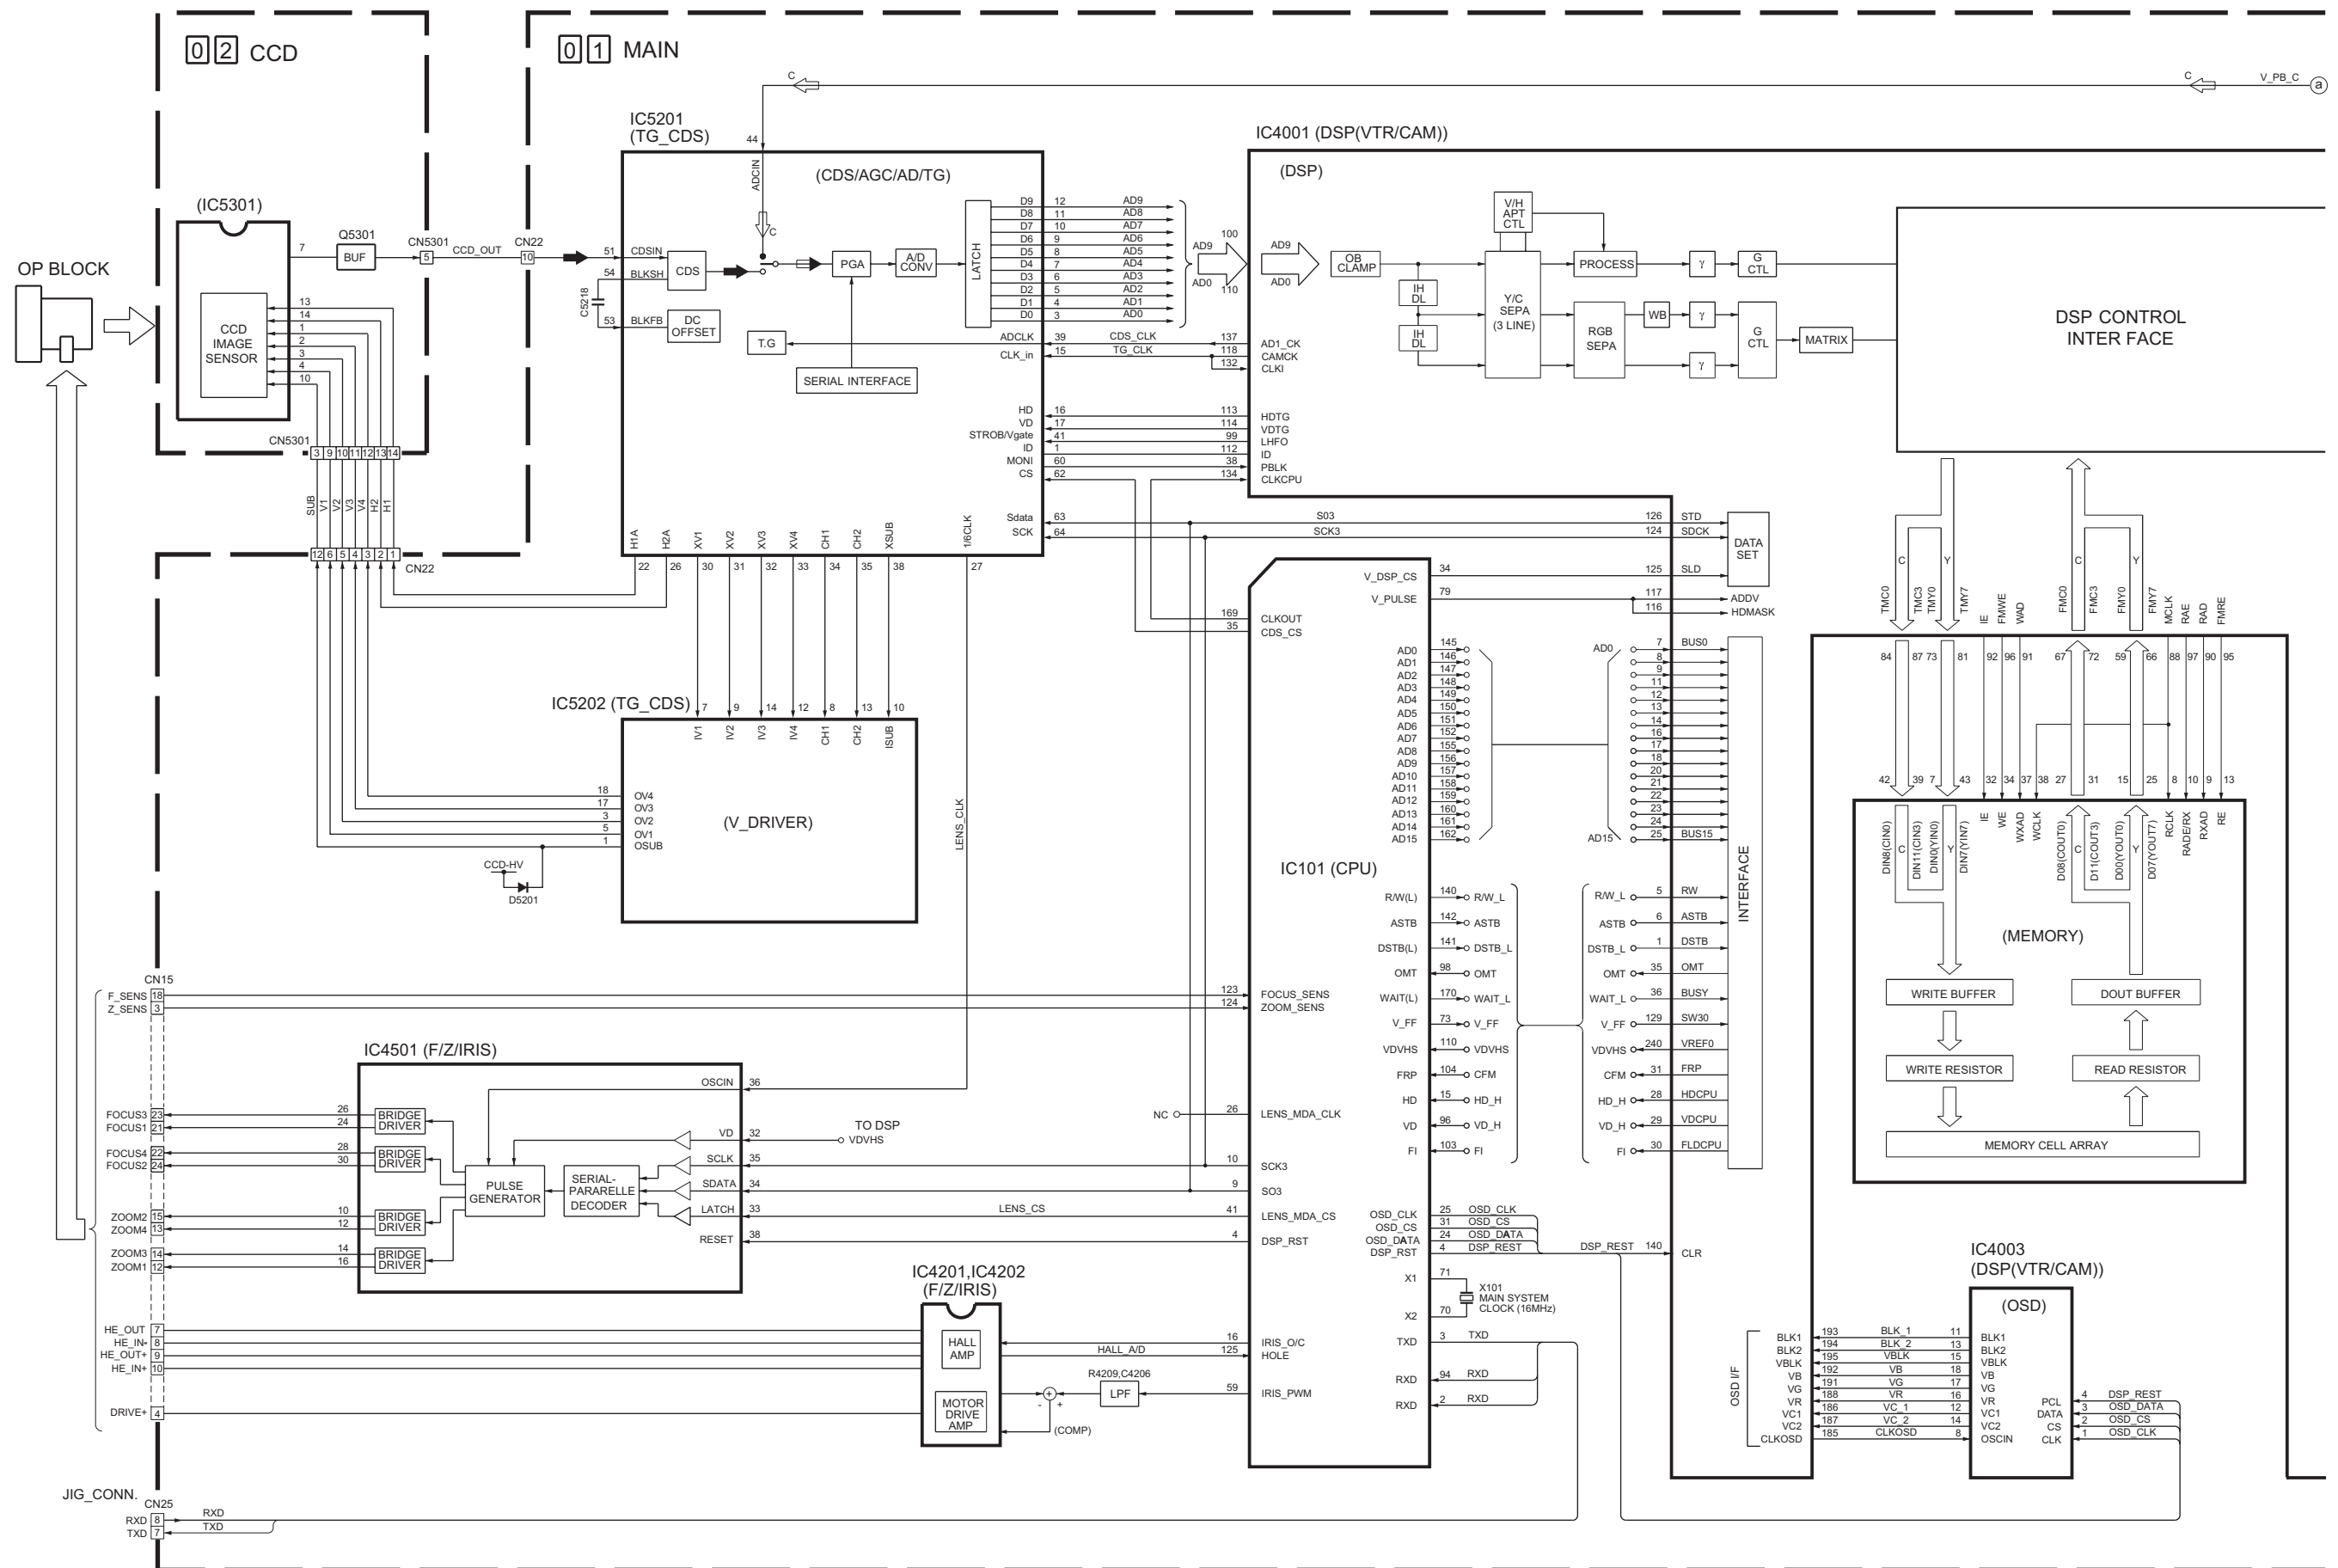

■ CAMERA AND Y/C SYSTEM BLOCK DIAGRAM (2/2)

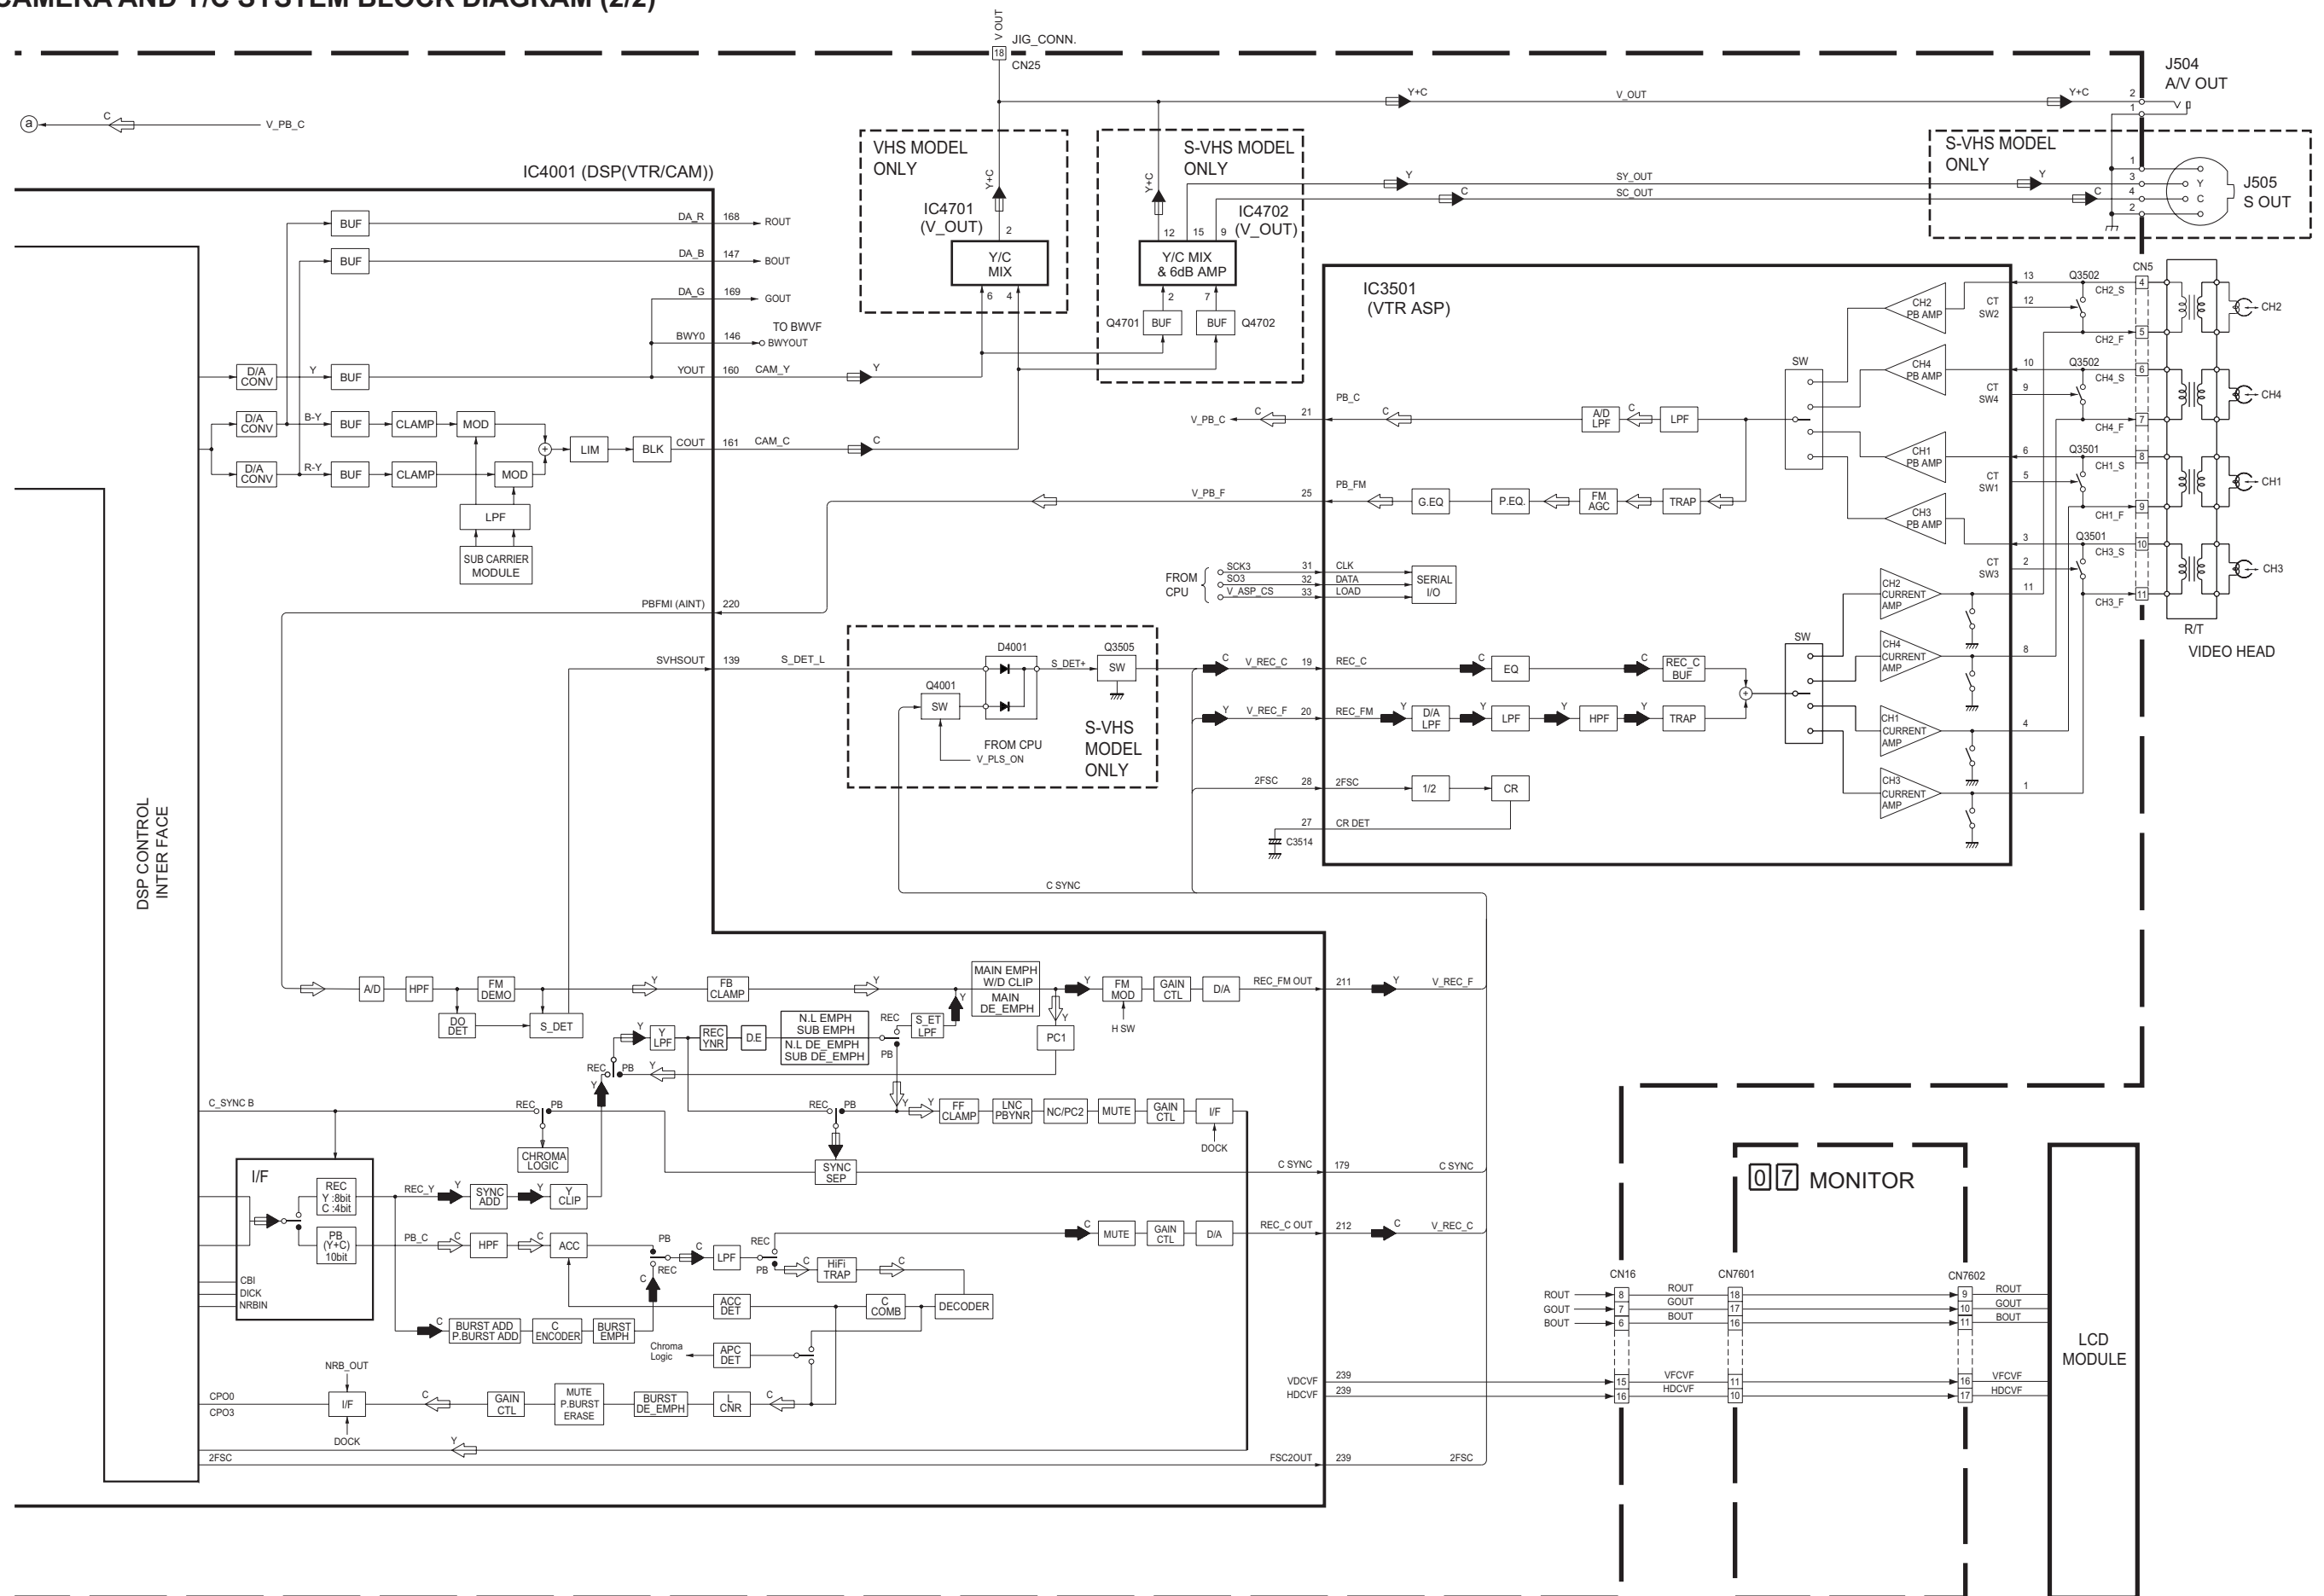

■ VOLTAGE CHARTS

<CPU>			MODE PIN NO. REC PLAY		
IC101					
1	3.1	3.1			
2	3.1	3.1			
3	0	0			
4	3.1	3.1			
5	0	0			
6	0	0			
7	3.0	3.0			
8	0.4	0			
9	0.3	0.5			
10	3.0	3.0			
11	0	0			
12	0.4	0			
13	3.1	3.1			
14	0	0			
15	0.2	0.2			
16	1.4	0			
17	0	0			
18	3.1	3.0			
19	0	0			
20	3.1	3.1			
21	0	0			
22	0	0			
23	0	0			
24	0	2.7			
25	3.0	3.0			
26	1.5	1.4			
27	3.1	3.1			
28	0	0			
29	2.3	2.4			
30	3.1	3.1			
31	2.8	2.6			
32	3.1	3.1			
33	3.1	3.0			
34	3.1	3.1			
35	2.9	3.0			
36	0.2	0			
37	0	0			
38	0	0			
39	3.1	3.1			
40	0	0			
41	0	0			
42	3.0	3.0			
43	3.1	0			
44	0	0			
45	0	0			
46	2.9	2.9			
47	3.1	3.1			
48	2.9	2.9			
49	2.9	0			
50	2.9	2.9			
51	0	2.9			
52	0	2.9			
53	3.0	3.0			
54	-	-			
55	3.1	0			
56	0	0			
57	1.6	1.7			
58	1.2	1.4			
59	1.5	0			
60	0	0			
61	2.8	2.9			
62	2.8	2.8			
63	3.1	3.1			
64	0.5	0.6			
65	0	0			
66	3.1	3.0			
67	3.1	3.1			
68	0	0			
69	3.1	3.1			
70	1.3	1.3			
71	1.4	1.3			
72	0	0			
73	1.5	1.6			
74	0	0			
75	0	0			
76	3.0	2.9			
77	0	0			
78	0	0			
79	0	0			
80	0	0			
81	3.1	3.0			
82	0	0			
83	1.7	0			
84	1.6	1.6			
85	3.1	0			
86	3.0	0			
87	3.1	0			
88	0	0			
89	0.1	0.1			
90	0.2	0.2			
91	0	0			
92	2.9	2.9			
93	2.9	2.9			
94	3.1	3.1			
95	3.0	3.0			
96	0	0			

MODE PIN NO. REC PLAY		
8	3.0	2.9
IC104		
1	3.1	3.1
2	0	0
3	0	0
4	0	0
5	3.1	3.1
Q101		
E	11.0	11.0
C	11.0	11.0
B	10.3	10.3
Q102		
E	0	0
C	0	0
B	3.1	3.1
Q103		
E	0	0
C	0	4.8
B	0.6	0
Q105		
E	0	0
C	3.9	3.9
B	0	0
Q114		
E	0	0
C	0	0
B	3.1	3.1
Q118		
E	0	0
C	0	0
B	0.7	0.7
Q119		
1	0	0
2	0	0
3	0.6	0.6
4	0	0
5	0	0
6	0.6	0.6

<MDA>		
MODE PIN NO.	REC	PLAY
IC1601		
1	0	0
2	0.6	0.7
3	0.6	0.7
4	0	0
5	0.6	0.7
6	0	0
7	0	0
8	1.5	1.6
9	1.5	1.6
10	0	1.5
11	1.5	1.5
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	-	-
25	-	-
26	11.0	11.0
27	0	0
28	2.8	2.9
29	0.9	0.9
30	1.3	1.4
31	0.7	0.7
32	1.0	1.0
33	1.4	1.4
34	1.4	1.4
35	1.4	1.4
36	0	0
37	1.4	0
38	0	0
39	1.6	1.6
40	3.8	3.8
41	0	0
42	0	0
43	0	0
44	0	0
45	4.8	4.8
46	1.6	1.6
47	1.6	1.5
48	1.6	0
49	1.6	1.5
50	0	0
51	13.7	0
52	2.3	0
53	12.4	0
54	0	0
55	0	0
56	0	0
57	3.1	3.1
58	2.9	2.9
59	0	0
60	1.6	0
61	0.5	0.6
62	1.6	1.6
63	0.7	0.7
64	0.9	0

<VTR ASP>		
MODE PIN NO.	REC	PLAY
IC2001		
1	1.4	3.1
2	1.5	0
3	1.5	0
4	1.4	3.1
5	1.5	0
6	1.4	0
7	0	0
8	1.4	0
9	1.4	3.1
10	1.5	0
11	1.5	3.1
12	1.5	0
13	1.5	3.1
14	3.0	3.1
IC3501		
1	2.2	2.1
2	2.2	2.3
3	2.2	2.1
4	2.1	2.1
5	2.2	2.2
6	2.2	2.1
7	4.8	4.8
8	2.1	2.1
9	2.1	2.2
10	2.1	2.2
11	2.1	2.1
12	2.3	2.2
13	2.1	2.1
14	0	0
15	3.0	0
16	2.8	0.4
17	4.0	4.5
18	0	0
19	2.8	2.8
20	2.8	0
21	1.0	2.1
22	-	2.2
23	2.3	2.3
24	0	4.8
25	2.2	2.3
26	0	2.6
27	2.5	2.5
28	2.8	2.9
29	0	0
30	1.5	1.5
31	0.3	0.6
32	2.9	2.9
33	1.8	1.8
34	3.1	3.1
35	0	0
36	3.1	3.0
37	0	0
38	0.4	0
39	1.2	0.7
40	1.1	0.7
41	3.2	3.2
42	1.1	0
43	0.9	0.6
44	0	0
45	1.0	0
46	1.2	0.8
47	0.7	0
48	0	0
49	1.2	0
50	1.21	0.6
51	1.1	0
52	1.4	0
53	1.2	1.1
54	1.6	1.5
55	0	0
56	0.3	0.2
57	0	0
58	3.1	3.2
59	1.1	2.1
60	1.2	1.0
61	1.1	2.1
62	0.9	1.7
63	0.8	2.2
64	0.8	2.2
65	1.0	2.0
66	0.5	1.3
67	1.2	1.7
68	1.3	1.8
69	0	0
70	1.8	1.8
71	1.1	1.0
72	1.2	2.0
73	1.1	1.8
74	1.3	1.3
75	1.1	1.5
76	1.8	1.8
77	0.9	1.9
78	0.9	2.0
79	0.8	2.0
80	1.0	1.9
81	0.6	1.1
82	0	0
83	1.8	1.8
84	1.2	1.3
85	1.3	1.4
86	1.2	1.3
87	1.5	1.4
88	1.3	1.2
89	0	0
90	0	0
91	0	0
92	3.0	3.0
93	0	0
94	3.1	3.2
95	2.6	2.6
96	2.6	2.6




MODE PIN NO. REC PLAY		
B	0	0
Q2023		
E	0	0
C	0	0
B	0	0
Q2071		
E	4.4	4.5
C	4.8	4.8
B	4.8	4.8
Q3501		
1	2.1	2.0
2	2.3	2.3
3	2.2	2.1
4	2.2	2.1
5	2.2	2.3
6	2.1	2.1
Q3502		
1	2.2	2.1
2	2.2	2.2
3	2.0	2.1
4	2.1	2.1
5	2.3	2.3
6	2.1	2.1
Q3505		
E	0	0
C	2.8	2.8
B	0	0
Q3901		
1	4.7	4.7
2	4.1	4.5
3	4.1	4.5
4	4.6	4.8
5	4.1	4.5
6	0	0

<SPEAKER>		
MODE PIN NO.	REC	PLAY
IC2401		
1	2.9	2.9
2	1.1	1.1
3	1.2	1.2
4	1.2	1.2
5	1.2	1.2
6	3.2	3.2
7	0	0
8	1.2	0
Q2401		
E	0	0
C	2.9	2.9
B	0	0



<DSP(VTR/CAM)>		
MODE PIN NO.	REC	PLAY
IC4001		
1	3.0	3.1
2	0.7	0.6
3	0	0
4	1.5	1.5
5	3.0	3.0
6	3.0	3.0
7	0.8	0.7
8	0.7	0.7
9	0.6	0.7
10	3.1	3.1
11	0.7	0.6
12	0.7	0.7
13	0.6	0.8
14	0.6	0.8
15	0	0
16	0	0.6
17	0.7	0.8
18	0.6	0.8
19	1.8	1.8
20	0.6	0
21	0.6	0.9
22	0.6	0.7
23	0.5	0.6
24	0.5	0.8
25	0.5	0.6
26	0	0
27	1.8	1.8
28	0.3	0.2
29	0	0
30	1.5	1.5
31	0.3	0.6
32	2.9	2.9
33	1.8	1.8
34	3.1	3.1
35	0	0
36	3.1	3.0
37	0	0
38	0.4	0
39	1.2	0.7
40	1.1	0.7
41	3.2	3.2
42	1.1	0
43	0.9	0.6
44	0	0
45	1.0	0
46	1.2	0.8
47	0.7	0
48	0	0
49	1.2	0
50	1.21	0.6
51	1.1	0
52	1.4	0
53	1.2	1.1
54	1.6	1.5
55	0	0
56	0.3	0.2
57	0	0
58	3.1	3.2
59	1.1	2.1
60	1.2	1.0
61	1.1	2.1
62	0.9	1.7

WAVEFORMS





— CPU —

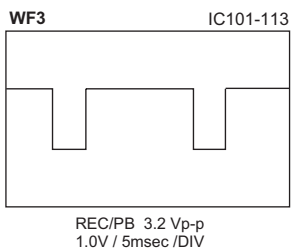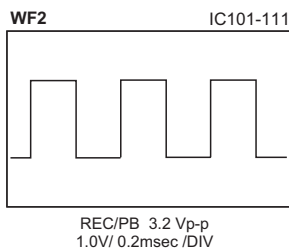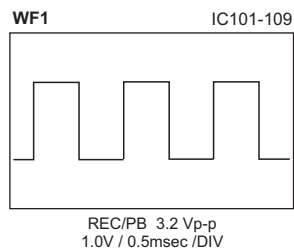







— MDA —

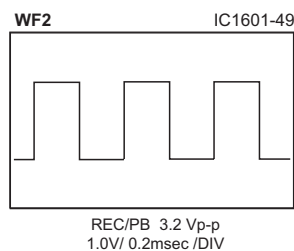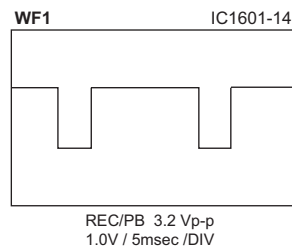




— VTR ASP —

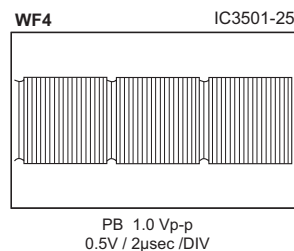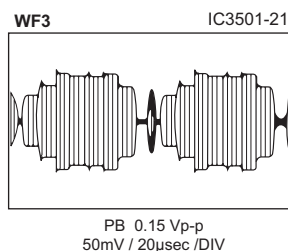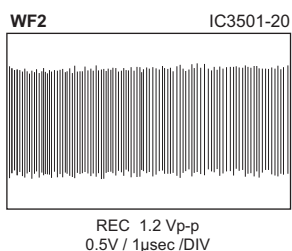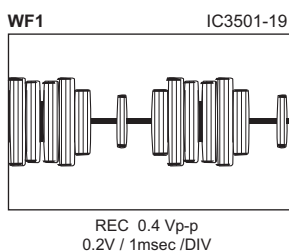



— DSP(VTR/CAM) —

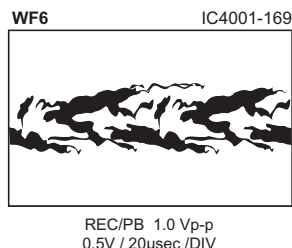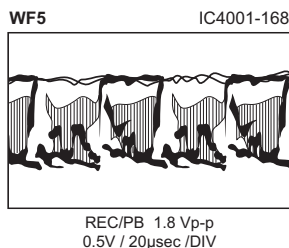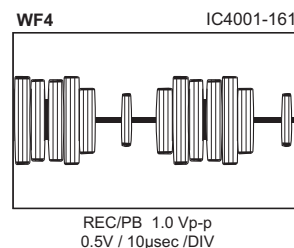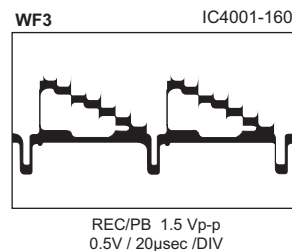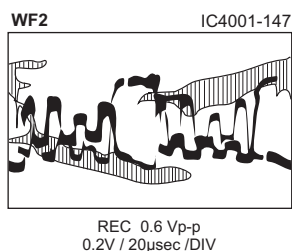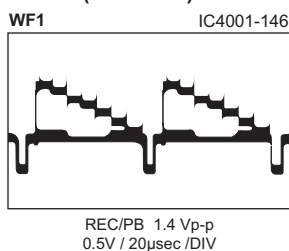


— V_OUT —

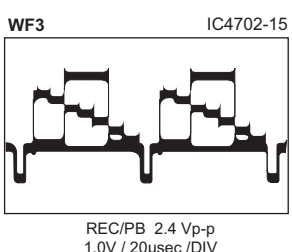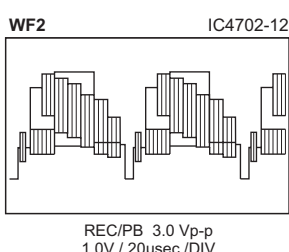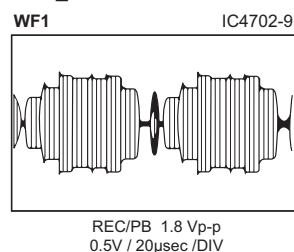

— TG_CDS —

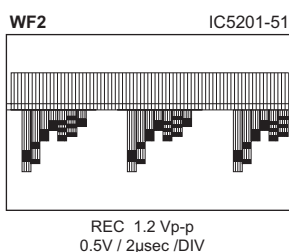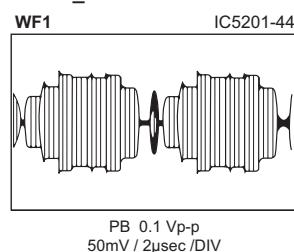

— CCD —

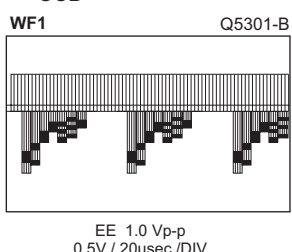



Victor Company of Japan, Limited
Camcorder Category 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.YF127)




Printed in Japan
VPT

JVC


SERVICE MANUAL

MECHANISM ASSEMBLY


DVC MECHANISM VHS-C MECHANISM VHS MECHANISM

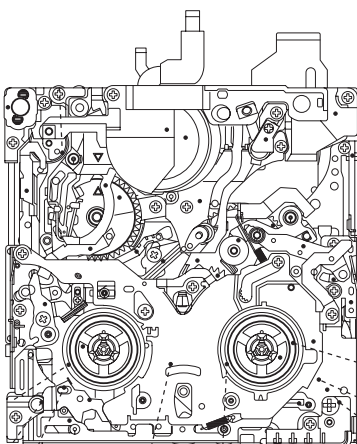

<DVC MECHANISM>

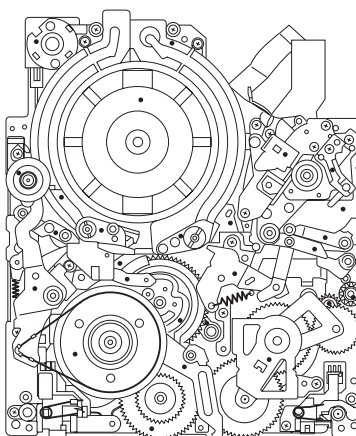

<VHS-C MECHANISM>

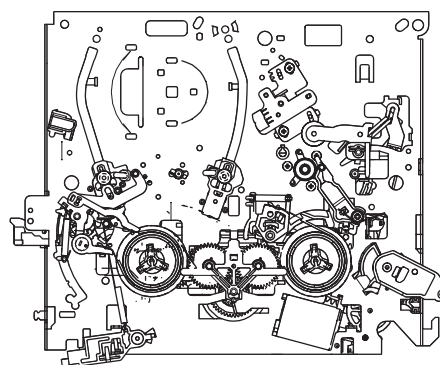

<VHS MECHANISM>

TABLE OF CONTENTS

1	JIGS AND TOOLS	1-1
2	SPECIFIC SERVICE INSTRUCTIONS	2-1
3	PARTS LIST	3-1

SECTION 1

JIGS AND TOOLS

1.1 TOOLS REQUIRED FOR ADJUSTMENTS

1. Torque driver YTU94088	2. Bit YTU94088-003
3. Tweezers P-895	4. Chip IC replacement jig PTS40844-2
5. Slit washer installation jig YTU94121A	6. Cleaning cloth KSMM-01

Fig.1-1-1

1. Torque driver

Be sure to use to fastening the mechanism and exterior parts because those parts must strictly be controlled for tightening torque.

Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.

2. Bit

This bit is slightly longer than those set in conventional torque drivers.

3. Tweezers

To be used for removing and installing parts and wires.

4. Chip IC replacement jig

To be used for replacement of part.

5. Slit washer installation jig

To be used to install slit washers.

6. Cleaning cloth

Recommended cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

2.1 DVC MECHANISM

2.1.1 Precautions

- (1) When fastening parts, pay careful attention to the tightening torque of each screw. Unless otherwise specified, tighten a screw with the torque of 0.055 N•m (0.56 kgf•cm).
- (2) Be sure to disconnect the set from the power supply before fastening and soldering parts.
- (3) When disconnecting/connecting wires, be careful not to get them and their connectors damaged.
- (4) When replacing parts, be very careful neither to damage other parts nor to fit wrong parts by mistake.

2.1.2 Notes on procedure for disassembly/assembly

The disassembling procedure table (Fig. 2-1-10 on page 2-4, a part of the table is shown below for reference) shows the procedure to disassemble/reassemble mechanism parts.

Carefully read the following explanation before starting actual disassembling/reassembling work. The item numbers (circled numbers) in the following explanation correspond to those appearing under respective columns of the table.

Example

NO.	PART NAME	FIG.	POINT	NOTE	REMARKS
[1]	CASSETTE HOUSING ASSY	T	Fig.2-4-3	3(S1),(L1a)-(L1e)	NOTE 1 a,b,c,d
[2]	UPPER BASE ASSY	T	Fig.2-4-4	(S2),(L2a),(L2b)	NOTE 2
[3]	DRUM ASSY	T		(S3a),2(S3b)	NOTE 3 a,b
[4]	REEL DISK ASSY(SUP)	T	Fig.2-4-5	(W4)	NOTE 4 a
[5]	REEL DISK ASSY(TU)	T		(W5a),(W5b),(W5c)	NOTE 5 a,b
[6]	REEL COVER ASSY	T		(W6),(S6a),2(S6b)	NOTE 6

*1

*2

*3

*4

*5

*6

*7

*1 Numbers appearing in this column indicate the order to remove parts. When reassembling, follow these numbers in the reverse order. Circled numbers in this column correspond to those appearing in drawings of this section.

*2 This column shows part names corresponding to numbers in the left column.

*3 The symbol (T or B) appearing in this column shows the side which the objective part is mounted on.

T =the upper side, B =the lower side

*4 Symbols appearing in this column indicate drawing numbers.

*5 This column indicates parts and points such as screws, washers, springs, and others to be removed/fitted for disassembling/reassembling the mechanism. Besides such the parts, this column occasionally indicates working points.

P = Spring

W = Washer

S = Screw

* = Lock (L), soldering (SD), shield, connector (CN), etc.

*6 Numbers in this column represent the numbers of notes in the text.

(For parts that need phase adjustment after reassembling, refer to "MECHANISM ADJUSTMENTS".)

*7 This column indicates required after-disassembling/-reassembling work such as phase adjustment or mechanism adjustment.

Example

- Remove (W1)=Washer W1.
- Remove the solder at (SD1)=Point SD1.
- Disconnect A = Connector A.

2.1.3 DISASSEMBLY AND ASSEMBLY OF MECHANISM ASSEMBLY

2.1.3.1 General statement

The mechanism should generally be disassembled/assembled in the C.IN mode (ASSEMBLY mode). (Refer to Fig. 2-1-1,2-1-2.) However, when the mechanism is removed from the main body, it is set in the STOP mode. Therefore, after the mechanism is removed from the main body, supply 3 V DC to the electrode on the top of the loading motor to enter the mechanism mode into the C IN mode compulsory.

<Mechanism assembly/Cassette housing assembly>

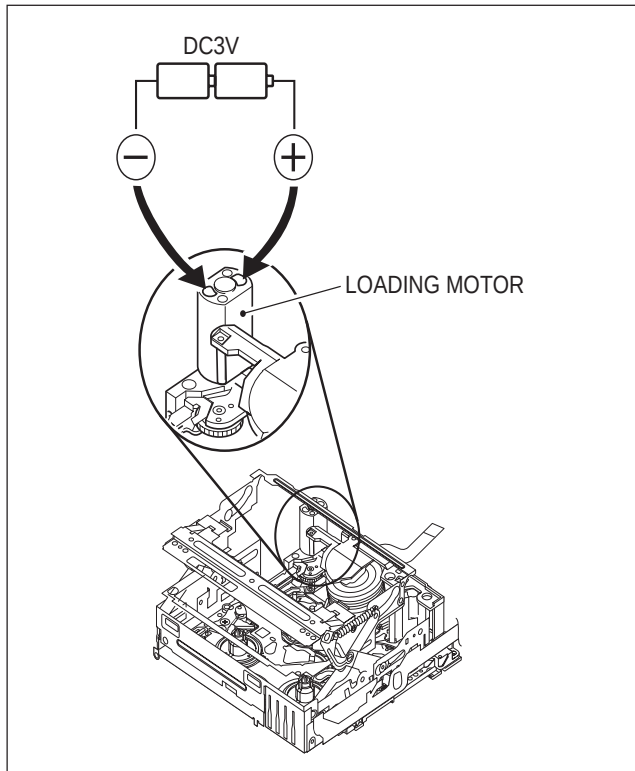


Fig.2-1-1

<Back side of the mechanism assembly>

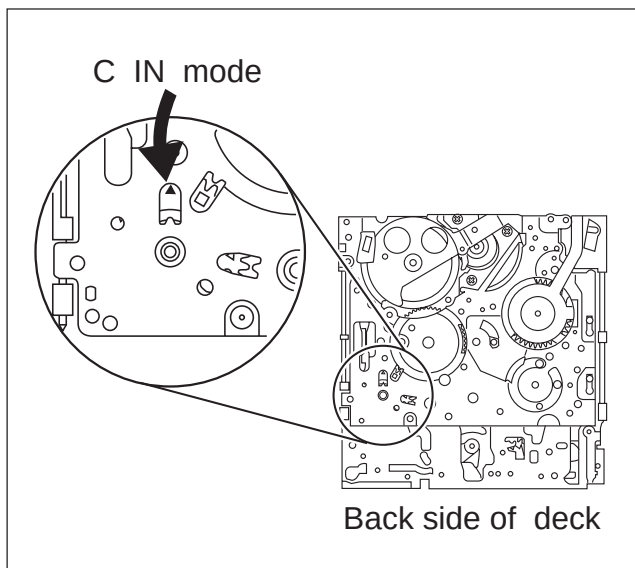


Fig.2-1-2

2.1.3.2 Explanation of mechanism mode

The mechanism mode of this model is classified into five modes as shown in Fig. 2-1-9. Each mechanism mode can be distinguished from others by the relative position of "△", "○", "○", "□" marks on the sub cam gear to the inner or outer protrusion on the main deck.

Refer to Fig. 2-1-3 to 2-1-8 below.

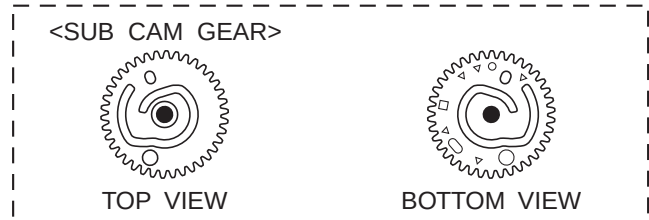


Fig.2-1-3

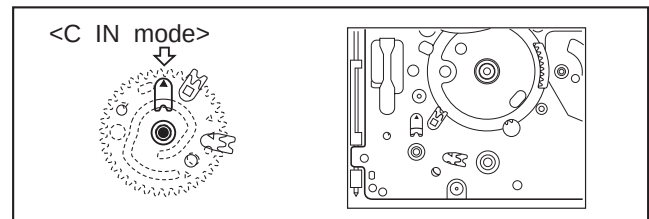


Fig.2-1-4

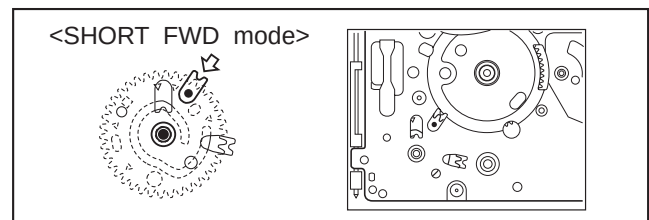


Fig.2-1-5

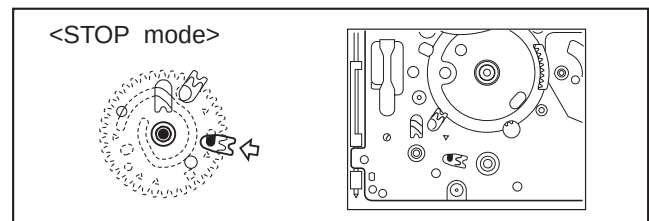


Fig.2-1-6

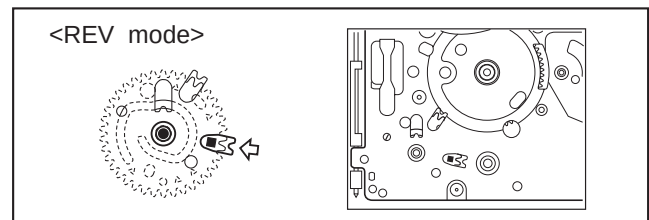


Fig.2-1-7

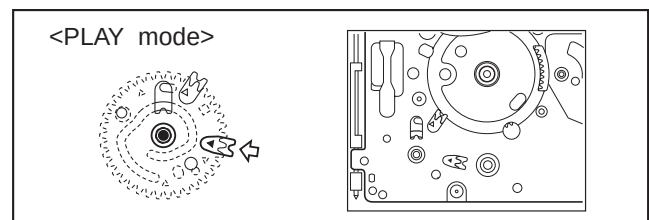


Fig.2-1-8

2.1.3.3 Mechanism timing chart

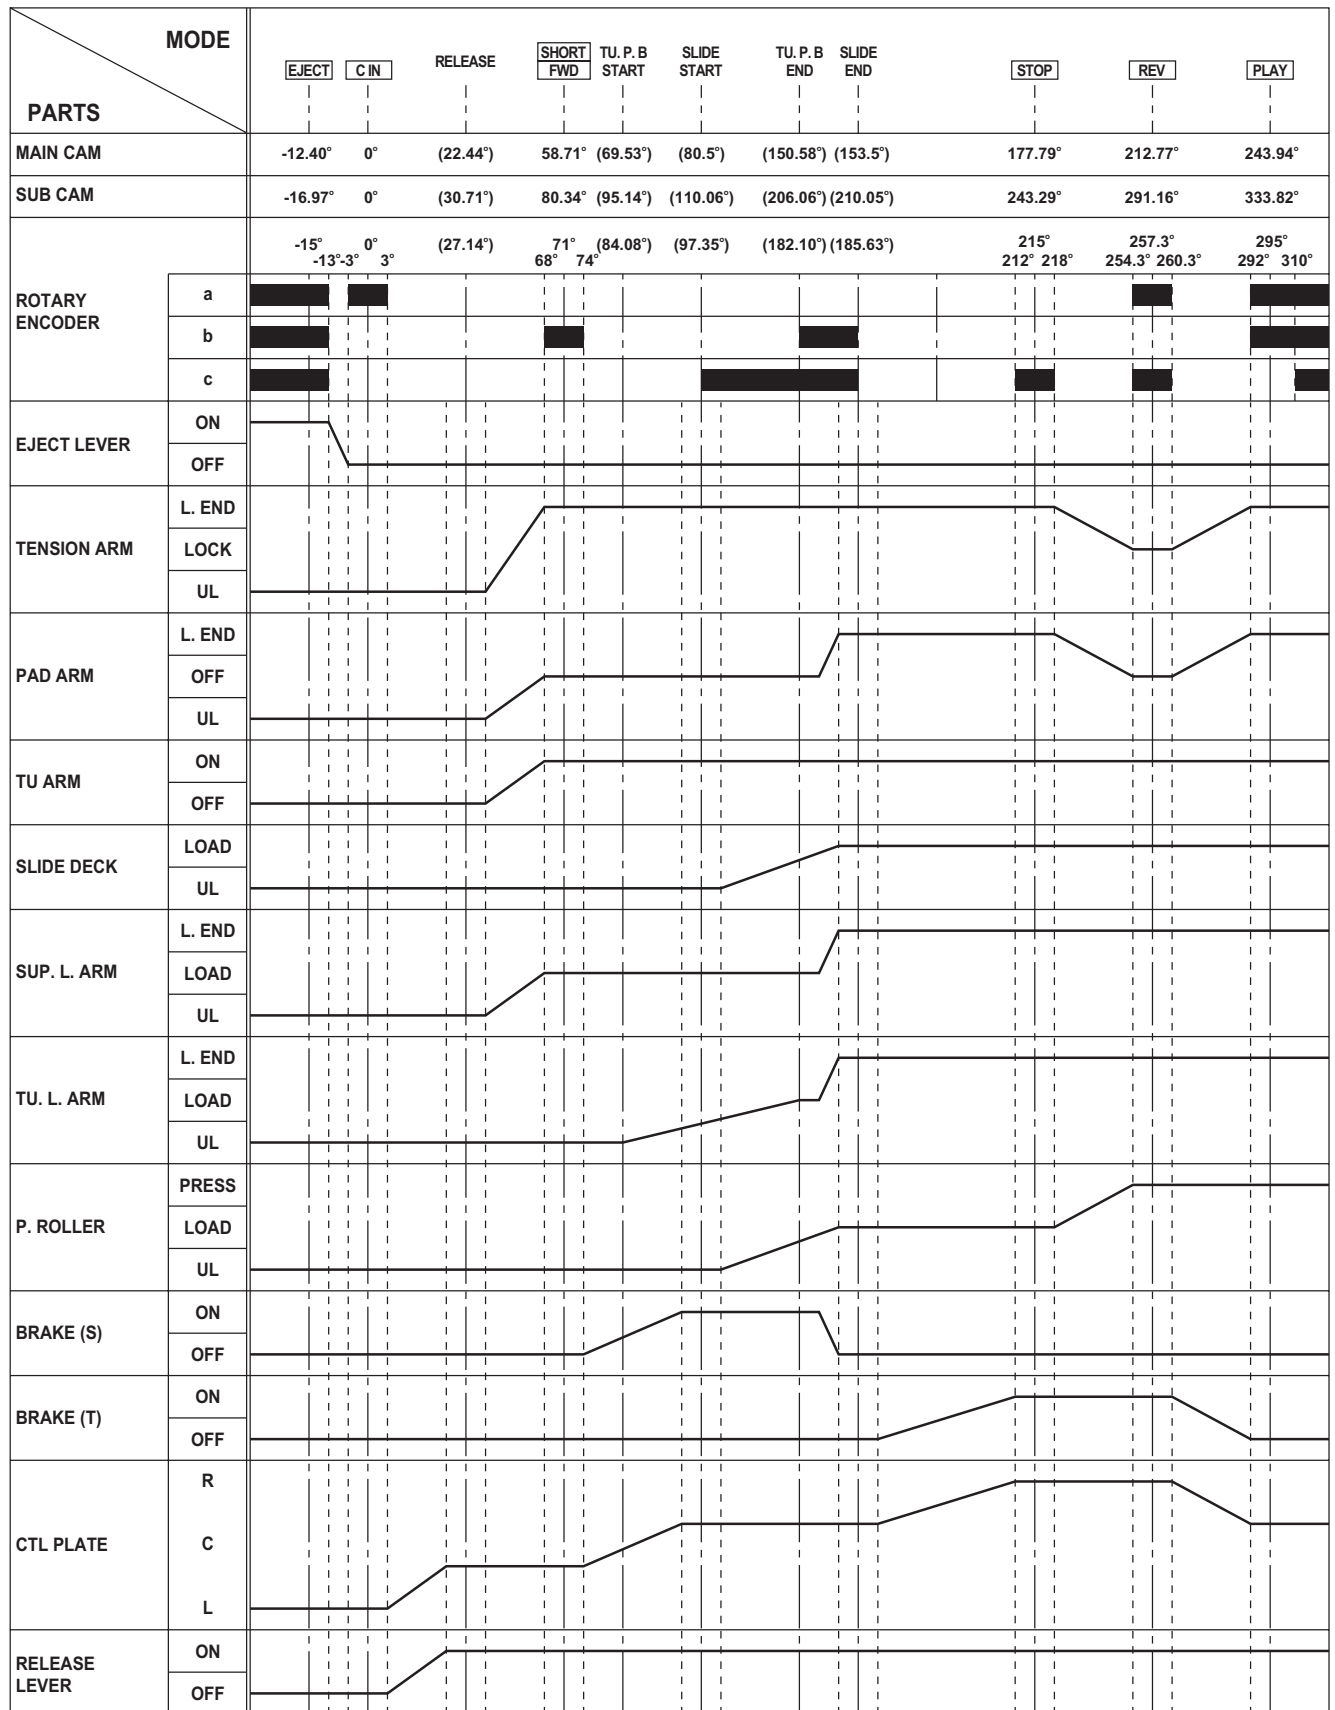


Fig.2-1-9

2.1.4 DISASSEMBLY PROCEDURE TABLE

MARK: # After assembly, perform adjustments.

NO.	PART NAME		FIG.	POINT	NOTE	REMARKS
[1]	CASSETTE HOUSING ASSY	T	Fig.2-1-14	3(S1),(L1a)-(L1e)	NOTE 1 a,b,c,d	ADJUSTMENT
[2]	UPPER BASE ASSY	T	Fig.2-1-15	(S2),(L2a),(L2b)	NOTE 2	
[3]	DRUM ASSY	T		(S3a),2(S3b)	NOTE 3 a,b	ADJUSTMENT
[4]	REEL DISK ASSY(SUP)	T	Fig.2-1-16	(W4)	NOTE 4	
[5]	REEL DISK ASSY(TU)	T		(W5a),(W5b)	NOTE 5 a,b	
[6]	REEL COVER ASSY	T		(W6),2(S6a),(S6b)	NOTE 6	
[7]	TENSION ARM ASSY	T	Fig.2-1-17	(L7)	NOTE 7	ADJUSTMENT / #
[8]	SLANT POLE ARM ASSY	T		(P8)	NOTE 8	ADJUSTMENT
[9]	TU ARM ASSY	T		(L9)	NOTE 9	ADJUSTMENT
[10]	SWING ARM ASSY	T		(S10)	NOTE 10	ADJUSTMENT
[11]	SLIDE DECK ASSY	T	Fig.2-1-18	2(S11a),(S11b),2(L11a), 2(L11b),(L11c)	NOTE 11a,b	ADJUSTMENT / #
[12]	PAD ARM ASSY	T	Fig.2-1-19	(P12),(L12),(W12)	NOTE 12	ADJUSTMENT / #
[13]	-	-		-	-	
[14]	TU BRAKE ASSY	T		(P14),(L14),(W14)	NOTE 14	ADJUSTMENT
[15]	TENSION CTL LEVER ASSY	T	Fig.2-1-20	(W15)	NOTE 15	ADJUSTMENT
[16]	CENTER GEAR	T		-	NOTE 16	
[17]	PINCH ROLLER ARM F. ASSY	T		(W17)	NOTE 17	ADJUSTMENT
[18]	TENSION CTL PLATE ASSY	T		-	NOTE 18	ADJUSTMENT
[19]	BRAKE CTL LEVER ASSY	T		-	NOTE 19	ADJUSTMENT
[20]	MOTOR BRACKET ASSY	T	Fig.2-1-21	3(S20),(L20a),2(L20b)	NOTE 20	ADJUSTMENT
[21]	GUIDE RAIL ASSY	T		2(W21),(S21),2(L21a),(L21b)	NOTE 21	ADJUSTMENT
[22]	SLIDE LEVER 2 ASSY	T		-	NOTE 22	ADJUSTMENT / #
[23]	LOADING PLATE ASSY	T		(W23)	NOTE 23	ADJUSTMENT
[24]	MODE GEAR	T		-	NOTE 24	
[25]	EJECT LEVER	T		(W25)	NOTE 25	ADJUSTMENT
[26]	BASE R ASSY	T	Fig.2-1-22	(S26a),(S26b),2(L26)	NOTE 26	ADJUSTMENT
[27]	ROTARY ENCODER	T		2(S27)	NOTE 27	PHASE ADJUSTMENT
[28]	GEAR COVER ASSY	T		(S28a),2(S28b)	-	
[29]	MAIN CAM ASSY	T		-	NOTE 29	PHASE ADJUSTMENT
[30]	SLIDE ARM ASSY	T	Fig.2-1-23	-	NOTE 30	ADJUSTMENT
[31]	CONNECT GEAR 2	T		-	NOTE 31	
[32]	SUB CAM ASSY	T		(S32)	NOTE 32	PHASE ADJUSTMENT
[33]	CONTROL ARM ASSY	T		-	NOTE 33	ADJUSTMENT
[34]	REEL GEAR 1	T		-	NOTE 34	
[35] / [36]	DRUM BASE ASSY/ CAPSTAN MOTOR	T	Fig.2-1-24	3(S35)	NOTE 35a,b	ADJUSTMENT
[36]	CAPSTAN MOTOR	T		(S36)	NOTE 36	ADJUSTMENT
[37]	MAIN DECK ASSY	T		-	-	

Fig.2-1-10

< TOP VIEW >

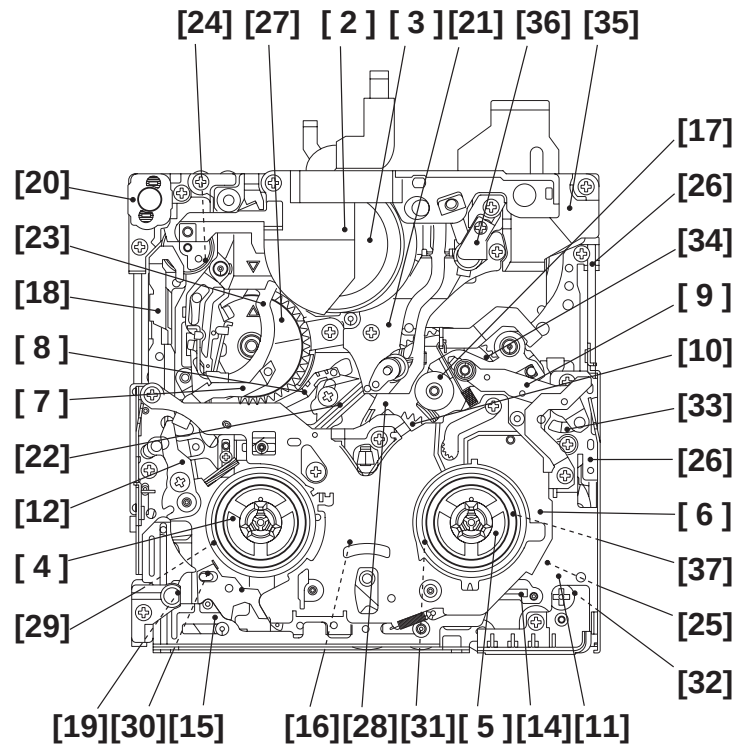


Fig.2-1-12

< BOTTOM VIEW >

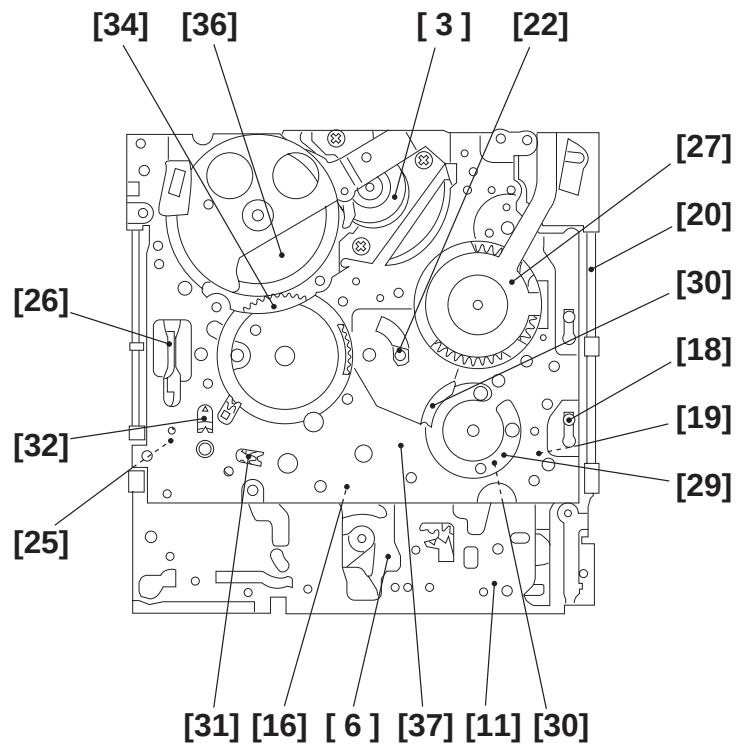


Fig.2-1-13

2.1.5 DISASSEMBLY/ASSEMBLY

2.1.5.1 [1] CASSETTE HOUSING ASSY

NOTE 1a:

Be careful not to damage any of the parts during work.

NOTE 1b:

Special care is required in mounting.

NOTE 1c:

When mounting, the CASSETTE HOUSING ASSY should be attached in the Eject status. Pay heed to the positions of the LOCK LEVER and EJECT LEVER during mounting.

NOTE 1d:

When mounting, be sure to locate the FPC in the gap.

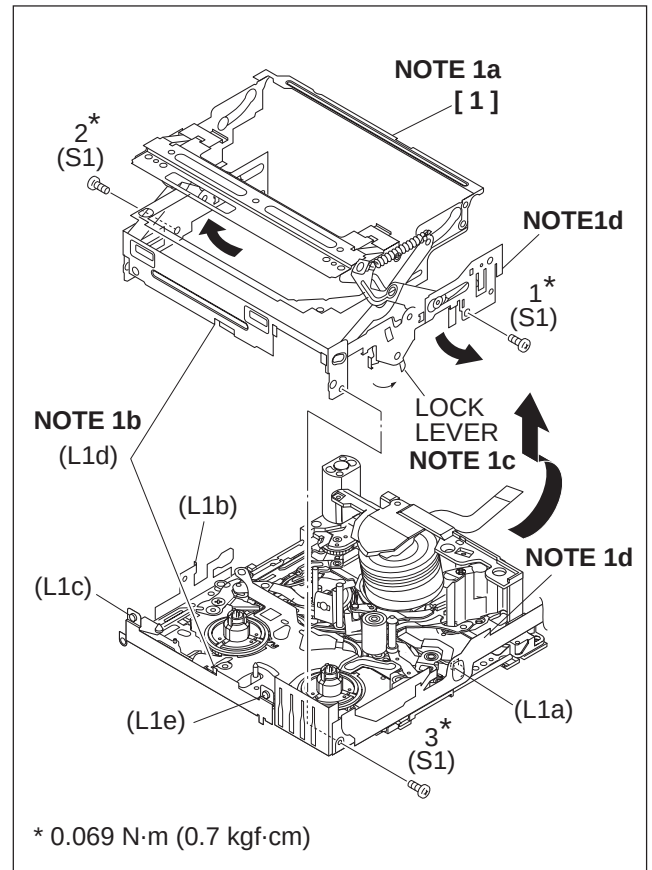
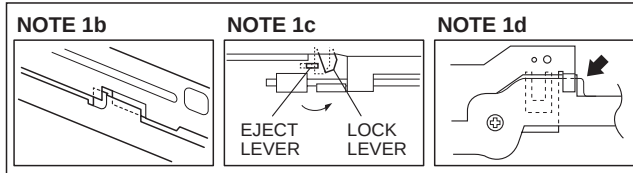


Fig.2-1-14

2.1.5.2 [2] UPPER BASE ASSY

[3] DRUM ASSY

NOTE 2:

When mounting, be sure to insert the FPC reinforcing sheet.

NOTE 3a:

Be mindful of scratches or damage during work.

NOTE 3b:

Be careful not to attach screws incorrectly.

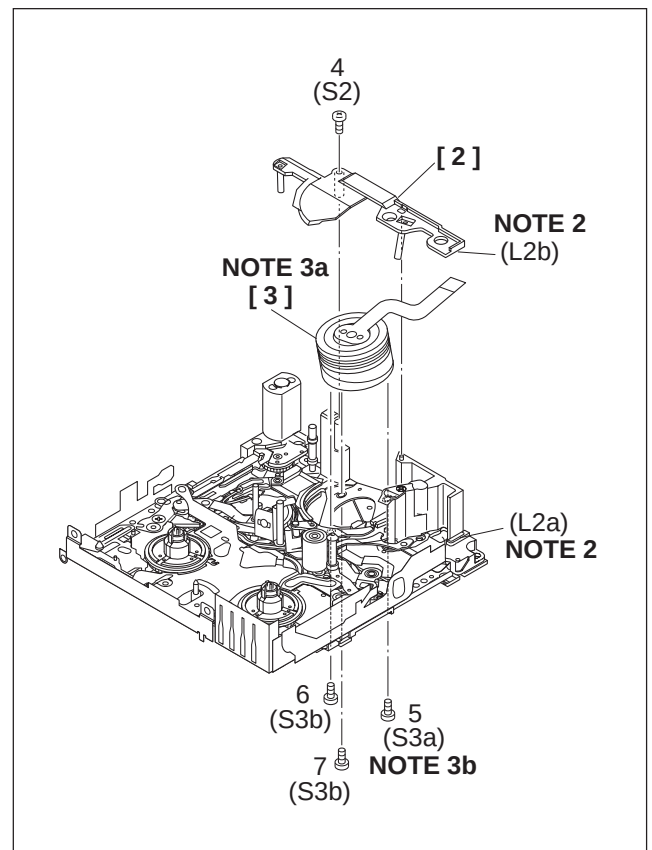
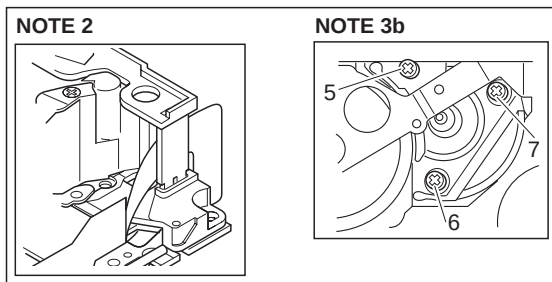


Fig.2-1-15

2.1.5.3 [4] REEL DISK ASSY(SUP)
[5] REEL DISK ASSY(TU)
[6] REEL COVER ASSY

NOTE 4:

Be careful not to attach the REEL DISK wrongly. The Supply side can be identified by the white color at the center.

NOTE 5a:

Be careful not to attach the REEL DISK wrongly. The Take-up side can be identified by the black color at the center.

NOTE 5b

The washer is inserted under the REEL DISK.

Be careful not to lose the washer.

Two washers are inserted under the REEL DISK in some products manufactured earlier, but one washer is inserted in the products manufactured recently and in the future.

See the parts list, and use the parts written in the parts list.


NOTE 6:

Perform the following steps for mounting.

- (1) Align the hole with the pin.
- (2) Attach the [17] PINCH ROLLER ARM FINAL ASSY by aligning the positions.
- (3) Attach the SLIDE DECK ASSY (POINT[A]) by aligning the positions.
- (4) Check that the parts below them are located in the correct positions.
- (5) Tighten the 2 screws.
- (6) Tighten the screw.
- (7) Attach the 1 SLIT WASHER parts.

NOTE 4, 5

REEL DISK ASSY

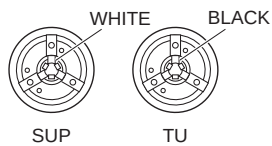

NOTE 6

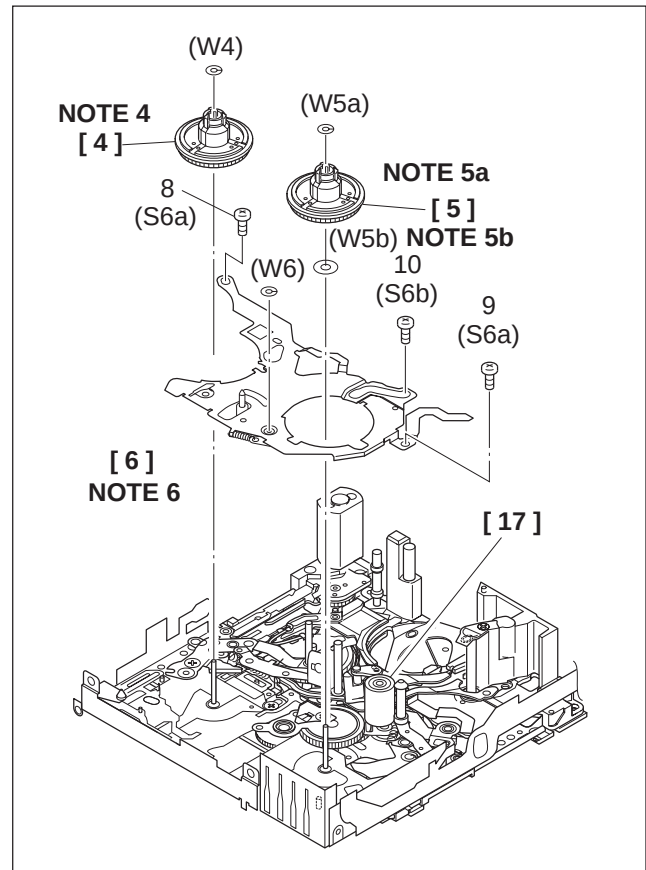
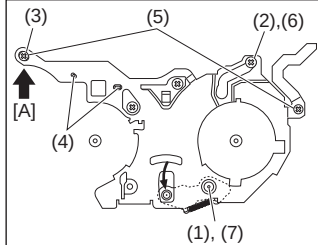


Fig.2-1-16

2.1.5.4 [7] TENSION ARM ASSY
 [8] SLANT POLE ARM ASSY
 [9] TU ARM ASSY
 [10] SWING ARM ASSY

NOTE 7:

When detaching, remove the spring of the [12] PAD ARM ASSY in advance.

Pay attention to the attachment position.

NOTE 8:

When mounting the SLANT POLE ARM ASSY, hook the spring onto the lug as in diagram A, and fit the combination onto the SLIDE DECK ASSY. After fitting, hook the spring onto the lug of the SLIDE DECK ASSY as in diagram B.

Be careful not to lose the spring.

NOTE 9:

Pay attention to the attachment position.

NOTE 10:

When detaching, remove the screw then remove the SWING ARM ASSY by pulling it up and turning it.

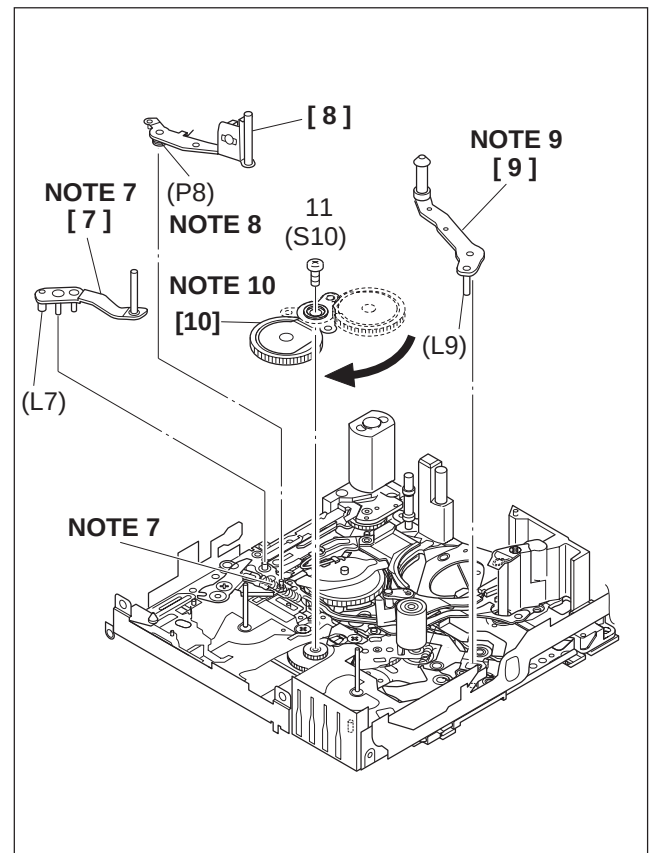
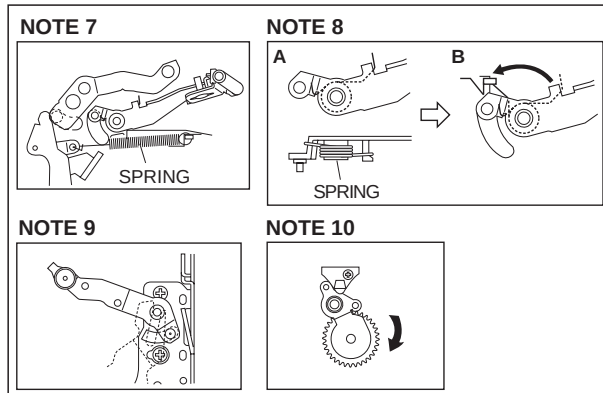


Fig.2-1-17

2.1.5.5 [11] SLIDE DECK ASSY

NOTE 11a:

Each of the parts on the SLIDE DECK ASSY can be replaced separately.

When detaching the assembly, if there is no need to replace any of its parts, remove the SLIDE DECK ASSY as it is.

NOTE 11b:

When mounting, pay attention to the positions of the [22] SLIDE LEVER 2 ASSY studs and the [19] BRAKE CTL LEVER ASSY.

When mounting, position the CONTROL PLATE on the left side.

Pay attention to the position of the SLIDE GUIDE PLATE during mounting.

NOTE 11b

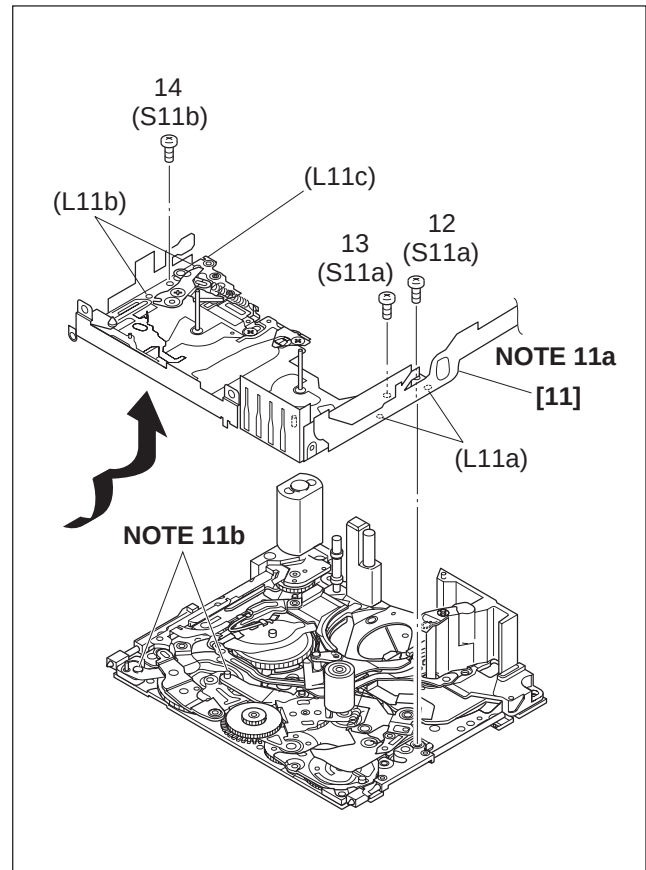
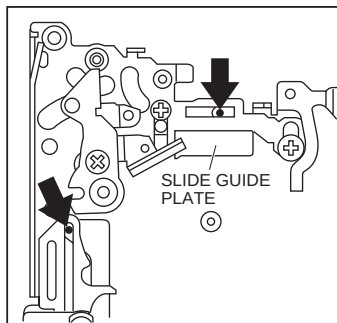


Fig.2-1-18

2.1.5.6 [12] PAD ARM ASSY

[13] -

[14] TU BRAKE ASSY

NOTE 12:

The spring may have already been disengaged when the [8] SLANT POLE ARM ASSY was removed.

NOTES 14:

When mounting, pay attention to the correct positioning. Mount the CONTROL PLATE by moving it fully toward the left side.

NOTE 12,14

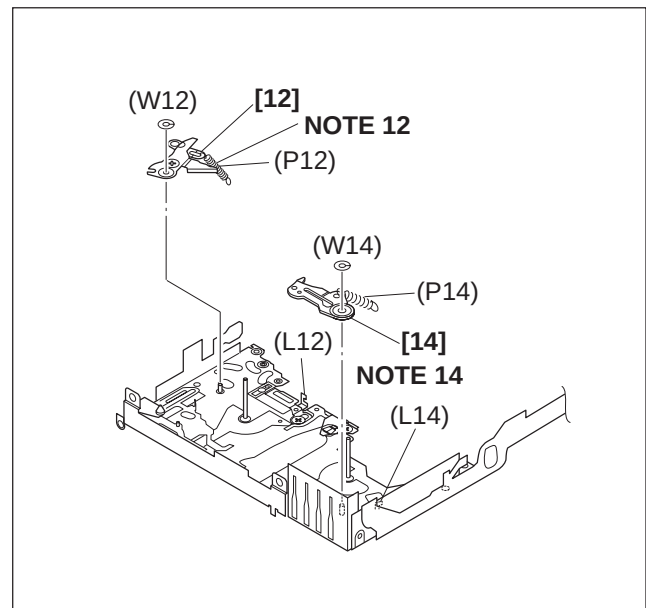
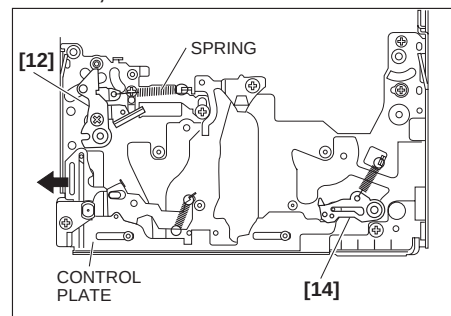


Fig.2-1-19

- 2.1.5.7 [15] TENSION CTL LEVER ASSY
 [16] CENTER GEAR
 [17] PINCH ROLLER ARM FINAL ASSY
 [18] TENSION CTL PLATE ASSY
 [19] BRAKE CTL LEVER ASSY

NOTES 15/16:

When mounting, pay attention to the correct positioning.

NOTE 17:

Take care against grease attachment during work.

NOTES 18/19:

When mounting, pay attention to the correct positioning.

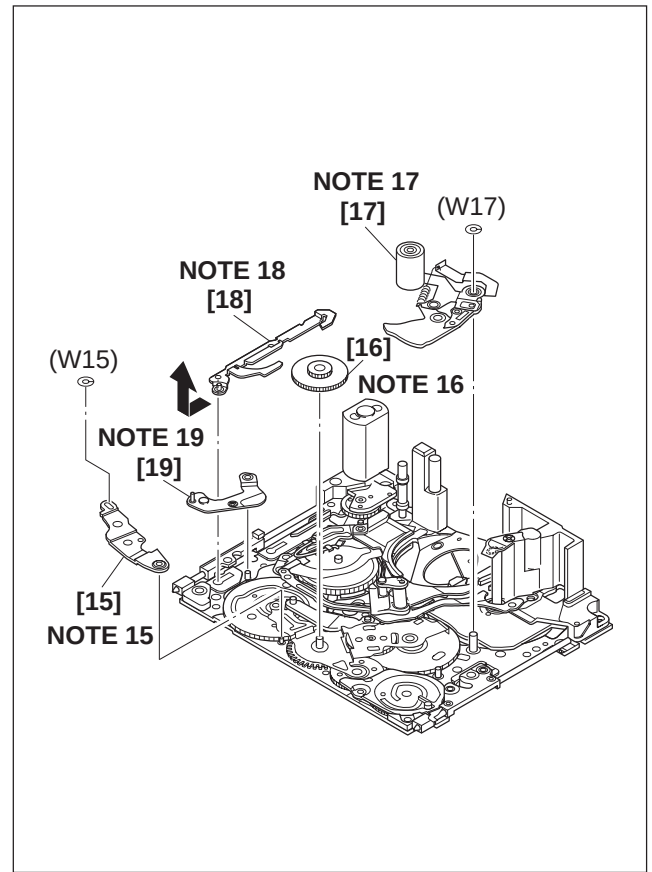
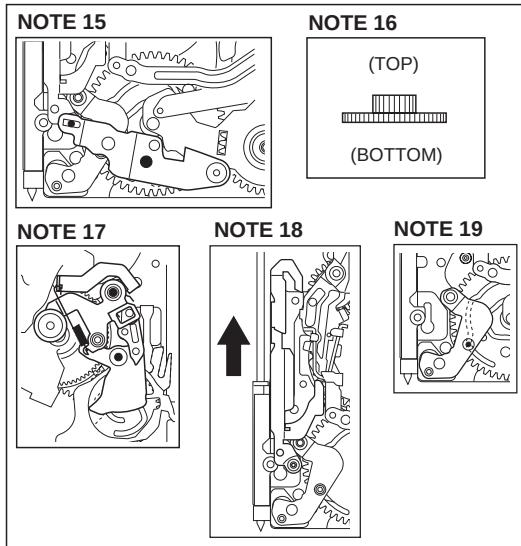


Fig.2-1-20

- 2.1.5.8 [20] MOTOR BRACKET ASSY
 [21] GUIDE RAIL ASSY
 [22] SLIDE LEVER 2 ASSY
 [23] LOADING PLATE ASSY
 [24] MODE GEAR
 [25] EJECT LEVER

NOTE 20:

When mounting, pay attention to the positioning of the sliding parts.

NOTE 21:

When mounting, take care that no part is allowed to float or rattle.

NOTES 22/23/24/25:

When mounting, pay attention to the correct positioning.

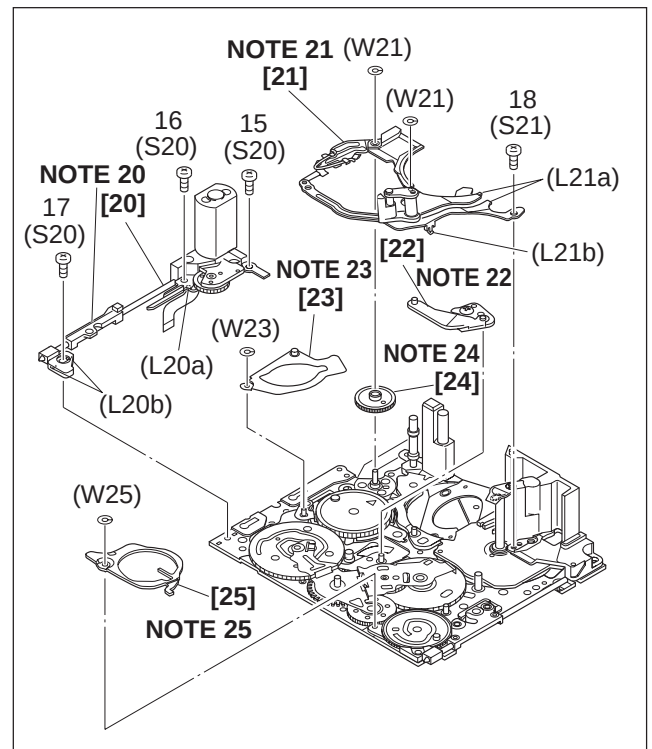
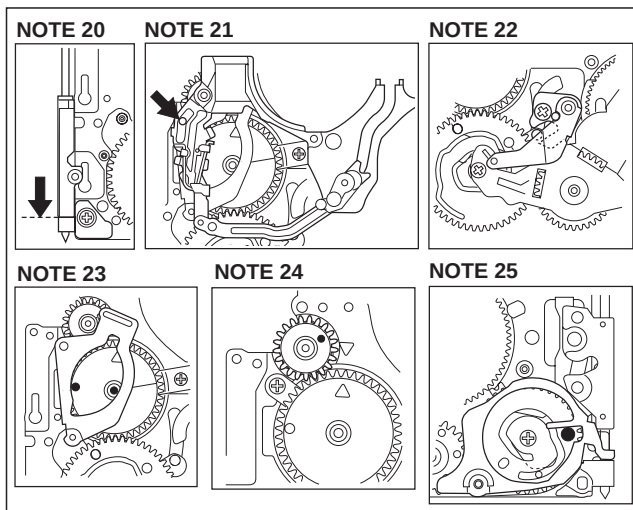


Fig.2-1-21

2.1.5.9 [26] BASE R ASSY
[27] ROTARY ENCODER
[28] GEAR COVER ASSY
[29] MAIN CAM ASSY

NOTE 26:

When mounting, fold the sliding part to the inner side.

NOTE 27:

When mounting, pay attention to the correct positioning and the FPC layout.

NOTE 29:

When mounting, pay attention to the correct positioning.

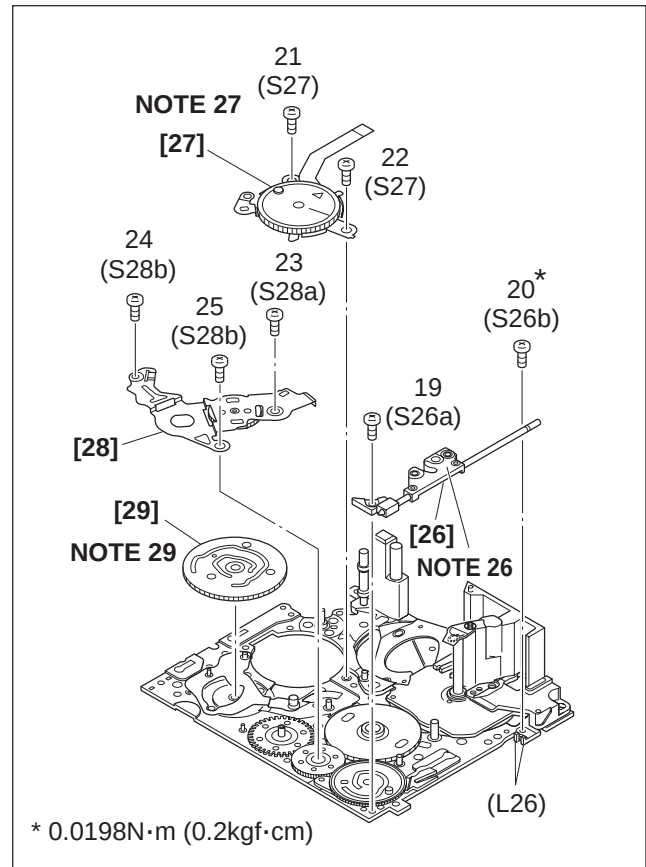
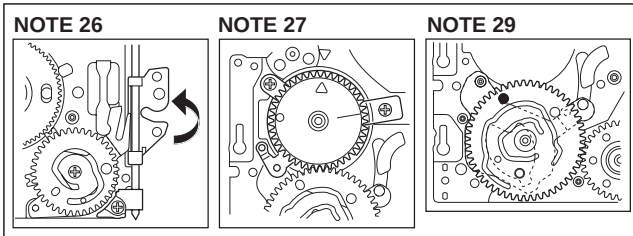


Fig.2-1-22

2.1.5.10 [30] SLIDE ARM ASSY
[31] CONNECT GEAR 2
[32] SUB CAM ASSY
[33] CONTROL ARM ASSY
[34] REEL GEAR 1

NOTE 30:

When mounting, pay attention to the correct positioning.

NOTE 31:

When mounting, pay attention to the position of the front and back.

NOTES 32/33/34:

When mounting, pay attention to the correct positioning.

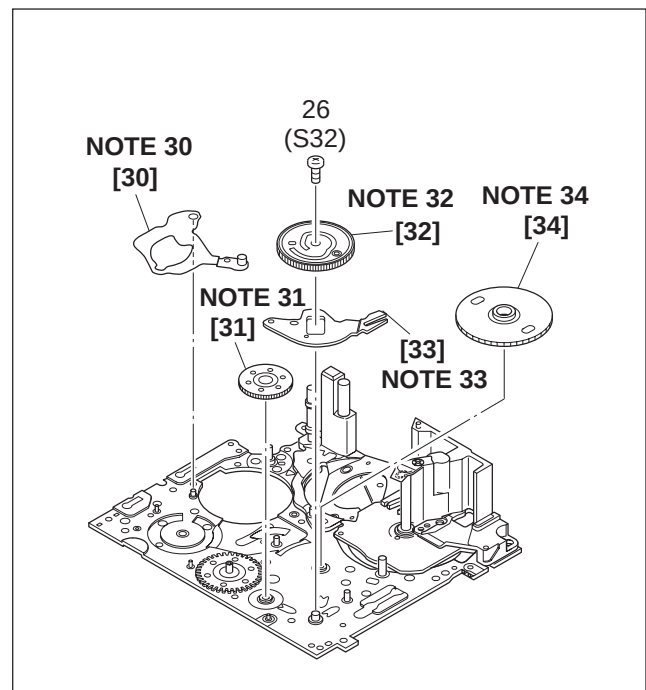
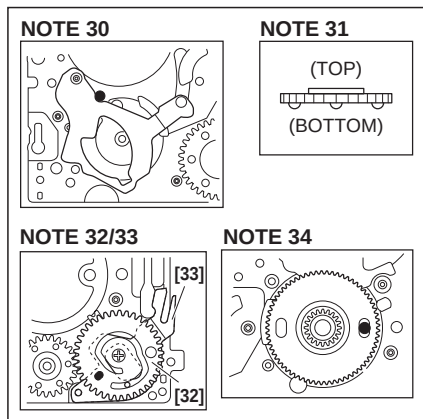


Fig.2-1-23

**2.1.5.11 [35] DRUM BASE ASSY
[36] CAPSTAN MOTOR
[37] MAIN DECK ASSY**

NOTES 35a/36:

Since [36]CAPSTAN MOTOR is attached to [35]DRUM BASE ASSY, remove [36]CAPSTAN MOTOR together with [35]DRUM BASE ASSY when removing [36]CAPSTAN MOTOR.

[36]CAPSTAN MOTOR should not be separated from [35]DRUM BASE ASSY except when replacing them.


NOTE 35b:

It is very important to attach [35]DRUM BASE ASSY to the proper position.

Especially, improper engagement of [36]CAPSTAN MOTOR with [34]REEL GEAR 1 causes operational deflection or abnormal sound. Therefore, confirm the attachment position before disassembly procedure.


See the following figure as for the proper attachment position.

NOTE 35b

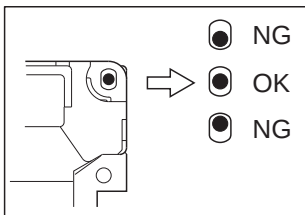

When [35]DRUM BASE ASSY is properly attached, the screw hole tends to be located at the center of the oval.

When the screw hole is located far from the center of the oval, operational deflection or abnormal sound may occur.

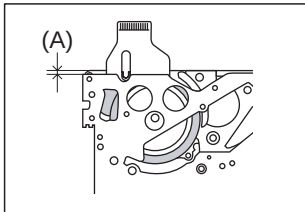

Before removing [35]DRUM BASE ASSY, confirm the position of [35]DRUM BASE ASSY by seeing the length (A), as shown in the left figure.

When reattaching [35]DRUM BASE ASSY, confirm the position to reattach [35]DRUM BASE ASSY by seeing the length (A). Be sure to reattach [35]DRUM BASE ASSY to the same position as it has been before the removing procedure.

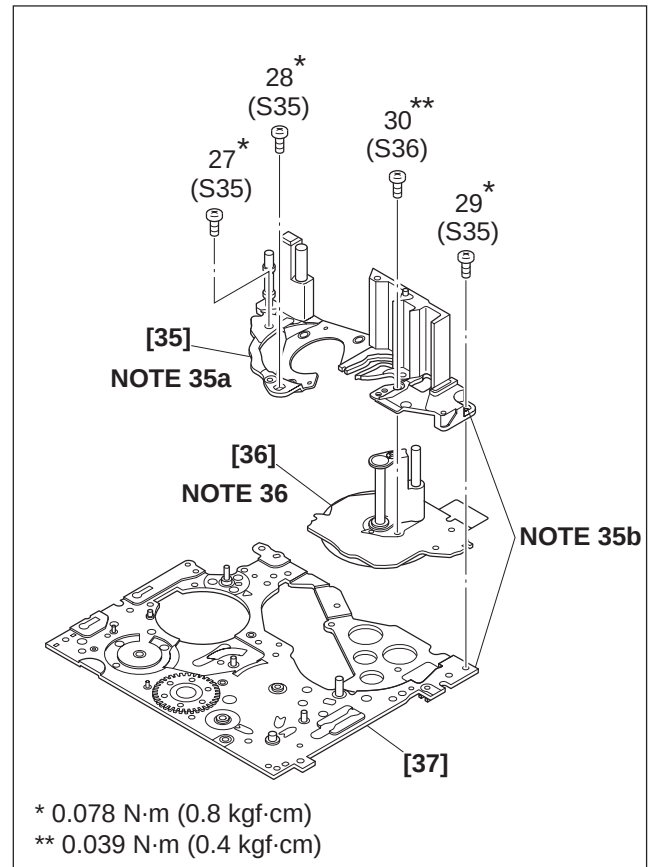


Fig.2-1-24

2.1.6 CHECKUP AND ADJUSTMENT OF MECHANISM PHASE

[24]MODE GEAR

Align the MODE GEAR with the Main Deck Assembly hole.

Note:

The MODE GEAR may be displaced during the mechanism operation, however it can be checked from the rear and realigned during manual assembly.

[27]ROTARY ENCODER

Mount the ROTARY ENCODER by aligning its mark (Δ) and the mark (∇) of the Main Deck Assembly.

Note:

Be careful when handling the FPC during mounting.

[34]REEL GEAR 1

Align the REEL GEAR 1 with the Main Deck Assembly hole.

Note:

The REEL GEAR 1 may be displaced during mechanism operation, however this can be checked from the rear and realigned during manual assembly.

[29]MAIN CAM ASSY/[30]SLIDE ARM ASSY

When mounting the SLIDE ARM ASSY align it with the Main Deck Assembly and MAIN CAM ASSY holes.

Note:

During the mounting procedure, make sure that the [32] SUB CAM ASSY is in the correct mounting position.

[32]SUB CAM ASSY/[33] CONTROL ARM ASSY

Mount the SUB CAM ASSY hole to align with the CONTROL ARM ASSY and Main Deck Assembly holes and then tighten them all together with a screw.

Note:

When mounting it, make sure that the [29]MAIN CAM ASSY is in the correct mounting position.

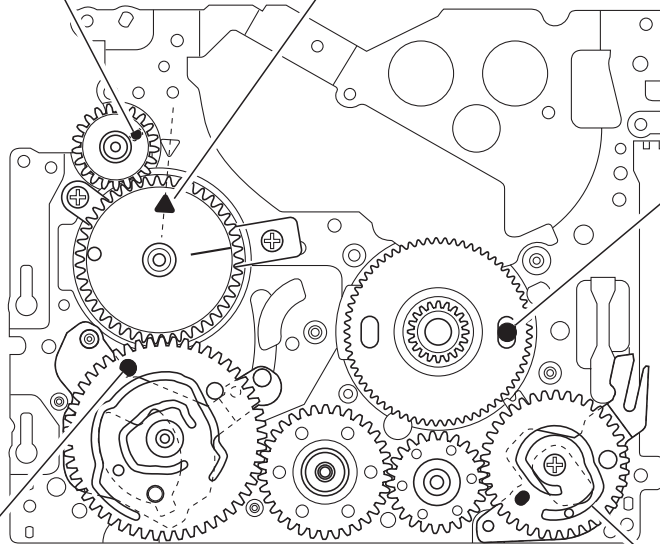


Fig.2-1-25

2.1.7 MECHANISM ADJUSTMENTS

2.1.7.1 Adjustment of the slide guide plate

Use Fig. 2-1-26 as the reference unless otherwise specified.

- (1) Set the PLAY mode. See Fig. 2-1-8.
- (2) Loosen the screws (A, B).
- (3) With the Main Deck and Slide Deck Assemblies pushed into the unit, tighten the screws (A, B) while applying pressure to the stud (shaft) on the Slide Guide plate.
The pressure applied should be enough to enable utilization of the rebounding force of the springs.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that these operations can be performed smoothly without producing rattles.

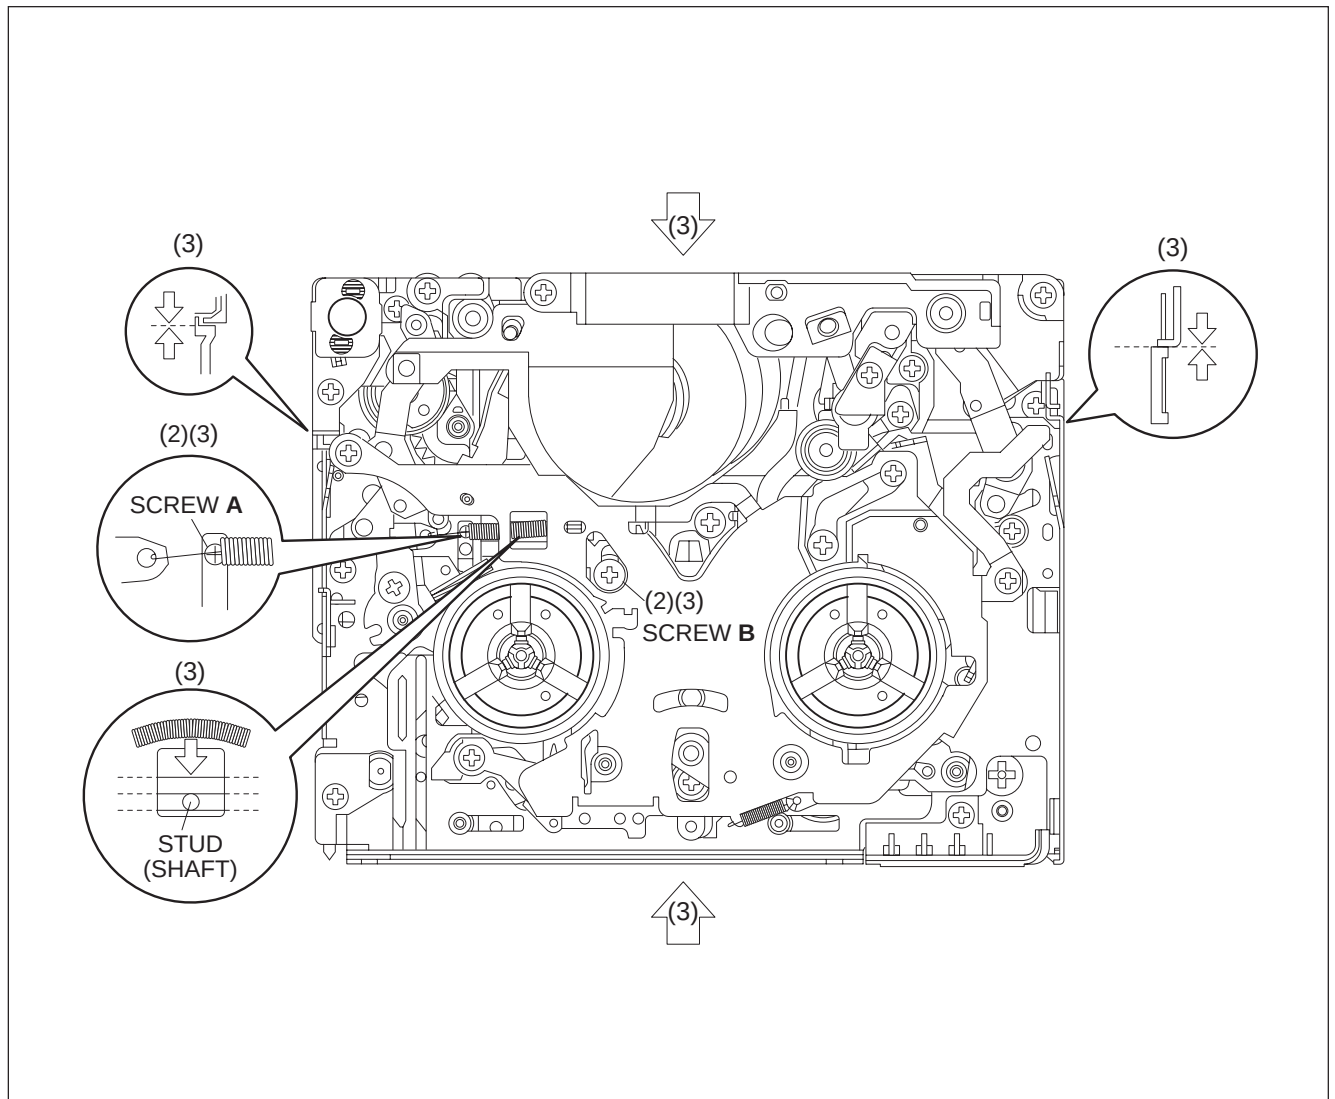


Fig.2-1-26

2.1.7.2 Adjustment of the Tension Arm and Pad Arm Assemblies

Use Fig. 2-1-27 as the reference unless otherwise specified.

- (1) Set the PLAY mode.
See Fig. 2-1-8.
- (2) Loosen the screw **A**.
- (3) With the take-up side at the bottom, align the extreme end of the Tension Arm Assembly with the crossed grooves on the screw **B** that retains the Loading Motor Assembly and then tighten the screw **A**.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that the Tension Arm Assembly is located within the normal range.

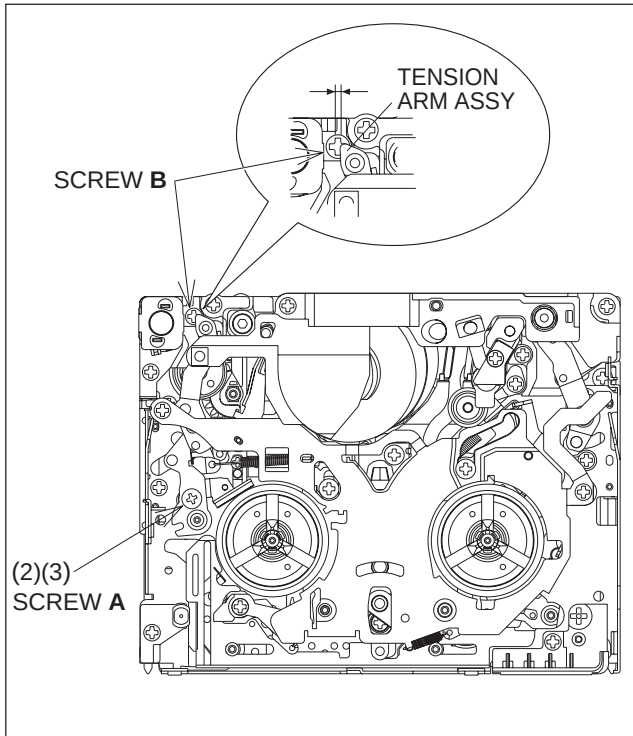


Fig.2-1-27

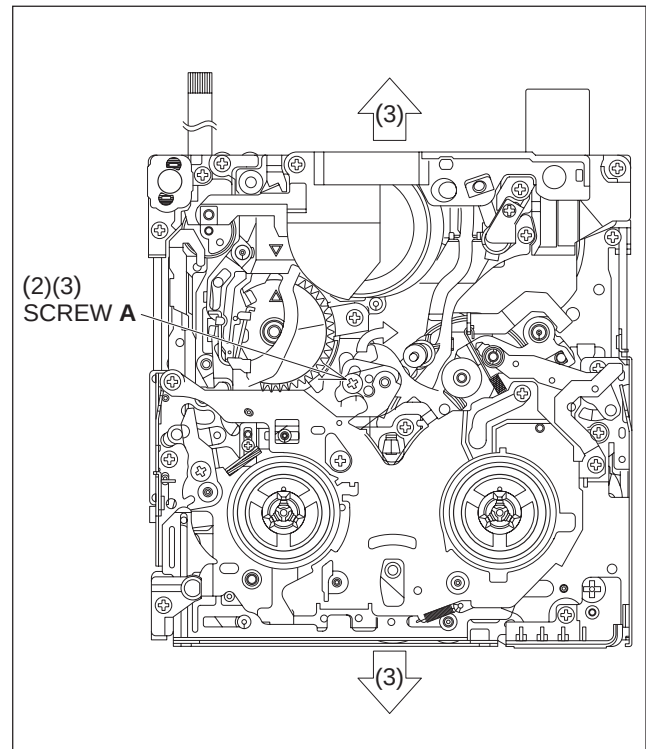


Fig.2-1-28

2.1.7.3 Adjustment of the Slide Lever 2

Use Fig. 2-1-28 as the reference unless otherwise specified.

- (1) Set the C IN mode.
See Fig. 2-1-4.
- (2) Loosen the screw **A**.
- (3) Set the Main Deck and Slide Deck Assemblies apart so that they do not rattle, then tighten the screw **A** by screwing it fully toward the Drum Assembly.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that these operations can be performed smoothly without producing rattles.

2.1.8 SERVICE NOTE

Use the following chart to manage mechanism parts that are removed for disassembling the mechanism.

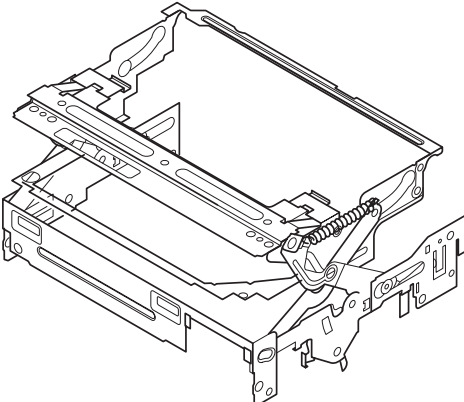
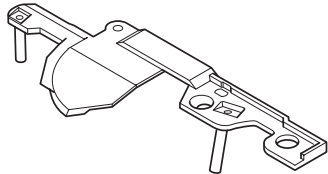
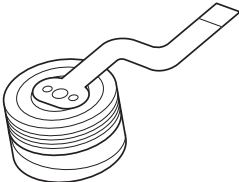


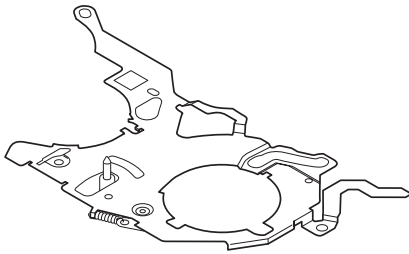

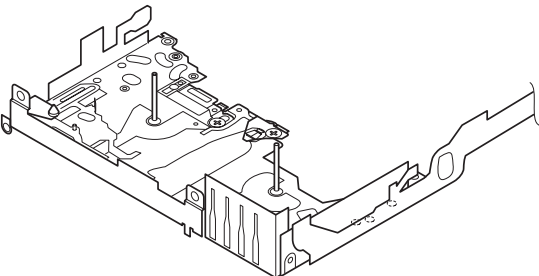
Fig.2-1-14	[1] CASSETTE HOUSING ASSY 		Fig.2-1-15		[2] UPPER BASE ASSY 	
Fig.2-1-15	[3] DRUM ASSY 	Fig.2-1-16	[4] REEL DISK ASSY(SUP)  [5] REEL DISK ASSY(TU) 	[6] REEL COVER ASSY 		
Fig.2-1-17	[7] TENSION ARM ASSY 	[8] SLANT POLE ARM ASSY 		[9] TU ARM ASSY 	[10] SWING ARM ASSY 	
Fig.2-1-18	[11] SLIDE DECK ASSY 		Fig.2-1-19	[12] PAD ARM ASSY 	[13] —	[14] TU BRAKE ASSY 

Fig.2-1-29


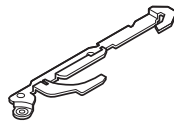

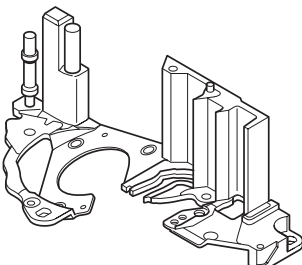
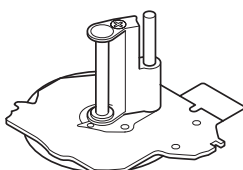
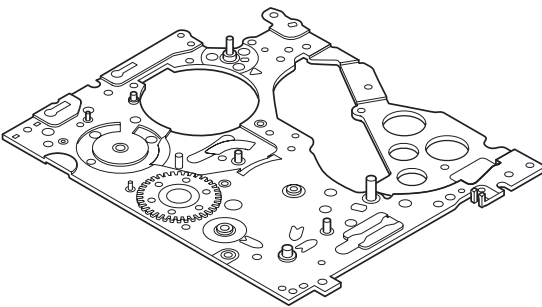
Fig.2-1-20	[15] TENSION CTL LEVER ASSY	[16] CENTER GEAR	[17] PINCH ROLLER ARM F ASSY	[18] TENSION CTL PLATE ASSY	[19] BRAKE CTL LEVER ASSY
					
Fig.2-1-21	[20] MOTOR BRACKET ASSY	[21] GUIDE RAIL ASSY	[22] SLIDE LEVER 2 ASSY	[23] LOADING PLATE ASSY	
			[24] MODE GEAR	[25] EJECT LEVER	
Fig.2-1-22	[26] BASE R ASSY	[27] ROTARY ENCODER	[28] GEAR COVER ASSY	[29] MAIN CAM ASSY	
					
Fig.2-1-23	[30] SLIDE ARM ASSY	[31] CONNECT GEAR 2	[32] SUB CAM ASSY	[33] CONTROL ARM ASSY	[34] REEL GEAR 1
					
Fig.2-1-24	[35] DRUM BASE ASSY	[36] CAPSTAN MOTOR	[37] MAIN DECK ASSY		
					

Fig.2-1-30

2.1.9 SERVICE NOTE
 Use the following chart to manage screws.

Symbol No.	[1]	[2]	[3]	[6]	[10]	[11]	[20]	[21]	[22]
Removing order of screw	1 2 3	4	5 6 7	8 9 10	11	12 13 14	15 16 17	18	19 20
Place to stick screw									
Reference drawing (Fig. No.2-1-**)	14		15	16	17	18	21		22
Screw tightening torque	I	II							
									III

Symbol No.	[27]	[28]	[32]	[35]	[36]
Removing order of screw	21 22 23 24	25	26 27 28	29	30
Place to stick screw					
Reference drawing (Fig. No.2-1-**)	22		23	24	
Screw tightening torque	II			IV	V

<NOTE>

•Pay careful attention to tightening torque for each screw.

I : 0.069N・m(0.7kgf・cm)

II : 0.055N・m(0.56kgf・cm)

III : 0.0198N・m(0.2kgf・cm)

IV : 0.078N・m(0.8kgf・cm)

V : 0.039N・m(0.4kgf・cm)

Fig.2-1-31

2.1.10 REMARKS

2.1.10.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.1.10.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.1 DVC MECHANISM ASSEMBLY. Fig.2-1-32 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	YTU94027	BB
Grease (HANARL)	RX-410R	CC

specifies oil and grease to be used

Fig.2-1-32

2.2 VHS-C MECHANISM

2.2.1 Precautions

- (1) When fastening parts, pay careful attention to the tightening torque of each screw. Unless otherwise specified, tighten a screw with the torque of 0.216 N•m (2.2 kgf•cm). Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.
- (2) Be sure to disconnect the set from the power supply before fastening and soldering parts.
- (3) When disconnecting/connecting wires, be careful not to get them and their connectors damaged.
- (4) When replacing parts, be very careful neither to damage other parts nor to fit wrong parts by mistake.

Example

STEP/LOC. No.	PART NAME		FIG.	REMOVAL	INSTALLATION
				POINT	ADJUSTMENT CONDITION NOTE
[1]	ROLLER BASE ASSEMBLY	T	M1	(S1)	—
[2]	TENSION ARM ASSEMBLY	T	M1	(P1), (W1a)	—
[3]	REEL DISC (SUP)	T	M1	(W1a), (W1b)	—

↑
*1

↑
*2

↑
*3

↑
*4

↑
*5

↑
*6

2.2.2 How to read the disassembly and assembly

*1 Order of steps in Procedure

When reassembling, perform the step(s) in the reverse order. These numbers are also used as the identification (location) No. of parts Figures.

*2 Part to Name be removed or installed.

*3 Location of part.

T = The Upper side
B = The Lower side

*4 Fig. No. showing Procedure or Part Location.

M = Mechanism

*5 Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.

P = Spring

W = Washer

S = Screw

* = Unhook, unlock, release, unplug or unsolder.

Example

- Remove (W1)=Washer W1.
- Remove the solder at (SD1)=Point SD1.
- Disconnect A = Connector A.

*6 Adjustment information for installation.

(+) = Refer to Exploded Views for Lubrication information.

2.2.3 DISASSEMBLY/ASSEMBLY PROCEDURE TABLE

This procedure starts with the condition that the cabinet parts and deck parts. Also, all the following procedures for adjustment and parts replacement should be performed in STOP mode. When reassembling, perform the step(s) in the reverse order.

STEP/LOC. No.	PART NAME		FIG.	REMOVAL	INSTALLATION
				POINT	ADJUSTMENT CONDITION NOTE
[1]	ROLLER BASE ASSY	T	M1	(1)	—
[2]	TENSION ARM ASSY	T	M1	(P1), (W1a)	—
[3]	REEL DISC	T	M1	(W1a), (W1b)	—
[4]	SLANT ARM ASSY	T	M1	(W1a)	—
[5]	CANCEL LEVER ASSY	T	M2	(W2)	—
[6]	EJECT LEVER ASSY	T	M2	(W2)	—
[7]	CASSETTE GUIDE (LEFT)	T	M2	(2)	—
[8]	SUPPLY CLUTCH ASSY	T	M2	(W2)	—
[9]	WHEEL GEAR	T	M2	(W2)	See, Adjustment procedure for Section 2.2.5
[10]	ROTARY ENCODER	B	M3	4(S3a)	The function of this part varies according to the ASSY (VHS/SVHS) which this part is incorporated in. (Refer to fig. 2-2-6)
[11]	TIMING BELT	B	M3	—	—
[12]	CENTER PULLEY UNIT	T/B	M3	2(S3a)	—
[13]	CASSETTE GUIDE (R) ASSY	T	M3	(S3b), (P3)	(Only use SVHS model)
[14]	TAKE UP GEAR	T	M3	(W3a)	—
[15]	BRAKE SUB GEAR	T	M3	(W3a)	—
[16]	PINCH ROLLER ARM ASSY	T	M3	(W3b)	—
[17]	TAKE UP GUIDE ARM ASSY	T	M3	(W3a)	—
[18]	LINK ARM ASSY	T	M4	(W4)	—
[19]	LED GUIDE	T	M4	(S4a)	—
[20]	A/C HEAD UNIT	T	M4	2(S4b)	—
[21]	SLANT POLE BASE ASSY	T	M5	(S5a)	—
[22]	CAPSTAN MOTOR	T	M5	3(S5a)	—
[23]	MOTOR BASE	T	M5	2(S5b), (S5c)	—
[24]	BRUSH	B	M6	(S6a)	—
[25]	DRUM FINAL ASSY	T/B	M6	2(S6b), 2(S6c) *CATCHER	—
[26]	GUIDE RAIL	T	M6	7(S6d), 8(S6d)	(Refer to part list.)
[27]	POLE BASE (S)ASSY	T	M6	—	—
[28]	POLE BASE (T)ASSY	T	M6	—	—
[29]	COVER PLATE	T	M7	—	—
[30]	DRIVE LEVER ASSY	T	M7	—	—
[31]	MOTOR BRACKET ASSY	T	M7	3(S7)	—
[32]	CONTROL CAM	T	M8	(W8a)	See, Adjustment procedure for Section 2.2.5
[33]	LINK LEVER	T	M8	—	See, Adjustment procedure for Section 2.2.5
[34]	MIDDLE GEAR	T	M8	—	—
[35]	LOADING GEAR(T) ASSY	T	M8	(W8b)	See, Adjustment procedure for Section 2.2.5
[36]	LOADING GEAR(S) ASSY	T	M8	(W8b)	—
[37]	LOADING RING ASSY	T	M8	4(S8)	See, Adjustment procedure for Section 2.2.5

Fig.2-2-1

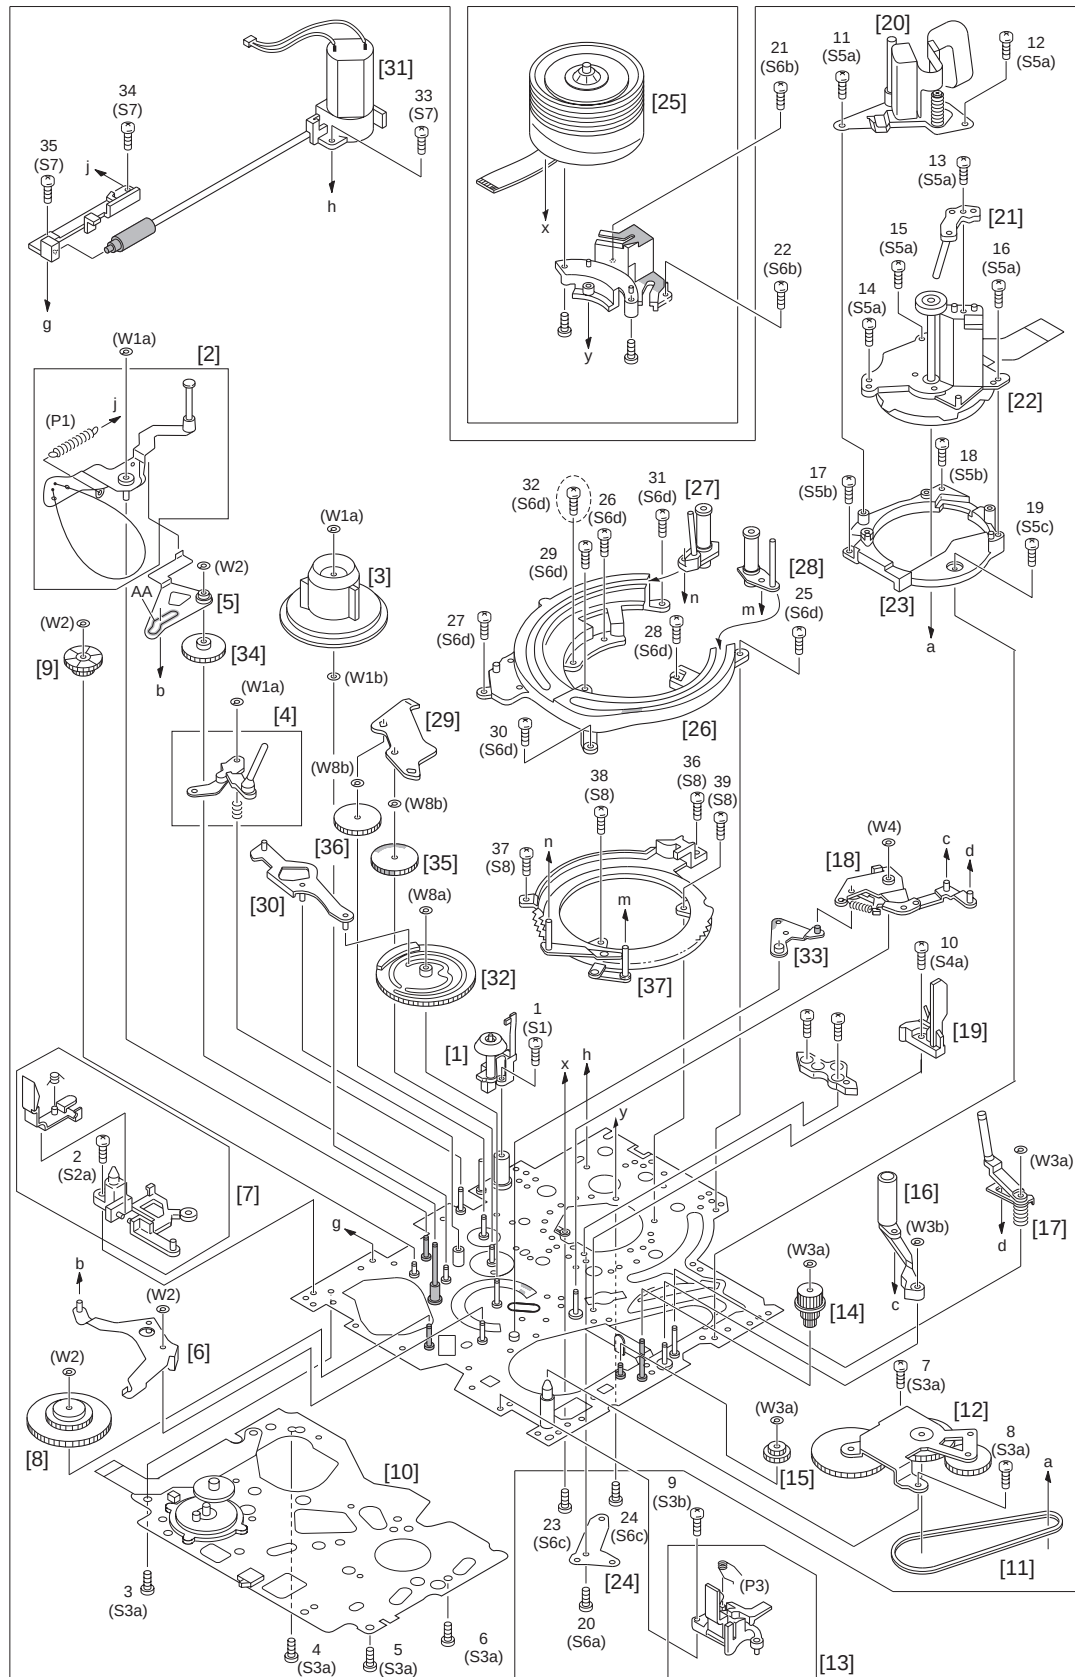


Fig.2-2-2

<TOP VIEW>

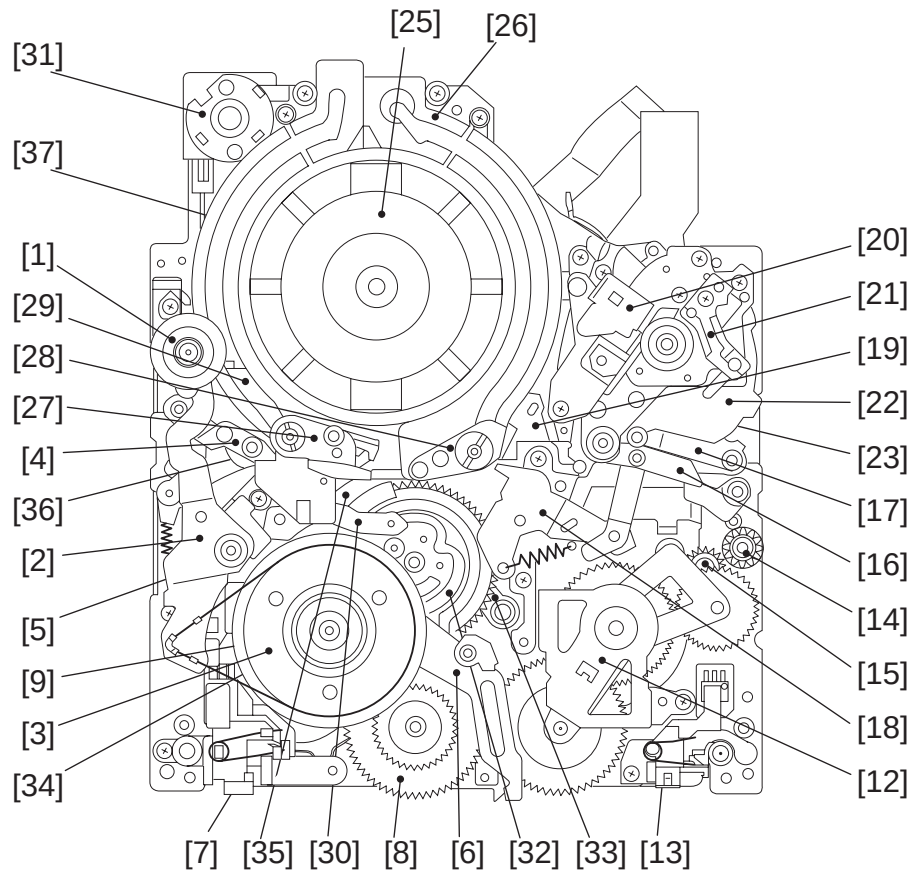


Fig.2-2-3

<BOTTOM VIEW>

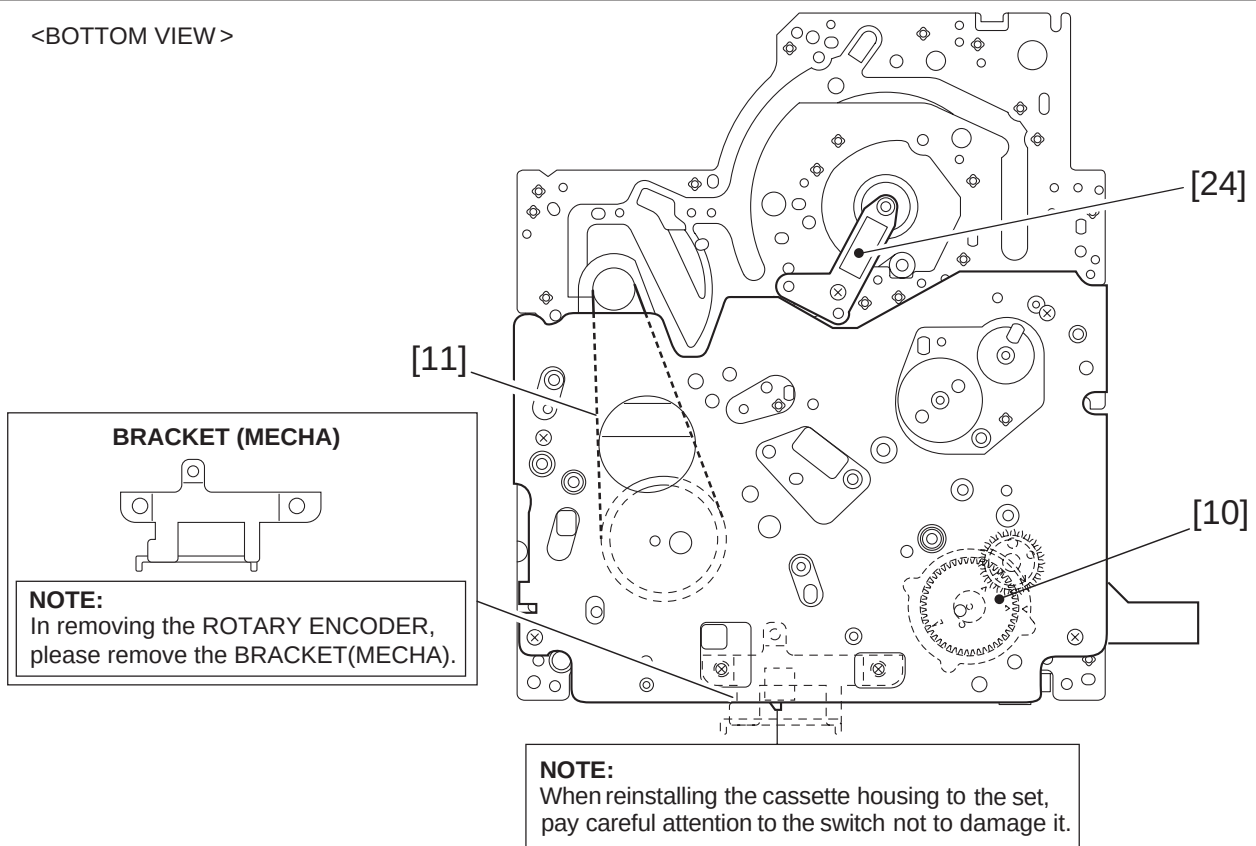


Fig.2-2-4

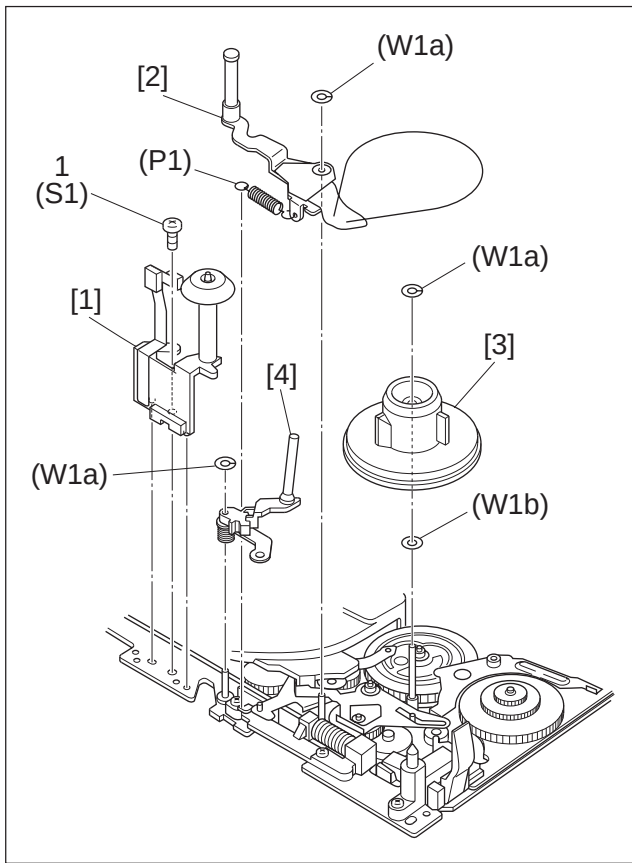


Fig.M1

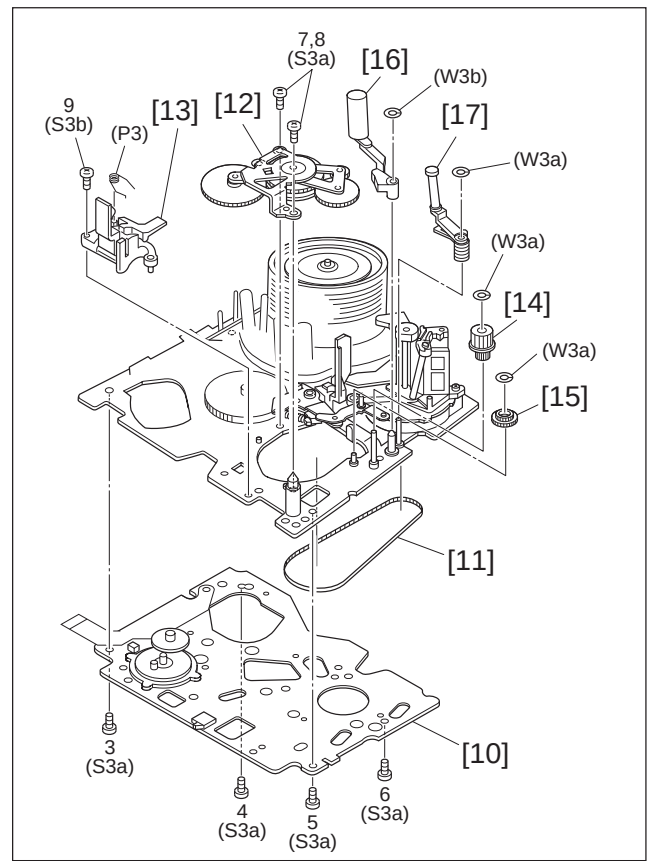


Fig.M3


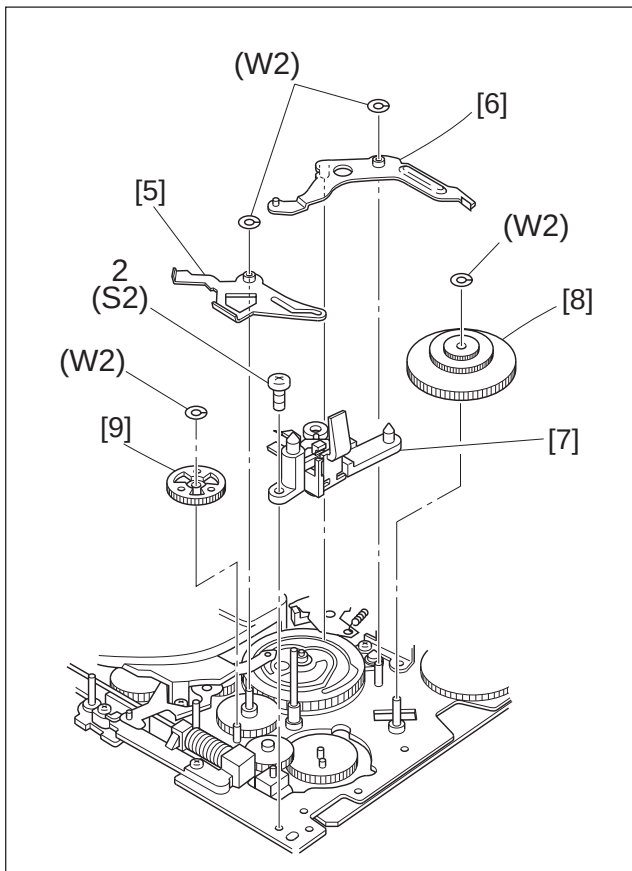


Fig.M2

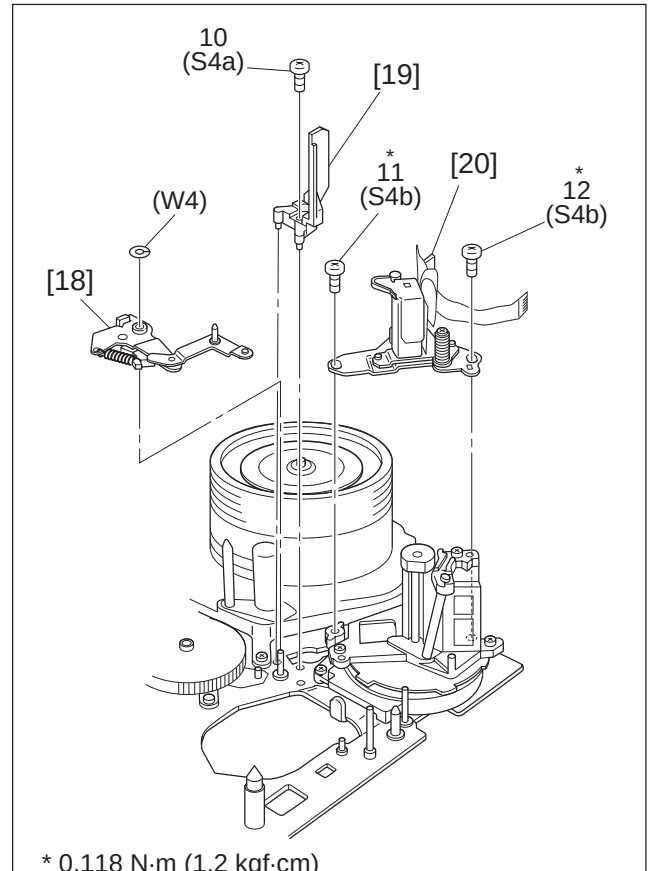

* 0.118 N·m (1.2 kgf·cm)

Fig.M4

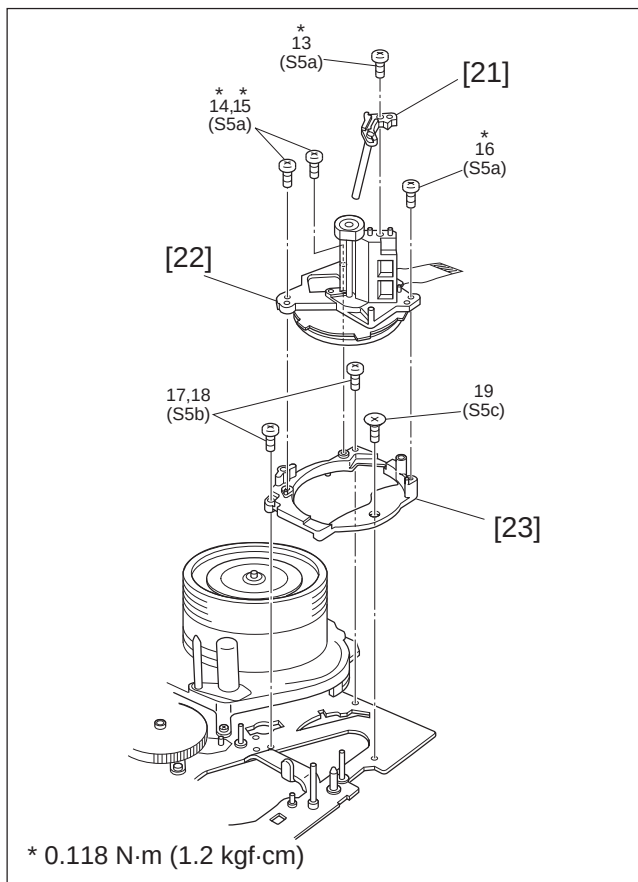


Fig.M5

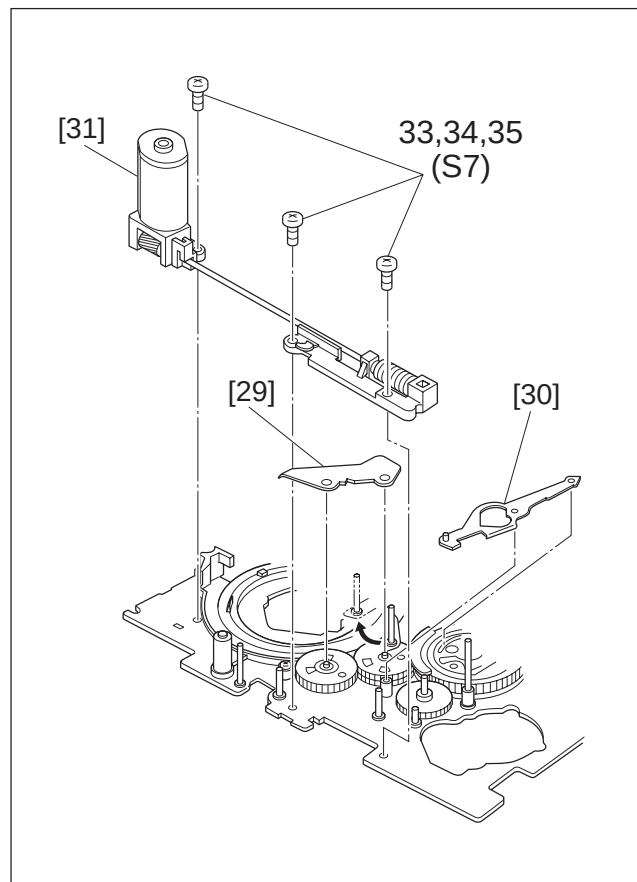


Fig.M7

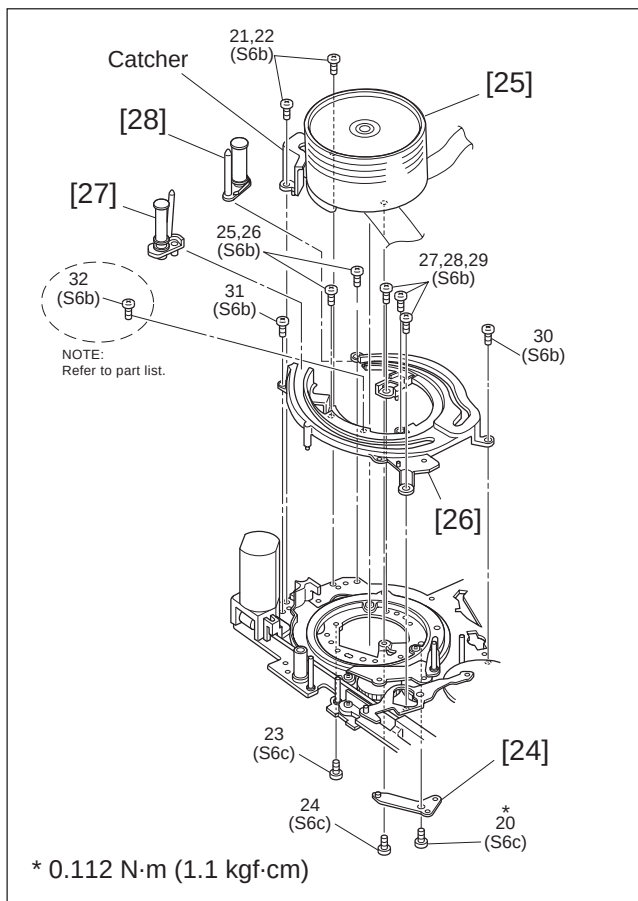


Fig.M6

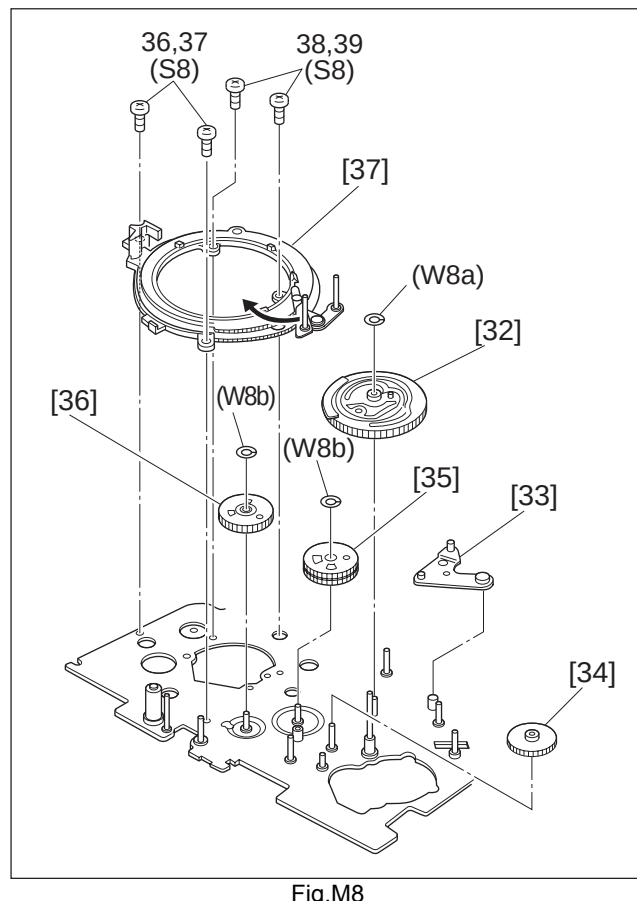


Fig.M8

2.2.4 CHECKUP AND ADJUSTMENT OF MECHANISM PHASE

NOTE:

Pay careful attention to the installing order and phase of mechanism parts of the loading system.

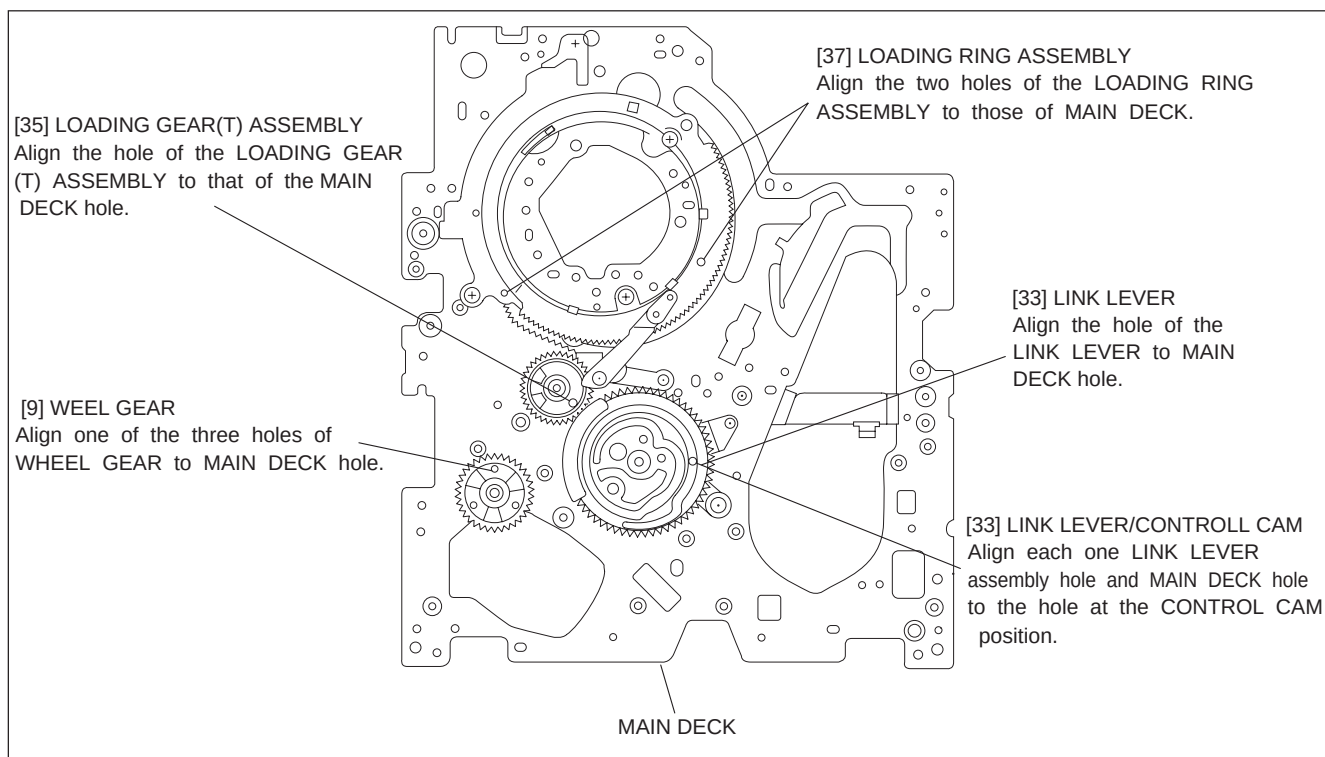


Fig.2-2-5 Top of main deck

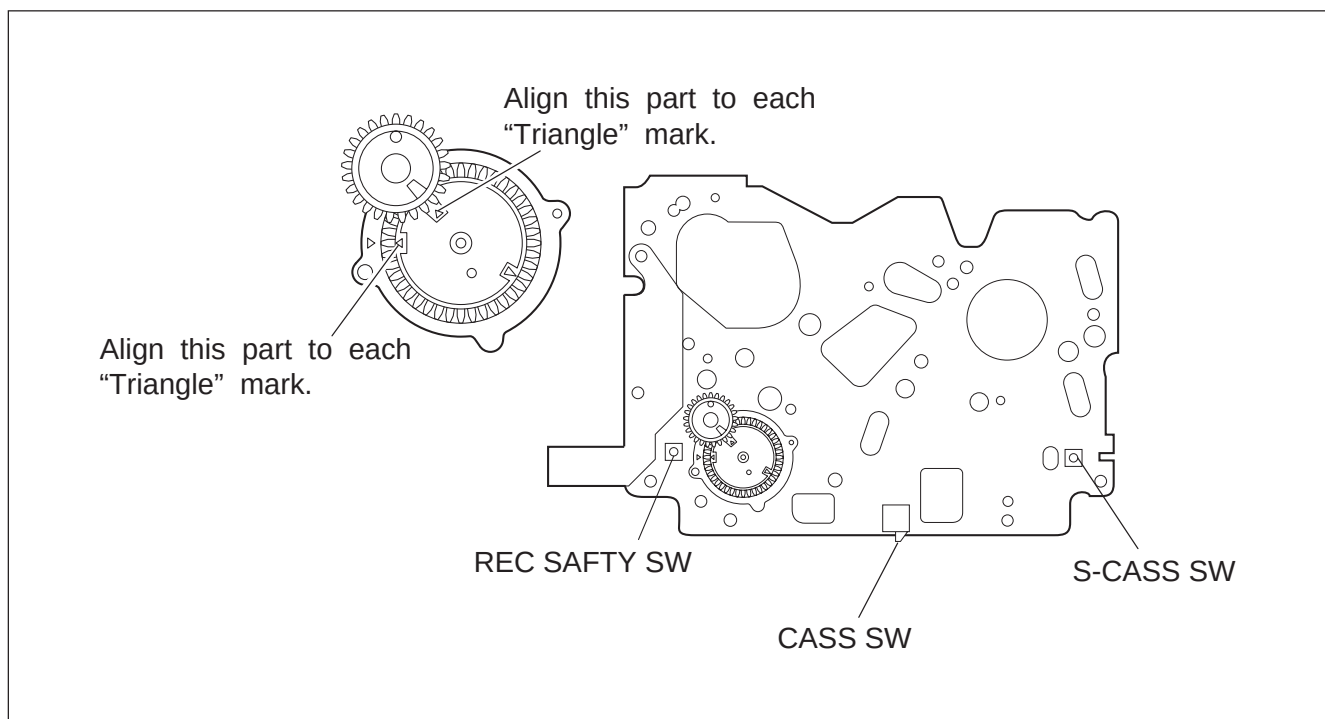


Fig.2-2-6 Rotary encoder

2.2.5 SERVICE NOTE

Use the following chart to manage screws.

Symbol No.	[1]	[7]	[10]				[12]	[13]	[19]	[20]	[21]	[22]	[23]								
Removing order of screw	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19		
Place to stick screw																					
Reference drawing (Fig. No.)	M1	M2	M3						M4		M5										
Screw tightening torque	I										II										I

Symbol No.	[24]	[25]				[26]				[31]	[37]									
Removing order of screw	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
Place to stick screw																				
Reference drawing (Fig. No.)						M6				M7				M8						
Screw tightening torque	III	I																		

Fig.2-2-7

<NOTE>

· Pay careful attention to tightening torque for each screw.
Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.

I : 0.216N・m(2.2kgf・cm) II : 0.118N・m(1.2kgf・cm) III : 0.112N・m(1.1kgf・cm)

2.2.6 REMARKS

2.2.6.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.2.6.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.2 VHS-C MECHANISM ASSEMBLY. Fig.2-2-8 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	YTU94027	BB

specifies oil and grease to be used

Fig.2-2-8

2.3 VHS MECHANISM

2.3.1 Notes

This model's mechanism relates closely to the rotary encoder and system control circuit (the rotary encoder is meshed with the control cam).

The system control circuit detects the mechanism condition using the rotary encoder's phase (internal switch phase). Therefore, the parts such as the rotary encoder, control plate, loading gear and control cam need to be installed correctly in order for the mechanism to operate properly. (For the mechanism phase adjustment, refer to the installation of each part.)

- Before using a soldering iron, be sure to disconnect the power plug from the AC outlet.
- Do not touch any of the adjustment points until a defect position is specified.
- When plugging or unplugging the connector, be sure not to damage the wire.
- Be sure the springs are hooked all the way around and in the correct direction.
- When performing repairs, take care not to damage a catch, etc.

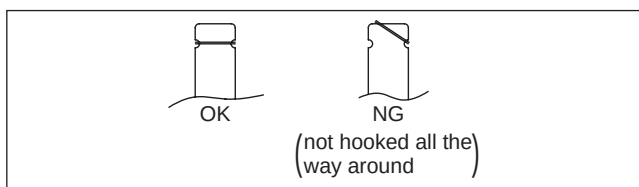


Fig.2-3-1

2.3.2 Mechanism operation check

When the mechanism is operated without a cassette loaded, operate the mechanism in the mechanism service mode.

2.3.3 Setting the mechanism assembling mode

The mechanism-assembling mode is provided with this mechanism. When disassembling and assembling, it is required to engage this mode.

Set the mode by adopting the following procedures.

- (1) Remove the mechanism assembly using the disassembling procedure.
- (2) Turn gear (a) of the loading motor manually to set the mechanism assembly to the eject end mode. Make sure that the main deck is connected to the guide hole (a) of the drive lever and the seal (a) of the main deck is connected to the mark "E" of the control plate. This condition is called the mechanism-assembling mode.

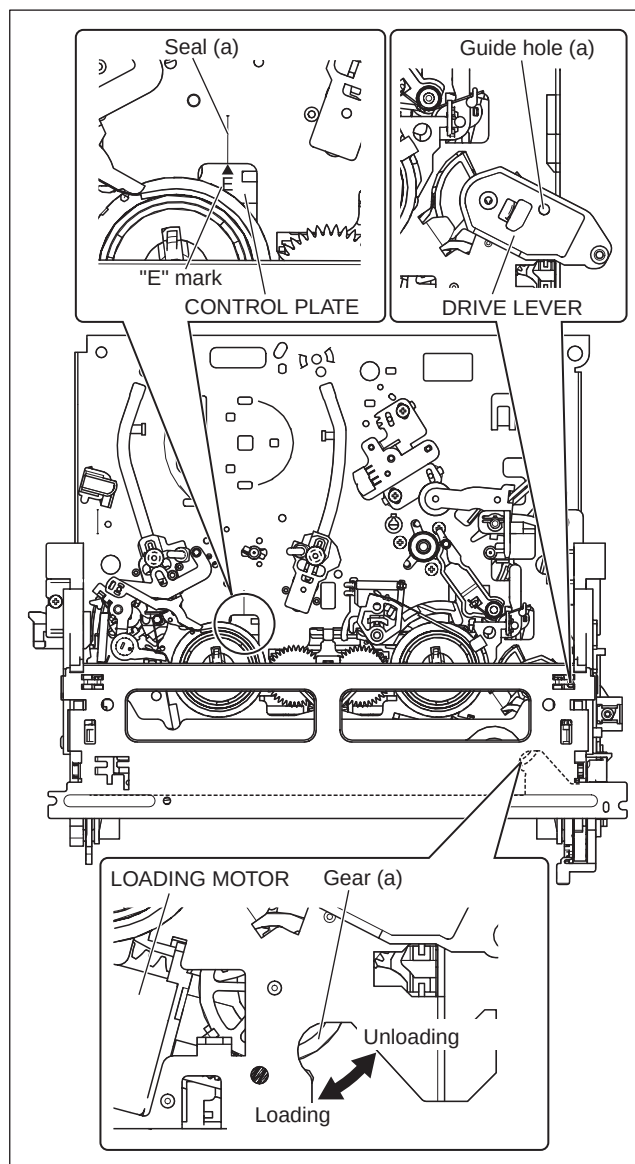


Fig.2-3-2

2.3.4 Layout of the main mechanism parts

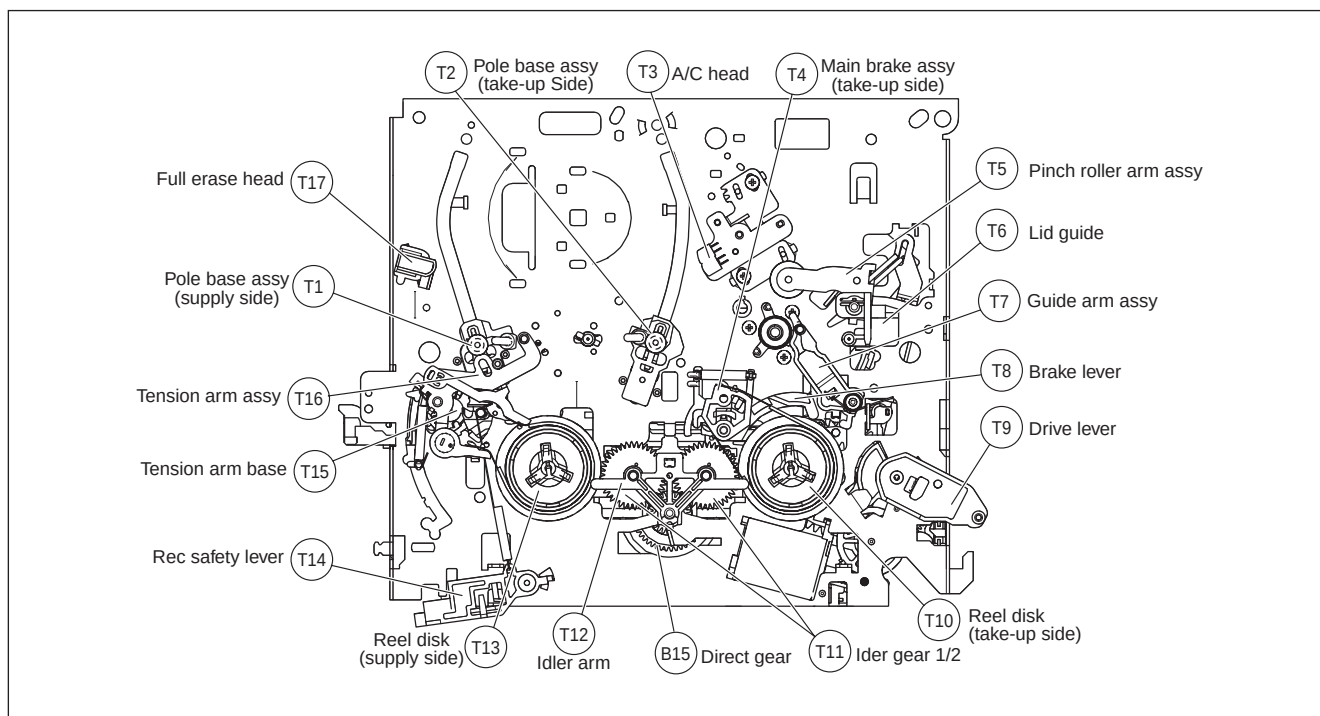


Fig.2-3-3

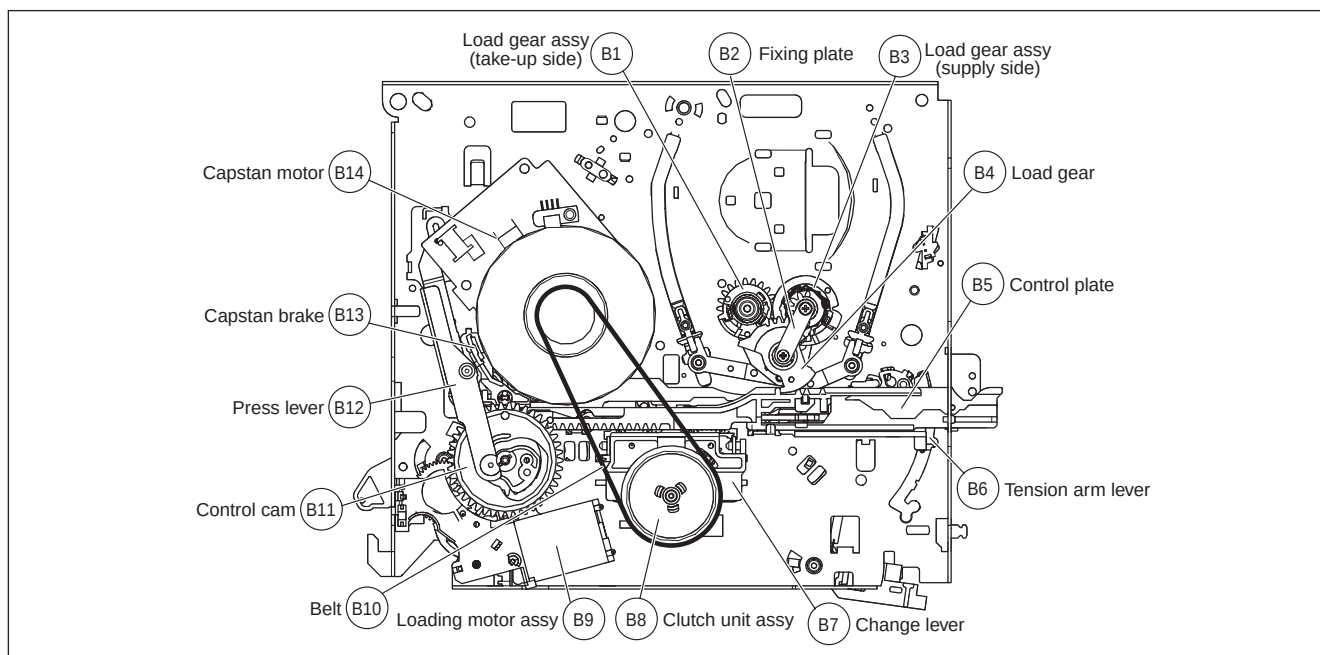


Fig.2-3-4

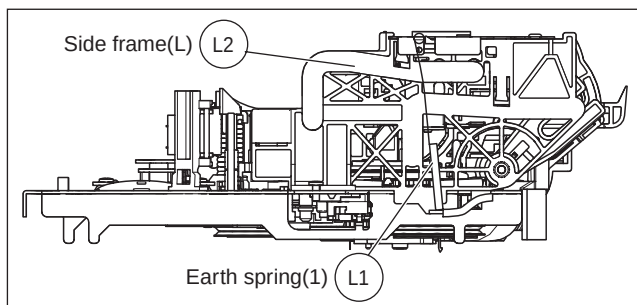


Fig.2-3-5

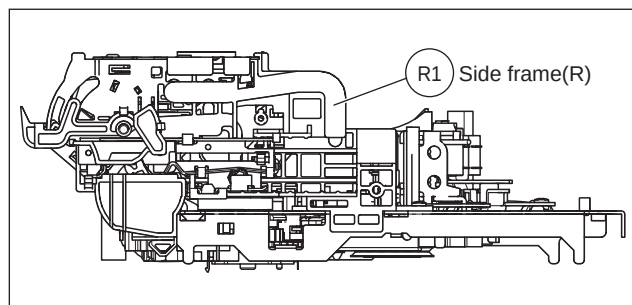


Fig.2-3-6

2.3.5 Disassembling procedure table

This table shows the order of parts removal when replacing each part. For replacement, remove the parts in the order of 1 to 13 shown in the table and install the parts in the reverse order.

The symbol number before each part name shows the number in the figure "Layout of the main mechanism parts". T and B on the right of each part name show the side from which the part should be removed (T: From the front of the mechanism, B: From the rear of the mechanism, T/B: From both sides).

Symbols and numbers				L1	-	-	L2	-	R1	T6	T12	T11	T4	T10	T16	T15	B12	B11	B13	B9	B10	B2	B4	B3	B1	B5	B8	B15
Symbols and numbers	Removal parts	Front(T)/Back(B) of mechanism	Number of removal steps	Earth spring (L)	Top frame	Cassette holder	Side frame (L)	Drive arm	Side frame (R)	Lid guide	Idler arm	Idler gear 1/2	Main brake (T)	Reel disk (T)	Tension arm	Tension arm base	Press lever	Control cam	Capstan brake assy	Loading motor assy	Belt	Fixing plate	Load gear	Loading gear assy (S)	Loading gear assy (T)	Control plate	Clutch unit	Direct gear
	(Reference items) Replacement parts																											
L1	2.1 Earth spring (1)	T	1																									
-	2.1 Top frame	T	2	1																								
-	2.1 Cassette holder	T	3	1	2																							
L2	2.1 Side frame (L)	T	3	1	2																							
-	2.1 Drive arm	T	5	1	2	3	4																					
R1	2.1 Side frame (R)	T	3	1	2																							
T3	2.2 A/C head	T	1																									
T17	- FE head	T/B	1																									
T7	2.3 Guide arm assy	T	1																									
T6	2.3 Lid guide	T	1																									
T5	2.3 Pinch roller arm assy	T	2							1																		
T12	2.4 Idler arm	T	4	1	2	3																						
T11	2.4 Idler gear 1/2	T	5	1	2	3					4																	
T4	2.5 Main brake assy (T)	T	6	1	2	3					4	5																
T10	2.5 Reel disk (T)	T	7	1	2	3					4	5	6															
T16	2.5 Tension arm	T	6	1	2	3					4	5																
T13	2.5 Reel disk (S)	T	7	1	2	3					4	5			6													
T15	2.5 Tension arm base	T	7	1	2	3					4	5			6													
-	- T-up head	T	8	1	2	3					4	5			6	7												
-	- T-up lever	T	8	1	2	3					4	5			6	7												
T8	2.5 Brake lever	T	8	1	2	3					4	5	6	7														
T14	2.5 Rec safety lever	T	7	1	2	3	4	5	6																			
B12	2.6 Press lever	B	1																									
B11	2.6 Control cam	B	2														1											
B13	2.6 Capstan brake assy	B	3														1	2										
B9	2.6 Loading motor assy	B	4														1	2	3									
B10	2.7 Belt	B	1																									
B14	2.7 Capstan motor	T/B	2																		1							
-	- Wire holder	T/B	1																									
B2	2.7 Fixing plate	B	1																									
B4	2.7 Load gear	B	2																			1						
B3	2.7 Loading gear assy(S)	B	3																			1	2					
B1	2.7 Loading gear assy(T)	B	4																			1	2	3				
T1	- Pole base assy(S)	T/B	4																			1	2	3				
T2	- Pole base assy(T)	T/B	5																			1	2	3	4			
-	- Load gear base	B	5																			1	2	3	4			
B5	2.7 Control plate	B	6														1	2			3	4	5					
T9	- Drive lever	T/B	10	1	2	3	4	5	6								7	8		9								
B8	2.8 Clutch unit	B	2																		1							
B15	2.8 Direct gear	B	3																		1							2
B7	- Change lever	T/B	6								1	2									3						4	5
B6	- Tension arm lever	T/B	14	1	2	3					4	5			6	7	8	9			10	11	12			13		

2.3.6 REPLACEMENT OF THE MAIN MECHANISM PARTS

2.3.6.1 Cassette holder

2.3.6.1.1 Removal

- (1) Remove the screws (a) and (b).
- (2) Hold up the top frame, cassette holder assembly, drive arm assembly and side frames (L/R) all together and remove them by releasing the hooks (a) and (b).

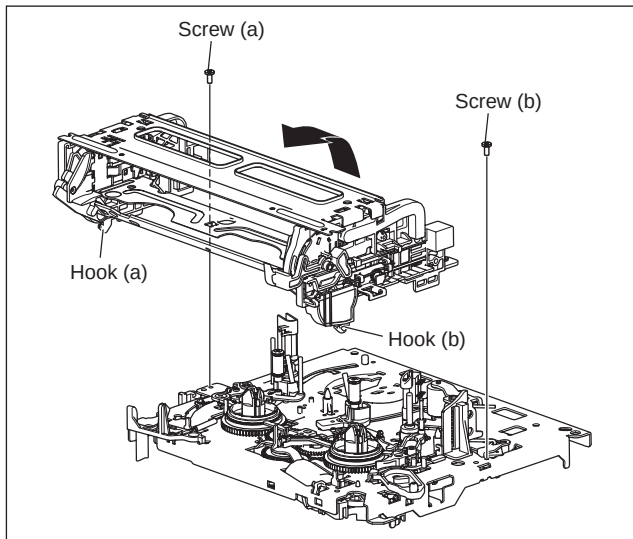


Fig.2-3-7

2.3.6.1.2 Installation (phase adjustment)

- (1) Turn gear (a) of the loading motor assembly so that the main deck connects to the guide hole (a) of the drive lever.
- (2) Hook the main deck to hooks (a) and (b).
- (3) Place the projection of the drive lever to section (a) of the side frame (R) and install the cassette holder to the main deck. Make sure that the bosses of the side frame (L/R) connect with the holes (a) and (b) of the main deck.
- (4) Secure screws (a) and (b).

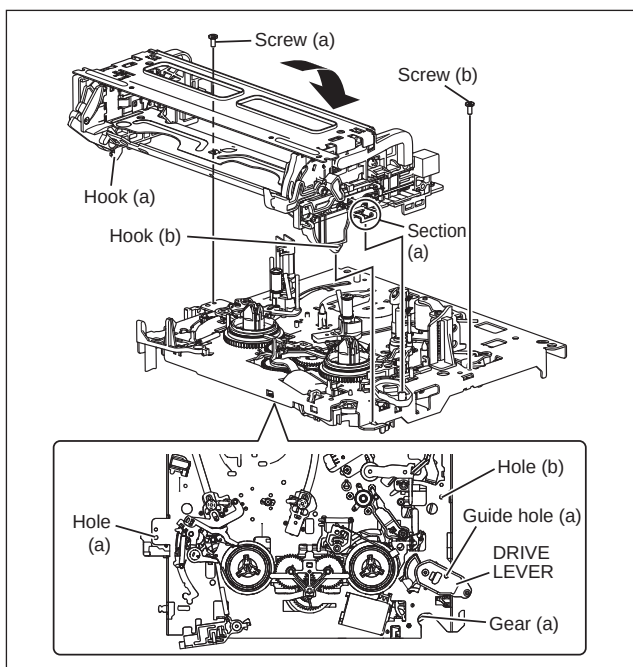


Fig.2-3-8

2.3.6.1.3 Disassembling

- (1) Release hook (a) to remove the earth spring (1) from the top frame.
- (2) Release the catches (a) and (b) and pull the top frame in the direction shown by the arrow (a) to remove it.
- (3) Pull out the side frame (R).
- (4) Pull out the cassette holder assembly and drive arm assembly from the side frame (L).

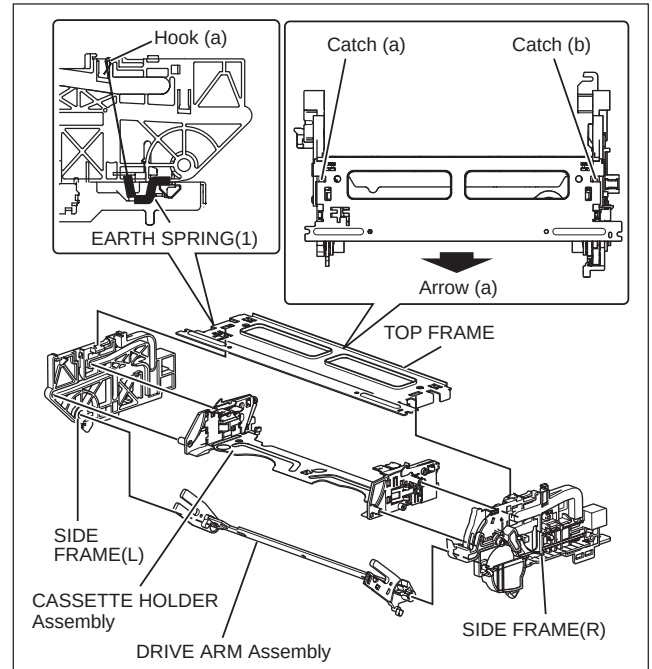


Fig.2-3-9

2.3.6.1.4 Assembling (installation and phase adjustment)

- (1) Turn gear (a) of the loading motor assembly so that the main deck connects to the guide hole (a) of the drive lever.
- (2) Place the projection of the drive lever on section (a) of the side frame (R) and install the side frame (R) to the main deck.
- (3) Secure screw (b).
- (4) Place section (b) of the drive arm on the gear of the side frame (R). Make sure that the pin of the door opener connects with section (c) of the drive arm.
- (5) Place the drive arm on section (d) of the side frame (L) and install the side frame (L) on the main deck. Be sure to connect the earth spring (1) to the side frame (L).
- (6) Secure screw (a).
- (7) Turn gear (a) of the loading motor assembly until the drive arm is vertical.
- (8) Place the slit of the side frame (L/R) at the foot of the cassette holder assembly and install the cassette holder.
- (9) Place the top frame on the position guide (a) of the side frame (L/R) and push it in the direction shown by the arrow (a) for installation.
- (10) Hook the earth spring (1) to the hook (a) of the top frame.

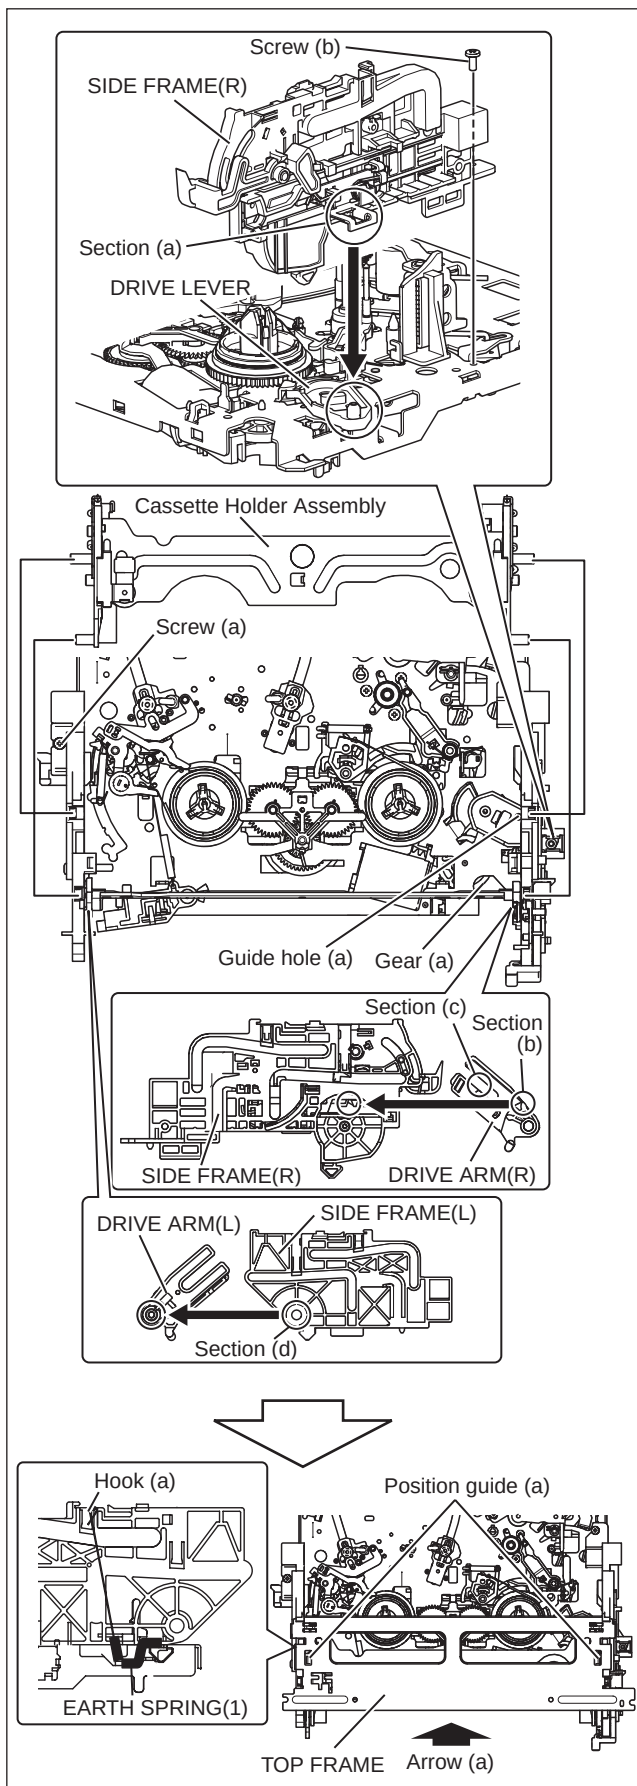


Fig.2-3-10

2.3.6.2 A/C head

2.3.6.2.1 Removal

- (1) Remove screws (a) and (b).
- (2) Remove the A/C head together with the head base.
- (3) Remove the screws (c), (d) and (e) to remove the spring (a) and the A/C head from the Head base.

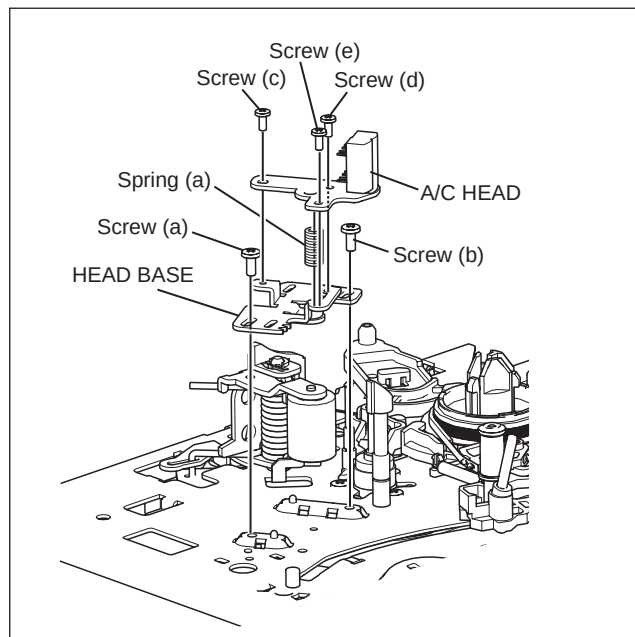


Fig.2-3-11

2.3.6.2.2 Installation (initial setting)

To install the A/C head to the head base, secure the screws in the order of (c), (d) and (e). To make the adjustment easy, temporarily elevate the A/C head.

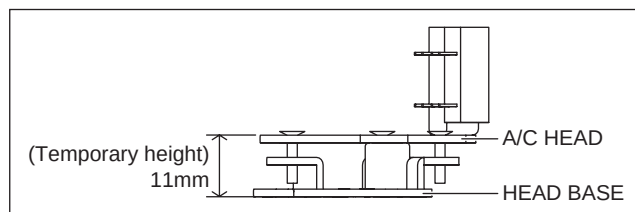


Fig.2-3-12

2.3.6.3 Guide arm, pinch roller arm

2.3.6.3.1 Removal

- (1) Remove the spring (a) from the hook (a) and detach the guide arm assembly.
- (2) Release the catch (a) to remove the lid guide.
- (3) Remove the spring (b) from the hook (b) and detach the pinch roller arm assembly.

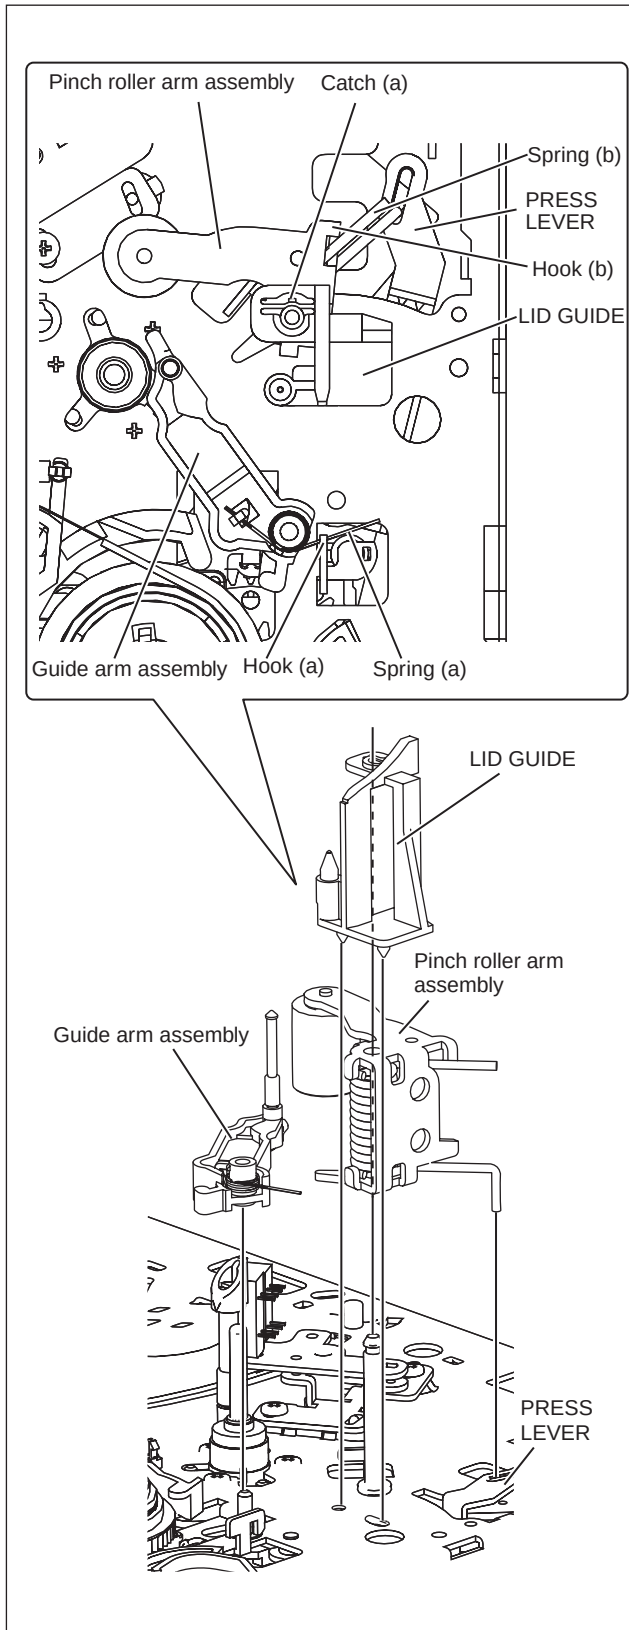


Fig.2-3-13

2.3.6.4 Idler arm, idler gear 1/2

2.3.6.4.1 Removal

- (1) Release the catches (a) and (b) to detach the idler arm.
- (2) Detach the idler gear 1/2.

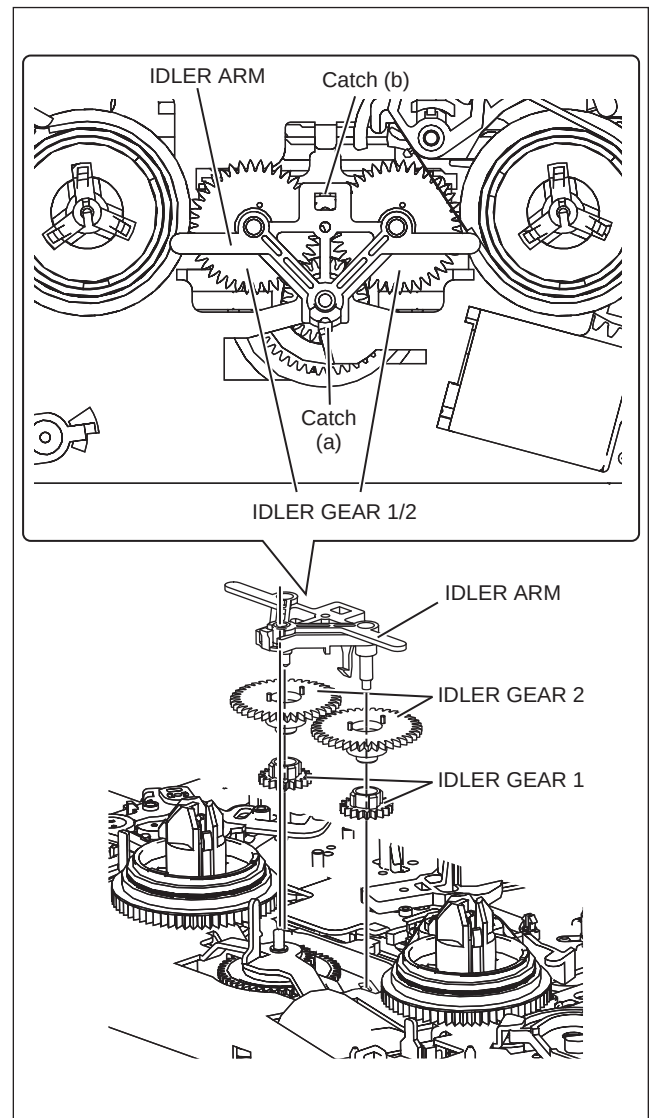


Fig.2-3-14

2.3.6.5 Main brake (T), brake lever, tension arm, reel disk (S/T), Rec safety lever

2.3.6.5.1 Removal

- (1) Remove the spring (a). (Detach section (b) of the spring (a).)
- (2) Release the catch (a) to detach the main brake (T).
- (3) Release the catch (b) to detach the reel disk (T) and the spacer.
- (4) Lift up and turn section (b) of the brake lever counterclockwise to remove the brake lever.
- (5) Remove the spring (b) from the hook (a).
- (6) Release the catch (c) to detach the tension arm.
- (7) Release the catch (d) to detach the reel disk (S) and the spacer.
- (8) Remove the spring (c) from the hook (b).
- (9) Turn the tension arm base in the direction shown by arrow (a) to release catch (e). Place the projections of the tension arm base to the holes (a) to detach the tension arm base.
- (10) While releasing the catch (f), turn the Rec safety lever counterclockwise to remove it.

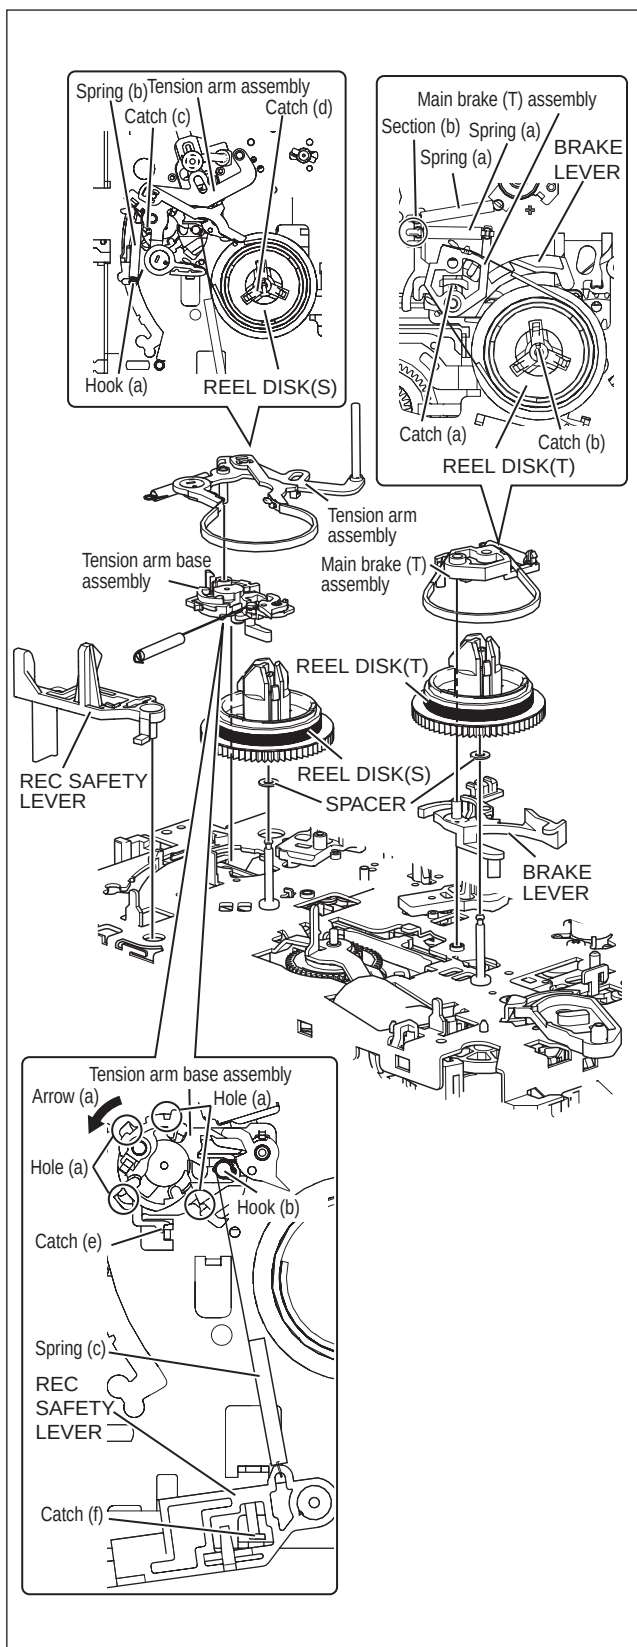


Fig.2-3-15

2.3.6.6 Press lever, control cam, capstan brake assembly, loading motor assembly

2.3.6.6.1 Removal

- (1) Remove the slit washer (a) to detach the press lever.
- (2) Release the slit washer (b) to detach the control cam.
- (3) Release the catch (b) to detach the capstan brake assembly.
- (4) Remove the solder (a).
- (5) Remove the screw (a).
- (6) Release the catches (c) and (d) to detach the loading motor assembly.

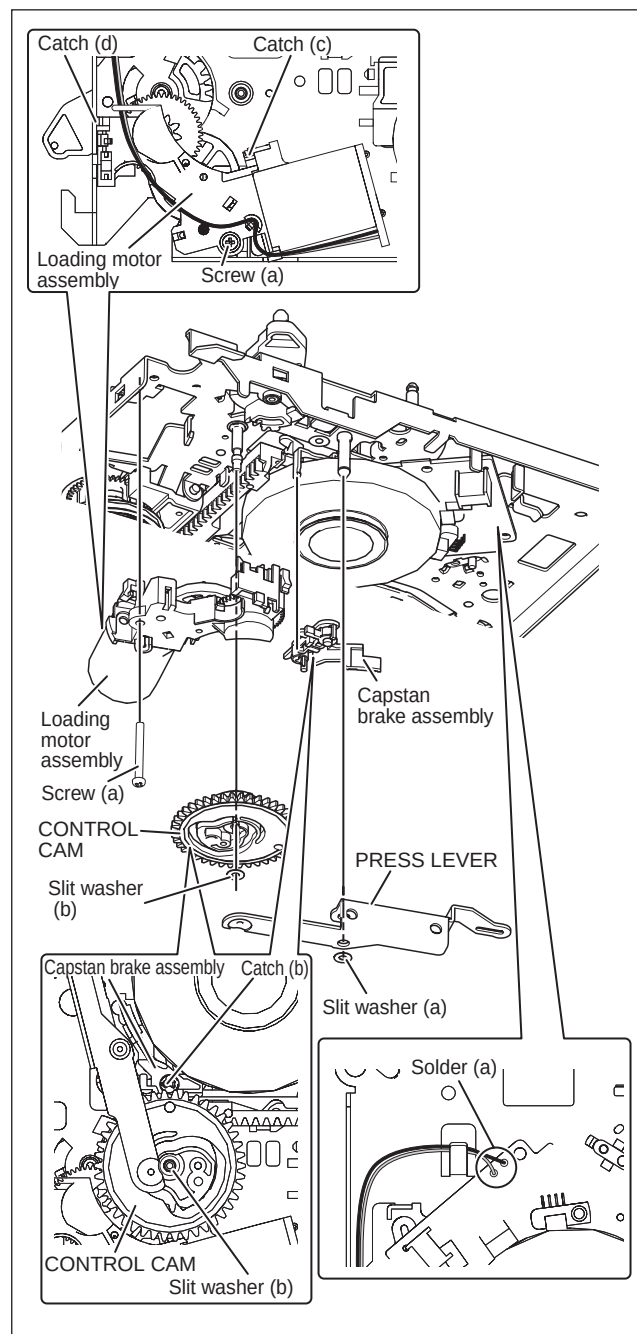


Fig.2-3-16

2.3.6.6.2 Installation (phase adjustment)

- (1) Attach the loading motor assembly to the main deck.
- (2) Secure the screw (a).
- (3) Solder the wire to section (a).
- (4) Arrange the wire along with the position guide (b).
- (5) Attach the capstan brake assembly to the main deck.
- (6) Place the main deck on the guide hole (a) of the control plate.
- (7) Place the main deck on the guide hole (b) of the drive lever.
- (8) Place the main deck on guide hole (c) of the control cam to install the control cam.
- (9) Move the capstan brake in the direction shown by the arrow (a) to attach the press lever to the shaft (a). Make sure that the boss of the press lever fits in the control cam, and that the shaft (b) of the pinch roller arm assembly connects with the hole of the press lever.
- (10) Attach slit washer (a) to shaft (a).

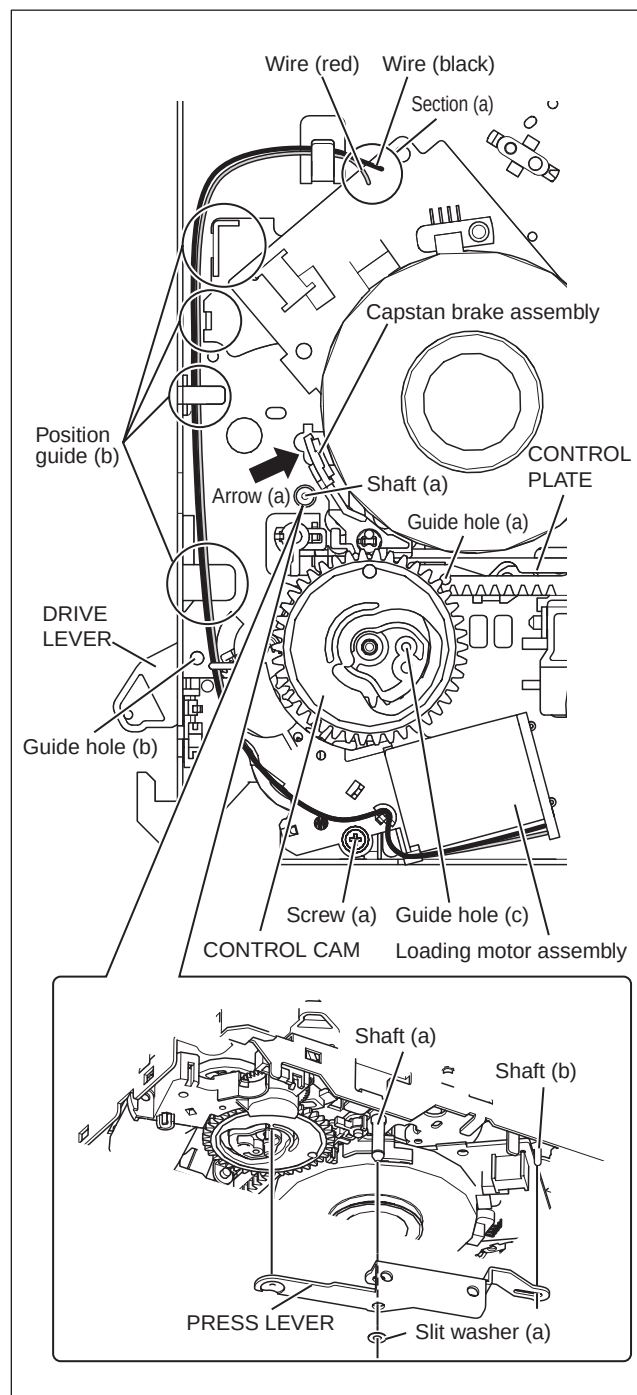


Fig.2-3-17

Note:

- When replacing the worm bearing of the loading motor assembly, attach it according to the following specification.

If worm bearing is not attached correctly, a mechanism noise may occur. (See Fig. 2-3-18)

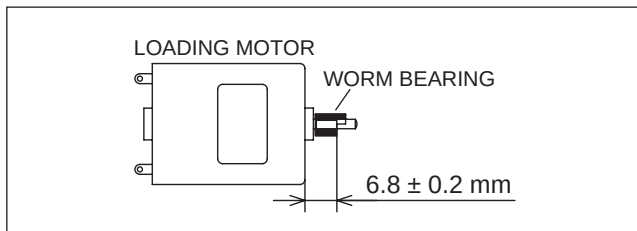


Fig.2-3-18

2.3.6.7 Capstan motor, load gear, control plate

2.3.6.7.1 Removal

- (1) Detach the belt.
- (2) Check that the FFC connector on the drum is disconnected.
- (3) Release the catch (a) to remove the FFC wire.
- (4) Remove the screws (a) to detach the capstan motor.
- (5) Remove the screws (b) to detach the fixing plate.
- (6) Release the catch (b) to detach the load gear.
- (7) Turn the load gear (S/T) in the loading direction to detach it.
- (8) Remove the control plate.

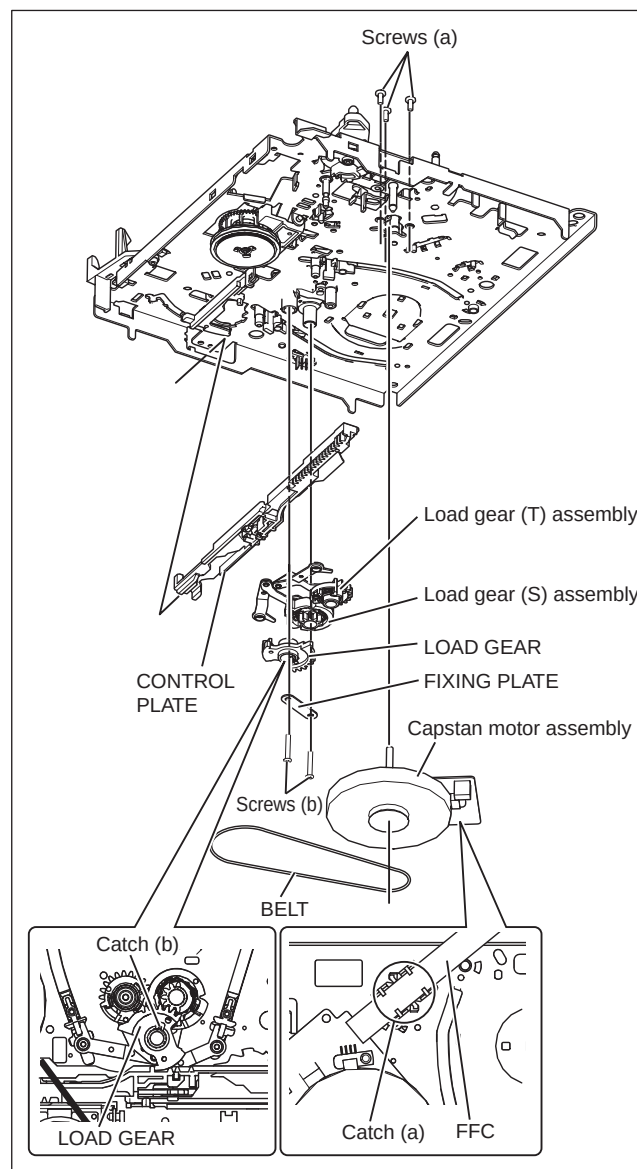


Fig.2-3-19

2.3.6.7.2 Installation (phase adjustment)

- (1) Place the main deck on the guide hole (a) of the tension arm lever.
- (2) Place the main deck on the guide hole (b) of the brake lever.
- (3) Attach the control plate to align with the position guide (a).
- (4) Place the hole (c) of the load arm (T) on the pole base (T) and the load gear (T) on the load gear base.
- (5) Place the hole (d) of the load arm (S) on the pole base (S) and the load gear (S) on the load gear base. Be sure to align the guide mark (e) of the load gear (T) to that of the load gear (S).
- (6) Turn the load gear (S/T) in the unloading direction to place the main deck on the guide hole (f) of the load gear (T).
- (7) Place the main deck on the guide hole (g) of the control plate.
- (8) Attach the load gear on the load gear base so that the control plate is placed on the edge (h) of the load gear.
- (9) Place the fixing plate on the shaft of the load gear base and secure the screws (b).

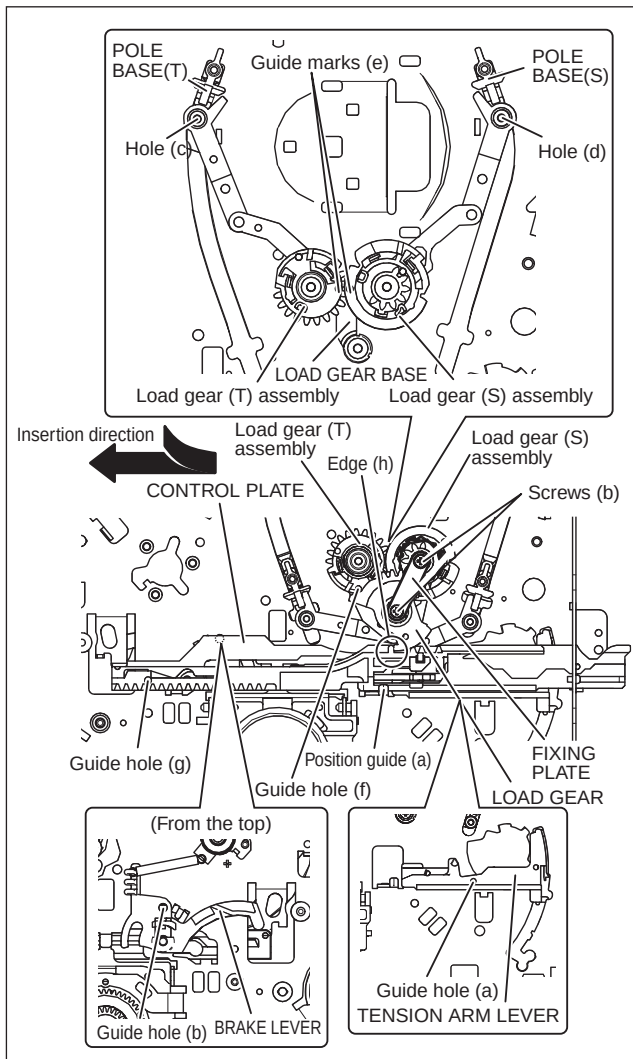


Fig.2-3-20

2.3.6.8 Clutch unit assembly, direct gear

2.3.6.8.1 Removal

- (1) Remove the slit washer (a) to detach the clutch unit assembly.
- (2) Remove the spring (a) and the direct gear.


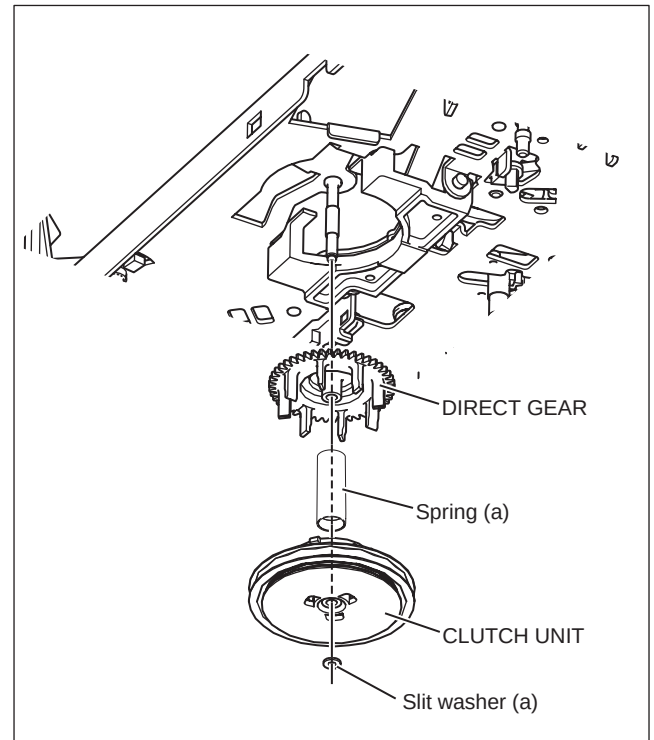


Fig.2-3-21

2-40 (No.86700)

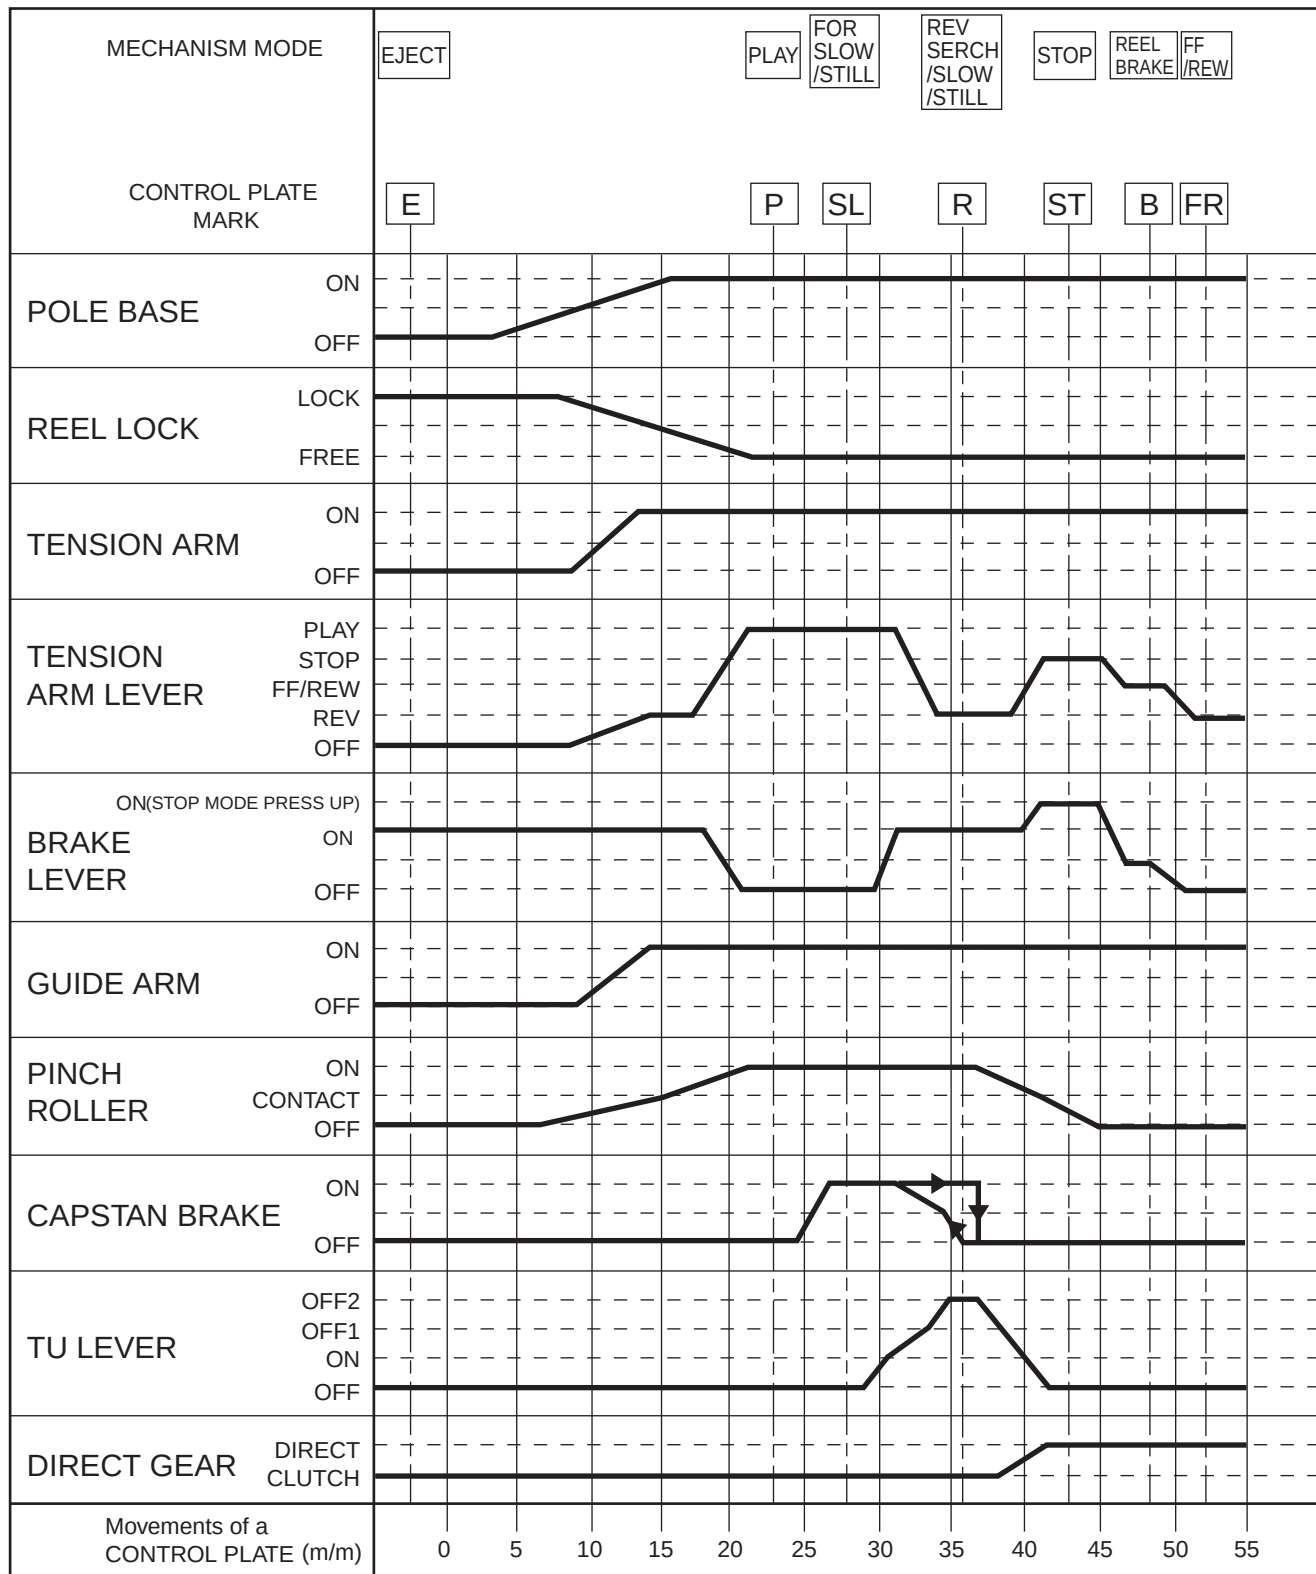

2.3.8 REMARKS

2.3.8.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.3.8.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.3 VHS MECHANISM ASSEMBLY. Fig.2-3-22 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	COSMO-HV56	BB

specifies oil and grease to be used

Fig.2-3-22



VICTOR COMPANY OF JAPAN, LIMITED

AV & MULTIMEDIA COMPANY CAMCORDER CATEGORY 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.86700)



Printed in Japan
200304WPC

SECTION 3

PARTS LIST

3.1 DVC MECHANISM ASSEMBLY

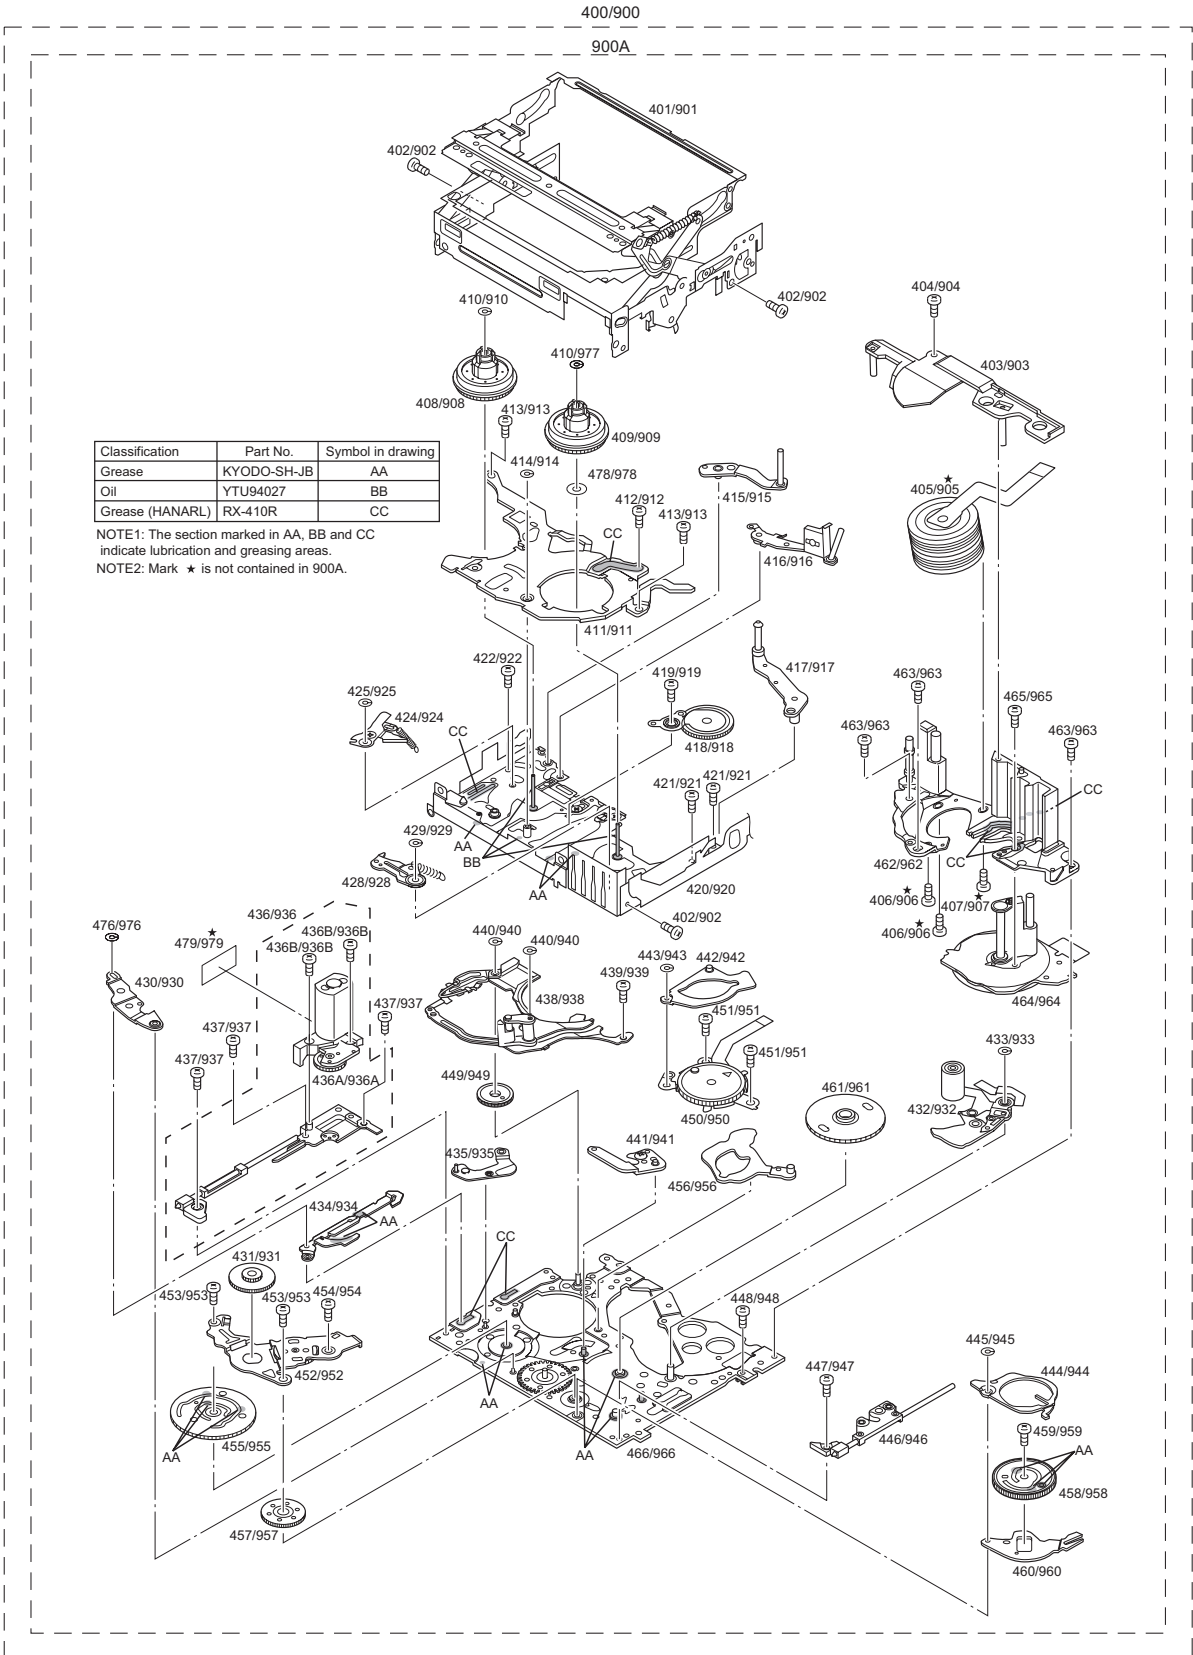


Fig.3-1-1

3.1.1 DVC MECHANISM ASSEMBLY PART LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.
- To distinguish the mechanism assembly with the symbol number of 400-499 from the mechanism assembly with the symbol number of 900-999, see the following procedures.

(1) See the numbers on the backside of the MAIN DECK ASSY.

For example, "29D*****" is printed on the backside of the mechanism assembly with the symbol number of 900-999 (YMA0029D in this example). See the first three characters and numbers from the left.

(2) See the color of the SLIT WASHER on the REEL DISK (TU).

A red slit washer is used (the same color as a slit washer of CASSETTE GUIDE (SUP)) in the mechanism assembly with the symbol number of 400-499. A black slit washer is used in the mechanism assembly with the symbol number of 900-999.

However, the black slit washer may be changed into a red one for the purpose of parts unification.


(3) See the color of the CASSETTE GUIDE(SUP).

Light-brown CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 400-499.

Black CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 900-999.

(4) See the shape of the LED PRISM. LED PRISM consists of only resin in the mechanism assembly with the symbol number of 400-499.

Upper part of the LED PRISM is covered with black metal in the mechanism assembly with the symbol number of 900-999.

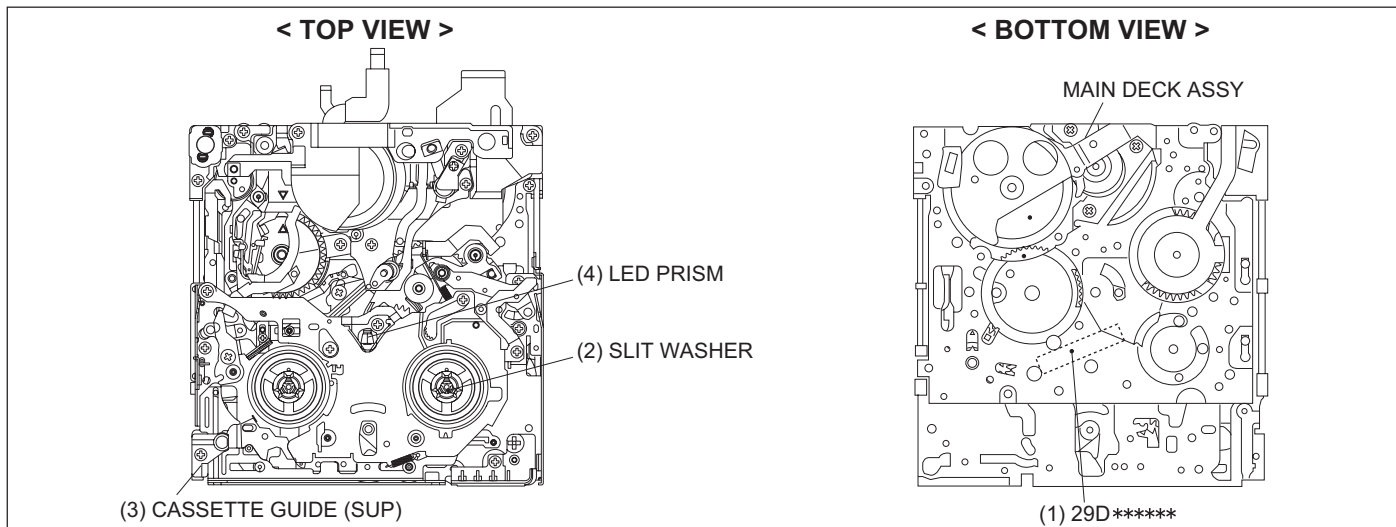

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MECHA(A) ASSY	400	YMA0029C	YMA0029M	YMA0029L	900	YMA0029H	YMA0029E
MECHA(A) ASSY	-	-	-	-	900A	YMA0029D	-
CASSETTE HOUSING ASSY	401	LY31543-002E*	LY31543-002H	←	901	LY32870-001G*	LY32870-001J
MINI SCREW,X3	402	YQ43893-8	←	←	902	←	←
UPPER BASE ASSY	403	LY31542-001J	←	←	903	LYH30420-001A	←
MINI SCREW	404	YQ43893*	QYSPSPU1425M	←	904	←	←
DRUM ASSY	405	**	**	**	905	**	**
DAMP.SCREW ASSY,X2	406	LY42820-001A	←	←	906	←	←
DAMP.SCREW ASSY	407	LY42820-002A	←	←	907	←	←
REEL DISK ASSY (SUP)	408	LY31538-001B*	LY31538-001F	←	908	←	←
REEL DISK ASSY (TU)	409	LY31538-002B*	LY31538-002H	LY31538-002G	909	LY31538-002H	←
SLIT WASHER,X2 or X1	410	YQ44246,(x2)	←,(x2)	←,(x2)	910	←*,(x1)	←,(x2)
REEL COVER ASSY	411	LY10217-001A*	LY10217-001F	←	911	LY10372-001D	←
MINI SCREW	412	LY42120-001A*	LY42120-002A	←	912	←	←
MINI SCREW,X2	413	LY41945-003A	←	←	913	←	←
SLIT WASHER	414	YQ44246	←	←	914	←	←
TENSION ARM ASSY	415	LY42025-001C	←	←	915	LY43725-001D	←
SLANT POLE ARM ASSY	416	LY31535-001F	←	←	916	LYH40269-001A	←
TU ARM ASSY	417	LY42031-001G*	LY42031-001K	←	917	LY43731-001F	←
SWING ARM ASSY	418	LY31531-001D	←	←	918	←	←
MINI SCREW	419	YQ43893	←	←	919	←	←
SLIDE DECK FINAL ASSY	420	LY20530-003B*	LY20530-003E	←	920	LYH30424-001A	←

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MINI SCREW,X2	421	YQ43893	←	←	921	←	←
MINI SCREW	422	LY43023-001A	←	←	922	←	←
PAD ARM ASSY	424	LY31533-001E	←	←	924	LYH30419-001A	←
SLIT WASHER	425	YQ44246	←	←	925	←	←
TU BRAKE ASSY	428	LY42016-001B	←	←	928	LYH40270-001A	←
SLIT WASHER	429	YQ44246	←	←	929	←	←
TENSION CONTROL LEVER ASSY	430	LY41959-001B	←	←	930	LY43684-001A	←
CENTER GEAR	431	LY31525-001B	←	←	931	LY32861-001A	←
PINCH ROLLER ARM FINAL ASSY	432	LY31516-001E	←	LY31516-001F	932	←	←
SLIT WASHER	433	YQ44246	←	←	933	←	←
TENSION CONTROL PLATE ASSY	434	LY41956-001C	←	←	934	LY43681-001A	←
BRAKE CONTROL LEVER ASSY	435	LY41962-001B*	LY41962-001C	←	935	LY43687-001A	←
MOTOR BRACKET ASSY	436	LY20525-002C	←	←	936	LYH30421-001A	←
LOADING MOTOR	436A	QAR0138-001	←	←	936A	←	←
TAPPING SCREW,x2	436B	LY41940-001A	←	←	936B	←	←
MINI SCREW,x3	437	YQ43893	←	←	937	←	←
GUIDE RAIL ASSY	438	LY20528-001R*	LY20528-001U	←	938	LYH30422-001A	←
MINI SCREW	439	YQ43893	←	←	939	←	←
SLIT WASHER,X2	440	YQ44246	←	←	940	←	←
SLIDE LEVER2 ASSY	441	LY31498-001C	←	LY31498-001D	941	LY32843-001A	←
LOADING PLATE ASSY	442	LY41965-001A	←	←	942	LY43690-001A	←
SLIT WASHER	443	YQ44246	←	←	943	←	←
EJECT LEVER	444	LY31522-001B	←	←	944	LY32858-001A	←
SLIT WASHER	445	YQ44246	←	←	945	←	←
BASE R ASSY	446	LY41929-001E*	LY41929-001F	←	946	LYH40271-001A	←
MINI SCREW	447	YQ43893	←	←	947	←	←
MINI SCREW	448	LY41945-001B	←	←	948	←	←
MODE GEAR	449	LY41930-001A	←	←	949	LY43665-001A	←
ROTARY ENCODER	450	QSW0876-003	←	←	950	←	←
MINI SCREW,X2	451	YQ43893	←	←	951	←	←
GEAR COVER ASSY	452	LY31524-001A	←	←	952	LY32860-001A	←
MINI SCREW,X2	453	YQ43893	←	←	953	←	←
MINI SCREW	454	YQ43893-4	←	←	954	←	←
MAIN CAM ASSY	455	LY41948-001C	←	←	955	LY43676-001A	←
SLIDE ARM ASSY	456	LY41941-001B	←	←	956	←	←
CONNECT GEAR 2	457	LY41951-001B	←	←	957	LY43678-001A	←
SUB CAM ASSY	458	LY41954-001B	←	LY41954-001E	958	←	←
MINI SCREW	459	LY42120-001A	←	←	959	←	←
CONTROL ARM ASSY	460	LY41952-001A	←	←	960	LY43692-001A	←
REEL GEAR 1	461	LY31523-001B	←	←	961	LY32859-001A	←
DRUM BASE ASSY	462	LY31508-002A*	LY31508-002B	LY33372-001A	962	LY31508-002B	←
SCREW,X3	463	QYSPSPU1425M	←	←	963	←	←
CAPSTAN MOTOR	464	QAR0142-001	←	←	964	←	←
MINI SCREW	465	YQ43893	←	←	965	←	←
MAIN DECK ASSY	466	LY10210-001D*	LY10210-001G	←	966	LY10367-001D*	LY10367-001E
SLIT WASHER	476	YQ44246	←	←	976	←	←
SLIT WASHER	477	-	-	-	977	YQ44246-6	-
WASHER	478	-	-	-	978	LY42047-005A	←
SPACER	479	-*	LY43987-001B	←	979	←	←

NOTE:


MARK ← is same as left.

MARK - is not used.

MARK * reference model was also changed.

MARK ** shows different parts number, depending on models.

3-4 (No.86700)



3.2.1 VHS-C MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
MECHA(B) ASSY	400	YMA0033A-E	YMA0042A-E	YMA0034A-E	YMA0036A-E	YMA0040A-E
MAIN DECK ASSY	401	LY20612-001B	←	←	←	←
CASSETTE GUIDE (LEFT)	402	LY31817-001A	←	←	←	←
SW LEVER (LEFT)	403	LY31815-001A	←	←	←	←
TORSION SPRING	404	LY42581-001A	←	←	←	←
SCREW	405	LY42722-001A	←	←	←	←
CASSETTE GUIDE ASSY(RIGHT)	406	-	-	YQ44339A-7	←	←
SW.LEVER(RIGHT)	406A	-	-	YQ32162-1-3	←	←
TORSION SPRING	406B	-	-	YQ44340-1-4	←	←
SCREW	407	-	-	LY42819-001A	←	←
MOTOR BRACKET ASSY	408	LY31826-001A	←	←	←	←
WORM BRACKET	409	YQ20793	LY20951-001A	YQ20793	←	LY20951-001A
SCREW,X3	410	LY42722-001A	←	←	←	←
WHEEL GEAR	411	LY31925-001A	←	←	←	←
MIDDLE GEAR	412	LY42730-001A	←	←	←	←
CANCEL LEVER ASSY	413	LY42521-001A	←	←	←	←
SLIT WASHER,X2	414	LY42754-003A	←	←	←	←
CONTROL CAM	415	YQ20827-2-1	←	←	←	←
SLIT WASHER	416	PQM30017-25	←	←	←	←
LOADING GEAR(T)ASSY	417	LY42733-001A	←	←	←	←
SLIT WASHER	418	LY42754-003A	←	←	←	←
LOADING GEAR(S)ASSY	419	LY42732-001A	←	←	←	←
SLIT WASHER	420	LY42754-003A	←	←	←	←
COVER PLATE	421	LY42403-001A	←	←	←	←
LOADING RING ASSY	422	LY42452-001A	←	←	←	←
SCREW,X4	423	LY42728-001A	←	←	←	←
GUIDE RAIL	424	LY10239-001A	←	←	←	←
SCREW,X8 or X7	425	LY42728-001A,(X8)	←,(X7)	←,(X8)	←,(X8)	←,(X7)
POLE BASE(S)ASSY	426	LY30161-001B	←	←	←	←
POLE BASE(T)ASSY	427	LY30162-002A	←	←	←	←
DRIVE LEVER ASSY	428	LY42523-001A	←	←	←	←
SLANT ARM ASSY	429	LY42545-001B	LY44000-001B	LY42545-001B	←	LY44000-001B
TORSION SPRING(S)	429A	LY42547-001A	LY43992-001A	LY42547-001A	←	LY43992-001A
SLIT WASHER	430	LY42754-003A	←	←	←	←
ROLLER BASE ASSY	431	LY42739-003A	←	←	←	←
SCREW	432	LY42722-001A	←	←	←	←
LINK ARM ASSY	433	LY42494-001A	←	←	←	←
SLIT WASHER	434	PQM30017-25	←	←	←	←
PINCH ROLLER ARM ASSY	435	LY40018-002A	←	←	LY40018-005A	←
SLIT WASHER	436	PQM30017-25	←	←	←	←
TAKE UP GUIDE ARM ASSY	437	LY42541-001B	←	←	←	←
SLIT WASHER	438	LY42754-003A	←	←	←	←
TENSION ARM ASSY	439	LY42571-001A	←	←	←	←
TENSION SPRING	439A	LY42669-001A	←	←	←	←
SLIT WASHER	440	LY42754-003A	←	←	←	←
MOTOR BASE	441	YQ20797-1-5	←	←	←	←
SCREW,X2	442	LY42722-001A	←	←	←	←
SCREW	443	YQ44460	←	←	←	←
CAPSTAN MOTOR	444	QAR0212-001	QAR0212-002	QAR0212-001	QAR0212-002	←
TAPPING SCREW,X3	445	YQ44304	←	←	←	←
SLANT POLE BASE ASSY	446	LY42731-001A	←	←	←	←
TAPPING SCREW	447	YQ44304	←	←	←	←
TIMING BELT	448	YQ43710-2	←	←	←	←
CENTER PULLEY UNIT	449	LY42678-001A	←	←	←	LY42678-003A

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
SCREW,X2	450	LY42722-002A	←	←	←	←
SUPPLY CLUTCH ASSY	451	LY42670-001A	←	←	←	←
SLIT WASHER	452	LY42754-003A	←	←	←	←
REEL DISC	453	YQ31861-1-7	←	←	←	←
WASHER	454	LY42755-001A	←	←	←	←
TAKE UP GEAR	455	LY31924-001A	←	←	←	←
BRAKE SUB GEAR	456	LY42738-001A	←	←	←	←
SLIT WASHER,X3	457	LY42754-003A	←	←	←	←
A/C HEAD UNIT	458	LY42544-001B	LY42544-002A	LY42544-001B	←	LY42544-002A
SCREW,X2	459	SPSN1750Z	←	←	←	←
EJECT LEVER ASSY	460	LY42517-001A	←	←	←	←
SLIT WASHER	461	LY42754-003A	←	←	←	←
LED GUIDE	462	YQ31833-1-1	←	←	←	←
SCREW	463	LY42722-001A	←	←	←	←
DRUM SPACER	464	LY42729-001A	←	←	←	←
SCREW,X2	465	LY42722-001A	←	←	←	←
ROTARY ENCODER	466	QSW0888-001	←	QSW0888-002	←	←
SCREW,X4	467	LY42722-002A	←	←	←	←
LINK LEVER	468	LY31814-001A	←	←	←	←
DRUM FINAL ASSY	469	**	**	**	**	**
CATCHER	469A	YDM1003-1-5	←	←	←	←
SCREW,X2	469B	QYSPSPU1735M	←	←	←	←
SCREW,X2	470	LY42722-001A	←	←	←	←
SCREW,X2	471	SPSH1740Z	←	←	←	←
BRUSH	472	LY43542-001A	←	←	←	←
SCREW	473	LY42722-003A	←	←	←	←
CASSETTE HOUSING FINAL ASSY	*155/481	LY31808-001C	LY31808-002C	LY31808-001C	LY31808-001D	LY31808-002C
SCREW,X4	*156/482	LY42722-003A	←	←	←	←
BRACKET(MECHA)	*161/484	LY32326-001A	←	←	←	←
SCREW,X2	*162/485	LY42722-003A	←	←	←	←
SIDE BRACKET L	*164/487	LY31807-001A	←	←	←	←
SCREW	*165/488	LY42722-003A	←	←	←	←

NOTE:

MARK ← is same as left.

MARK - is not used.

MARK * are shown in the parts list of FINAL ASSY of service manual of each model.

MARK ** shows different parts number, depending on models.

3.3 VHS MECHANISM ASSEMBLY

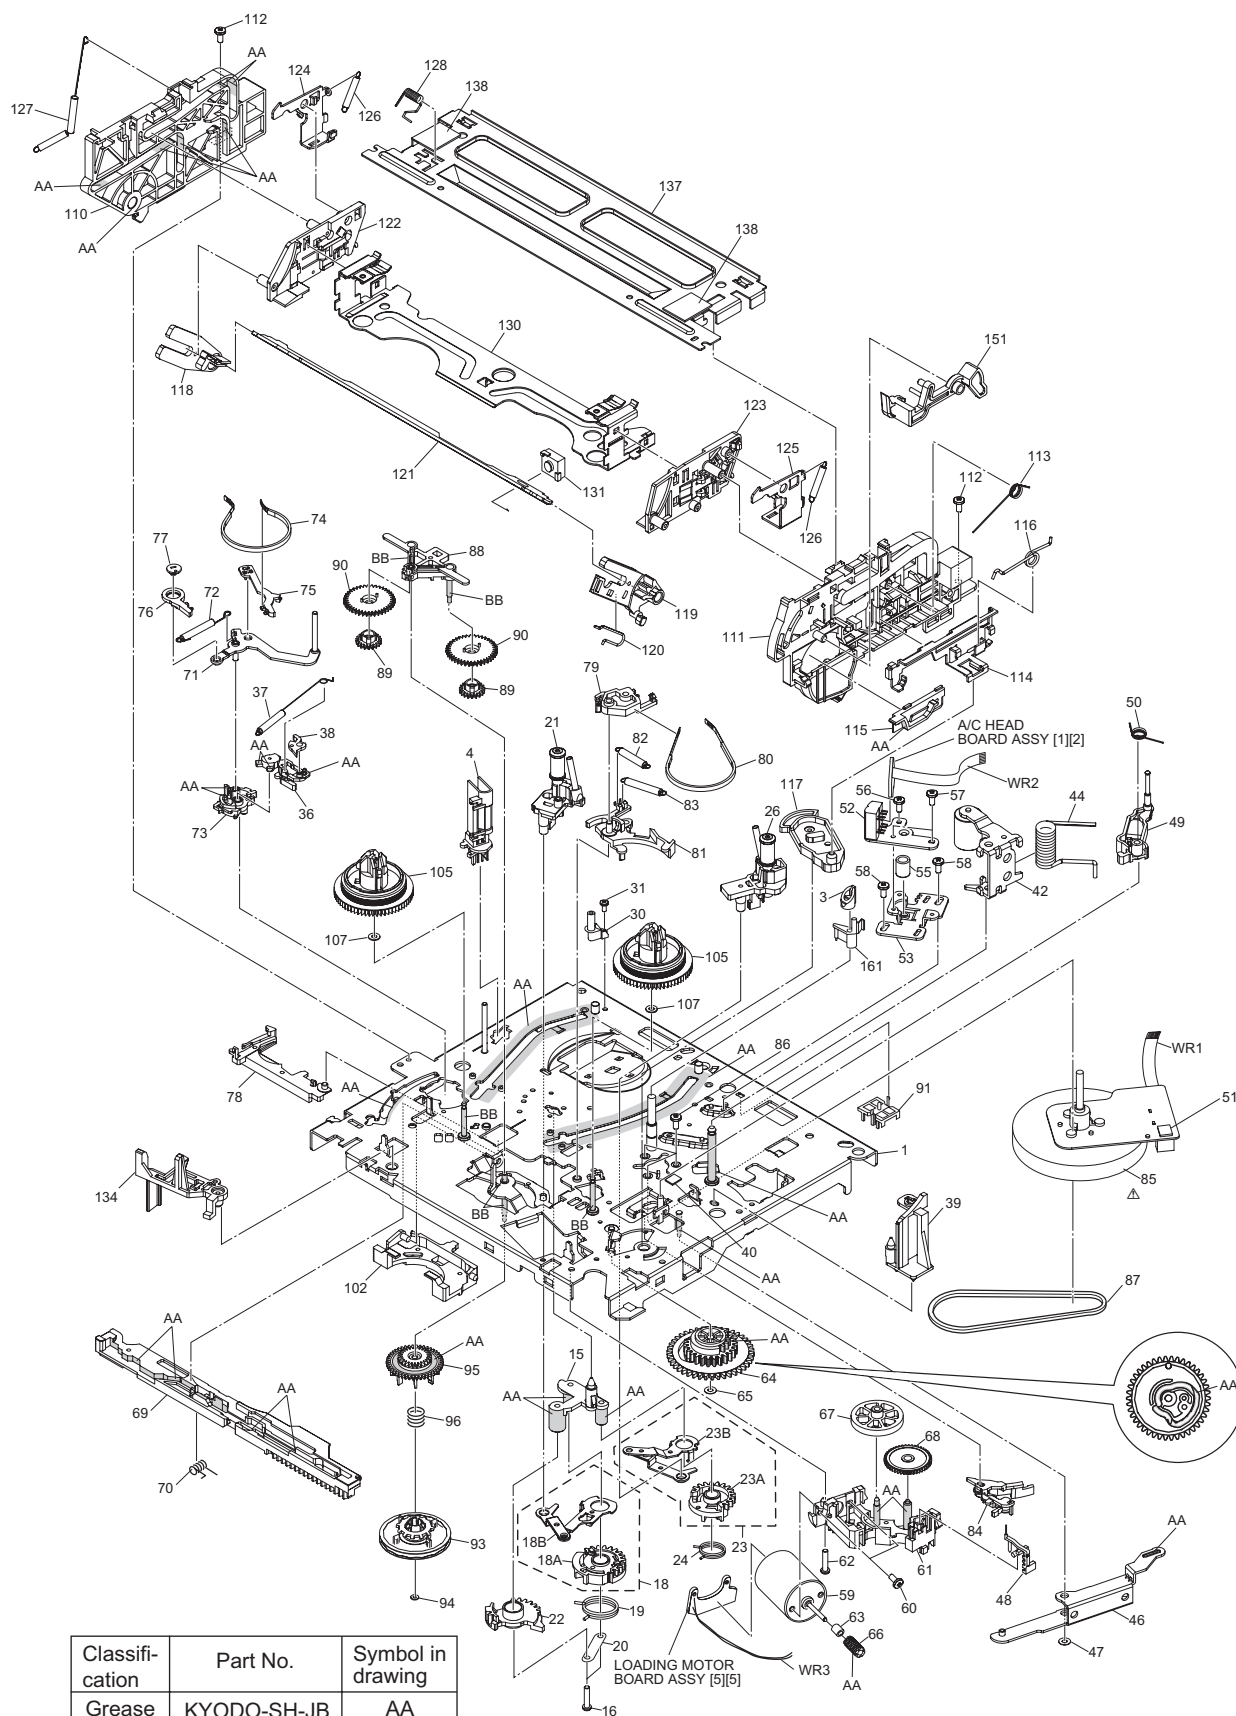


Fig.3-3-1

3.3.1 VHS MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
MAIN DECK ASSY	1	LP21039-001N	LP21039-001S	LP21039-001R	LP21039-001S
GUIDE POLE CAP	3	LP40097-002D	←	←	←
FULL ERASE HEAD	4	QAH0082-001	←	←	←
LOAD.GEAR BASE	15	LP30958-001B	←	←	←
SCREW,X2	16	QYTPST2620Z	←	←	←
LORD.GEAR(SUPPLY) ASSY	18	LP40798-001A	←	←	←
LORD.GEAR(SUPPLY)	18A	LP21040-001A	←	←	←
LORD.ARM(SUPPLY) ASSY	18B	LP40799-001A	←	←	←
TORSION SPRING(SUPPLY)	19	LP40837-001A	←	←	←
FIXING PLATE	20	LP40903-001A	←	←	←
POLE BASE ASSY(SUPPLY)	21	LP40806-001D	←	←	←
LOAD GEAR	22	LP30959-002A	←	←	←
LORD. GEAR(TAKE UP) ASSY	23	LP40802-001B	LP40802-001C	LP40802-001B	LP40802-001C
LORD. GEAR(TAKE UP)	23A	LP21041-001B	LP21041-001C	LP21041-001B	LP21041-001C
LORD.ARM(TAKE UP) ASSY	23B	LP40803-001A	←	←	←
TORSION SPRING(TAKE UP)	24	LP40838-001A	←	←	←
POLE BASE ASSY(TAKE UP)	26	LP40808-001F	LP40808-001E	←	←
ARM BASE	30	-	←	LP31020-004A	←
SCREW	31	-	←	QYTDST2606Z	-
TU LEVER	36	LP21055-001E	←	←	←
TENSION SPRING	37	LP40943-001A	←	←	←
T-UP HEAD	38	LP40859-001D	←	←	←
LID GUIDE	39	LP30961-001C	←	←	←
SPACER	40	LP30002-0B7A	←	←	-
PINCH ROLLER ARM ASSY	42	LP40810-001A	←	←	←
TORSION SPRING	44	LP40840-001C	LP40840-001D	←	←
PRESS LEVER	46	LP30963-001B	←	←	←
SLIT WASHER	47	PQM30017-24	←	←	←
S-SWITCH	48	-	←	LP40930-002E	←
GIDE ARM ASSY	49	LP40813-001D	←	←	←
TORSION SPRING	50	LP40841-001A	←	←	←
SPACER	51	LP30002-090A	←	←	-
A/C HEAD	52	QAH0081-001	←	←	←
HEAD BASE	53	LP30965-001A	←	←	←
COMPRESSION SPRING	55	LP40842-001A	LP40842-001D	LP40842-001A	LP40842-001D
SCREWX1 A/C HEAD	*56	QYTDST2006M	←	←	←
A/C HEAD SCREW,X2	*57	LP41036-001A	←	←	←
SCREW,X2 A/C HEAD	*58	QYTDST2606Z	←	←	←
LOADING MOTOR	59	QAR0023-001	←	←	←
SCREW,X2	60	QYTPSP3003Z	←	←	←
MOTOR BRACKET	61	LP21056-002F	LP21056-002G	←	←
TAP SCREW	62	QYTPST2620Z	←	←	←
WORM BEARING	63	LP40814-001B	←	←	←
CONTROL CAM	64	LP21044-001D	←	←	←
SLIT WASHER	65	PQM30017-24	←	←	←
WORM GEAR	66	LP40815-001A	←	←	←
HELICAL GEAR	67	LP40816-001B	←	←	←
CONNECT GEAR	68	LP40817-001A	←	←	←

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
CONTROL PLATE	69	LP10400-001H	←	←	LP10400-001J
TORTION SPRING	70	LP40843-001A	←	←	←
TENSION ARM ASSY	71	LP40818-001B	←	←	←
TENSION SPRING	72	LP40844-001C	LP40844-001E	LP40844-001D	LP40844-001E
TENSION ARM BASE	73	LP21045-001D	←	←	←
TENSION BAND ASSY	74	LP40821-001A	←	←	←
BAND HOLDER-1	75	LP30967-001B	←	←	←
BAND HOLDER-2	76	LP30968-001C	←	←	←
ADJUST PIN	77	LP40822-002B	←	←	←
TENSION ARM LEVER	78	LP31000-005E	←	←	←
MAIN BRAKE(TAKE UP)	79	LP21046-001C	←	←	←
BAND BRAKE ASSY	80	LP40824-001A	←	←	←
BRAKE LEVER	81	LP30969-002A	LP30969-002B	LP30969-002A	LP30969-002B
TENSION SPRING	82	LP30003-033B	←	←	←
TENSION SPRING	83	LP30003-035B	←	←	←
CAPSTAN BRAKE ASSY	84	LP40825-001B	←	←	←
CAPSTAN MOTOR	85	QAR0204-002	←	←	←
SCREW,X3 CAPSTAN MOTOR	86	QYTPSG2606M	QYTPSG2606Z	QYTPSG2606M	QYTPSG2606Z
BELTCAPSTAN MOTOR	87	LP30005-010A	←	←	←
IDLER ARM	88	LP30970-001A	←	←	←
IDLER GEAR 1,X2	89	LP40828-004A	←	←	←
IDLER GEAR 2,X2	90	LP40829-001B	LP40829-002A	LP40829-001B	LP40829-002A
WIRE HOLDER	91	LP31014-001A	←	←	←
CLUTCH UNIT	93	LP40934-001B	←	←	←
SLIT WASHER	94	PQM30017-47	←	←	←
DIRECT GEAR	95	LP30973-001A	←	←	←
COMPRESS. SPRING	96	LP40939-001A	←	←	←
CHANGE LEVER	102	LP30974-001B	←	←	←
REEL DISK,X2	105	LP21049-001A	←	←	←
SPACER,X2	107	LP30017-004A	←	←	←
SIDE FRAME(L)	110	LP10401-001F	LP10401-001H	LP10401-001F	LP10401-001H
SIDE FRAME(R)	111	LP10402-001F	LP10402-001K	LP10402-001G	LP10402-001K
SCREW,X2	112	QYTDST2606Z	←	←	←
TORSION SPRING	113	LP40917-001C	LP40917-001D	←	←
SIDE PLATE	114	LP30976-001D	LP30976-001E	←	←
LIMIT PLATE	115	LP30977-002D	←	←	←
LIMIT SPRING	116	LP40846-001C	←	←	←
DRIVE LEVER	117	LP31100-001B	←	←	←
DRIVE ARM(L)	118	LP30978-001B	←	←	←
DRIVE ARM(R)	119	LP30979-001H	LP30979-001N	LP30979-001H	LP30979-001N
TORSION SPRING	120	LP40847-001B	←	←	←
CONNECT PLATE	121	LP30980-001A	LP30980-001E	LP30980-001B	LP30980-001E
SIDE HOLDER(L)	122	LP10403-001C	←	←	←
SIDE HOLDER(R)	123	LP10404-001D	LP10404-001E	←	←
LOCK LEVER(L)	124	LP30983-001A	LP30983-001B	LP30983-001A	LP30983-001B
LOCK LEVER(R)	125	LP30984-001A	LP30984-001B	LP30984-001A	LP30984-001B
TENSION SPRING,X2	126	LP40924-001C	LP40924-001D	←	←
EARTH SPRING(1)	127	LP40856-001A	←	LP40856-001B	LP40972-001A
EARTH SPRING(2)	128	LP40857-001B	←	←	←
C.HOLDER ASSY	130	LP30981-001E	LP30981-001G	LP30981-001F	LP30981-001G
C.H STOPPER	131	LP31135-001A	-	LP31135-001A	-

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
R.SAFETY LEVER	134	LP21051-002C	←	←	←
TOP FRAME	137	LP21052-001F	LP21052-001J	LP21052-001H	LP21052-001J
SPACER	138	LP30002-0A7A	-	LP30002-0A7A	-
DOOR OPENER	151	LP30985-001G	←	←	←
TAPE GUIDE	161	-	LP40993-001A	-	LP40993-001A
E-CARD WIRE DRUM.M	WR1	WJT0059-001C	WJT0059-001E	WJT0059-001D	WJT0059-001E
E-CARD WIRE AC HEAD CN2001	WR2	WJT0067-001B	←	←	←
E-FL/RB WIRE LOADING MOTOR	WR3	WJS0022-001A	←	←	←
MEMO	-	PMD0035B-C	PMD0040A-C	PMD0036B-C /PMD0039A-C	PMD0037A-C /PMD0041A-C

NOTE:

MARK ← is same as left.

MARK - is not used.

MARK * shows that Symbol No. and Parts No. may sometimes be different from those in each manual. See the table below for final Symbol No. and Parts No.

MARK ** is Job No.

To identify a model, see the Job No. of the model.

Job No. is shown just above the service manual number at the lower right of the service manual of each model.